

Assembly instructions




Item number: 2-490-0

Package includes:


- Rear panel
- Left side panel
- Right side panel
- Bottom plate
- Front panel
- Lid assembly
- Bag lock bracket
- Fasteners

1. Start with raising the rear panel upright. Fit the left and right side panel so that the angled board covers the joist of the back panel.

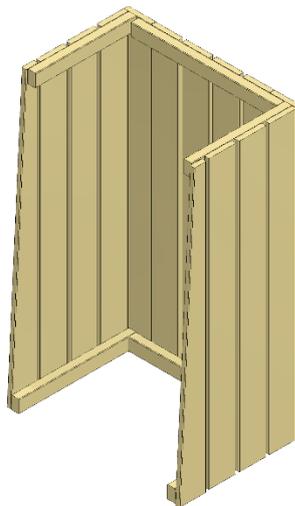


NOTE: The sloped board of the side panels should be facing forwards.


2. Mount the bottom plate on top of the lower joist of the rear, left and right-side panels. The joist fitted to the bottom plate should be facing forwards. Secure the bottom plate with 6 of the screws included.

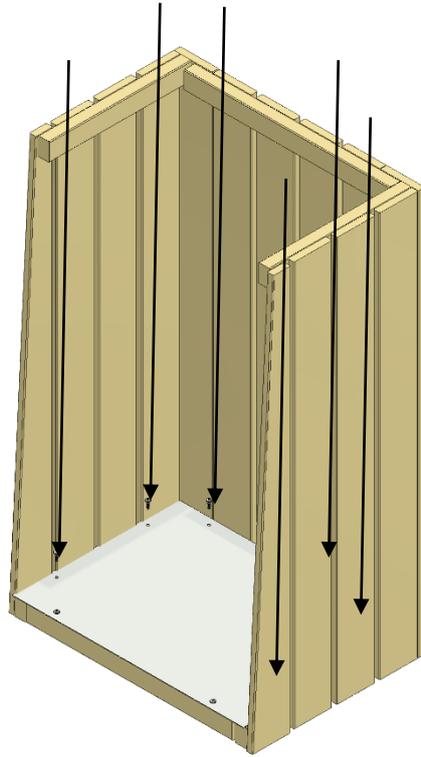

3. Mount the bag lock bracket to the rear panel with screws provided.

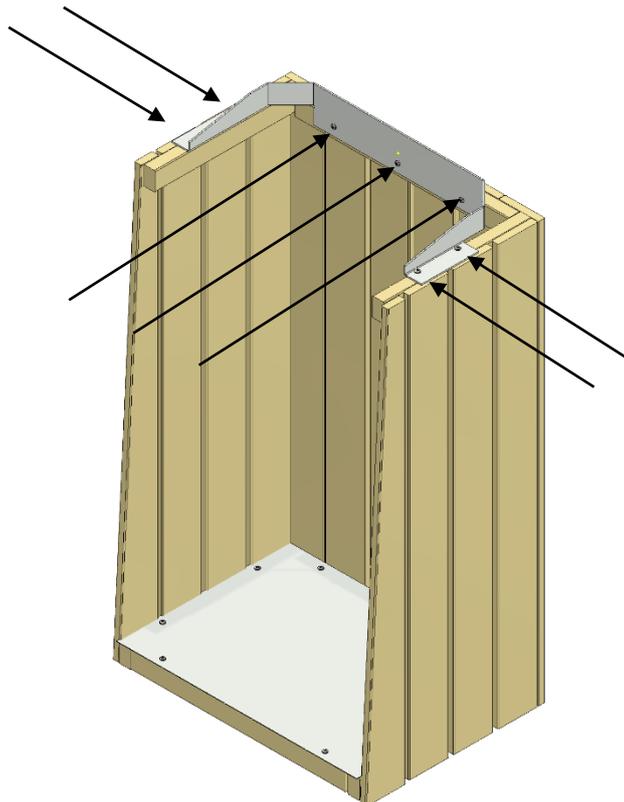

4 Get the lid assembly and attach to the back side of the rear panel with screws provided.

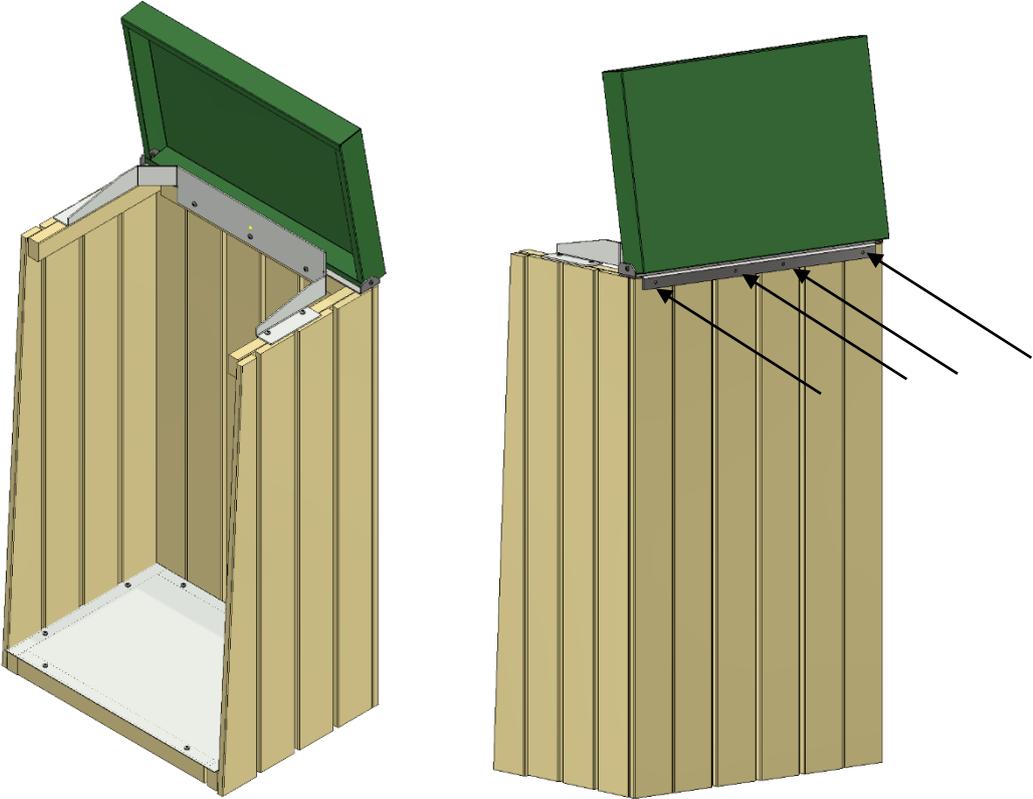

5 Hook the front panel on to the brackets fitted on the right and left side panels.

