

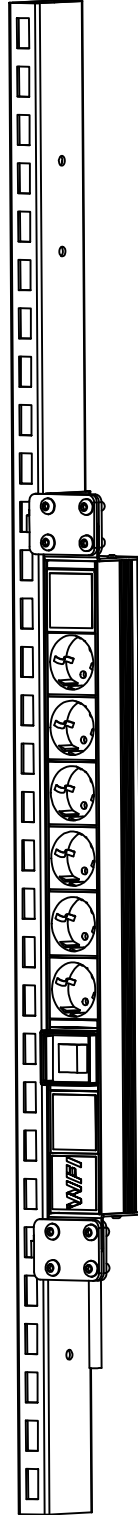



3-286

Power Bar Vertikal complete 480 mm

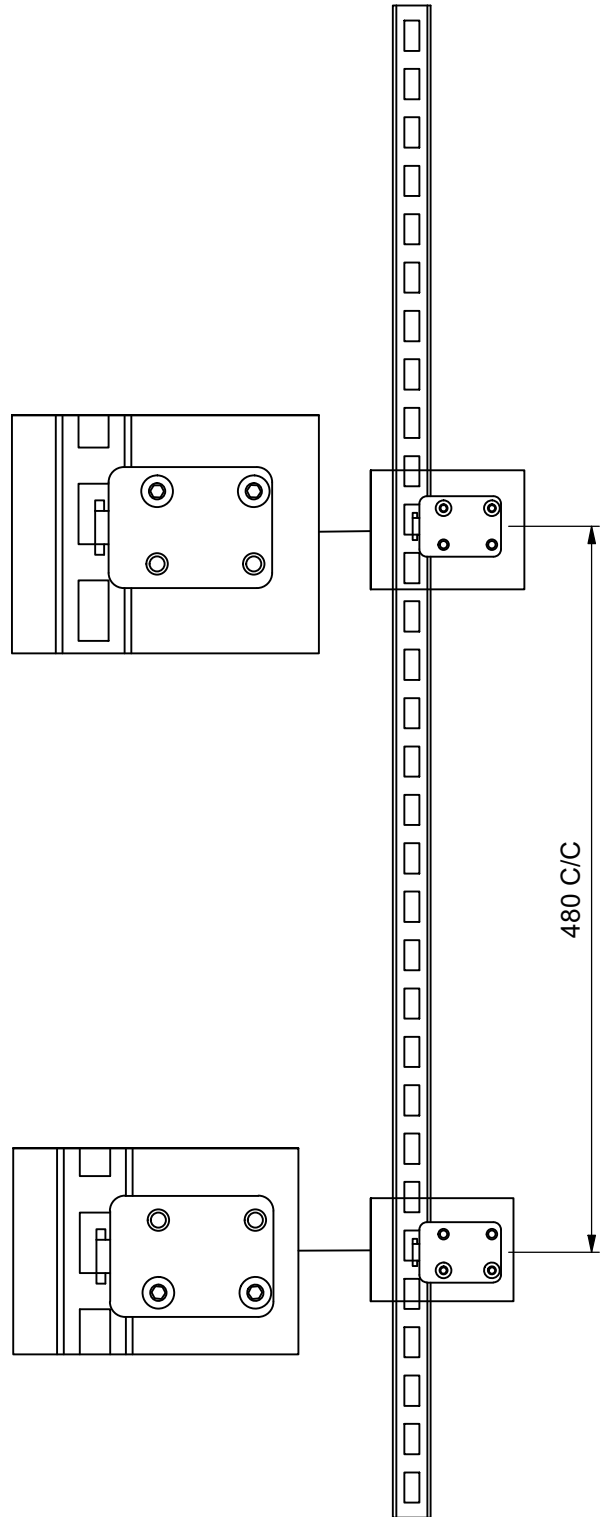

Pre-assemble the bracket
(do not tighten completely)

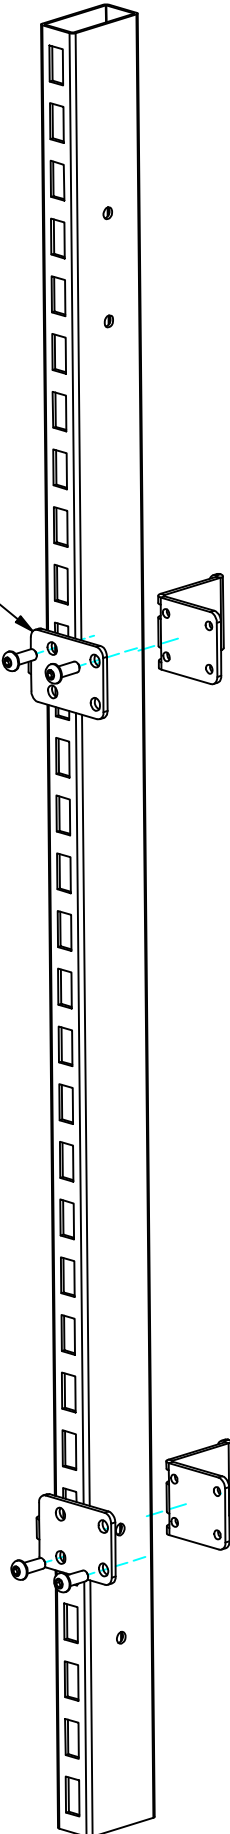

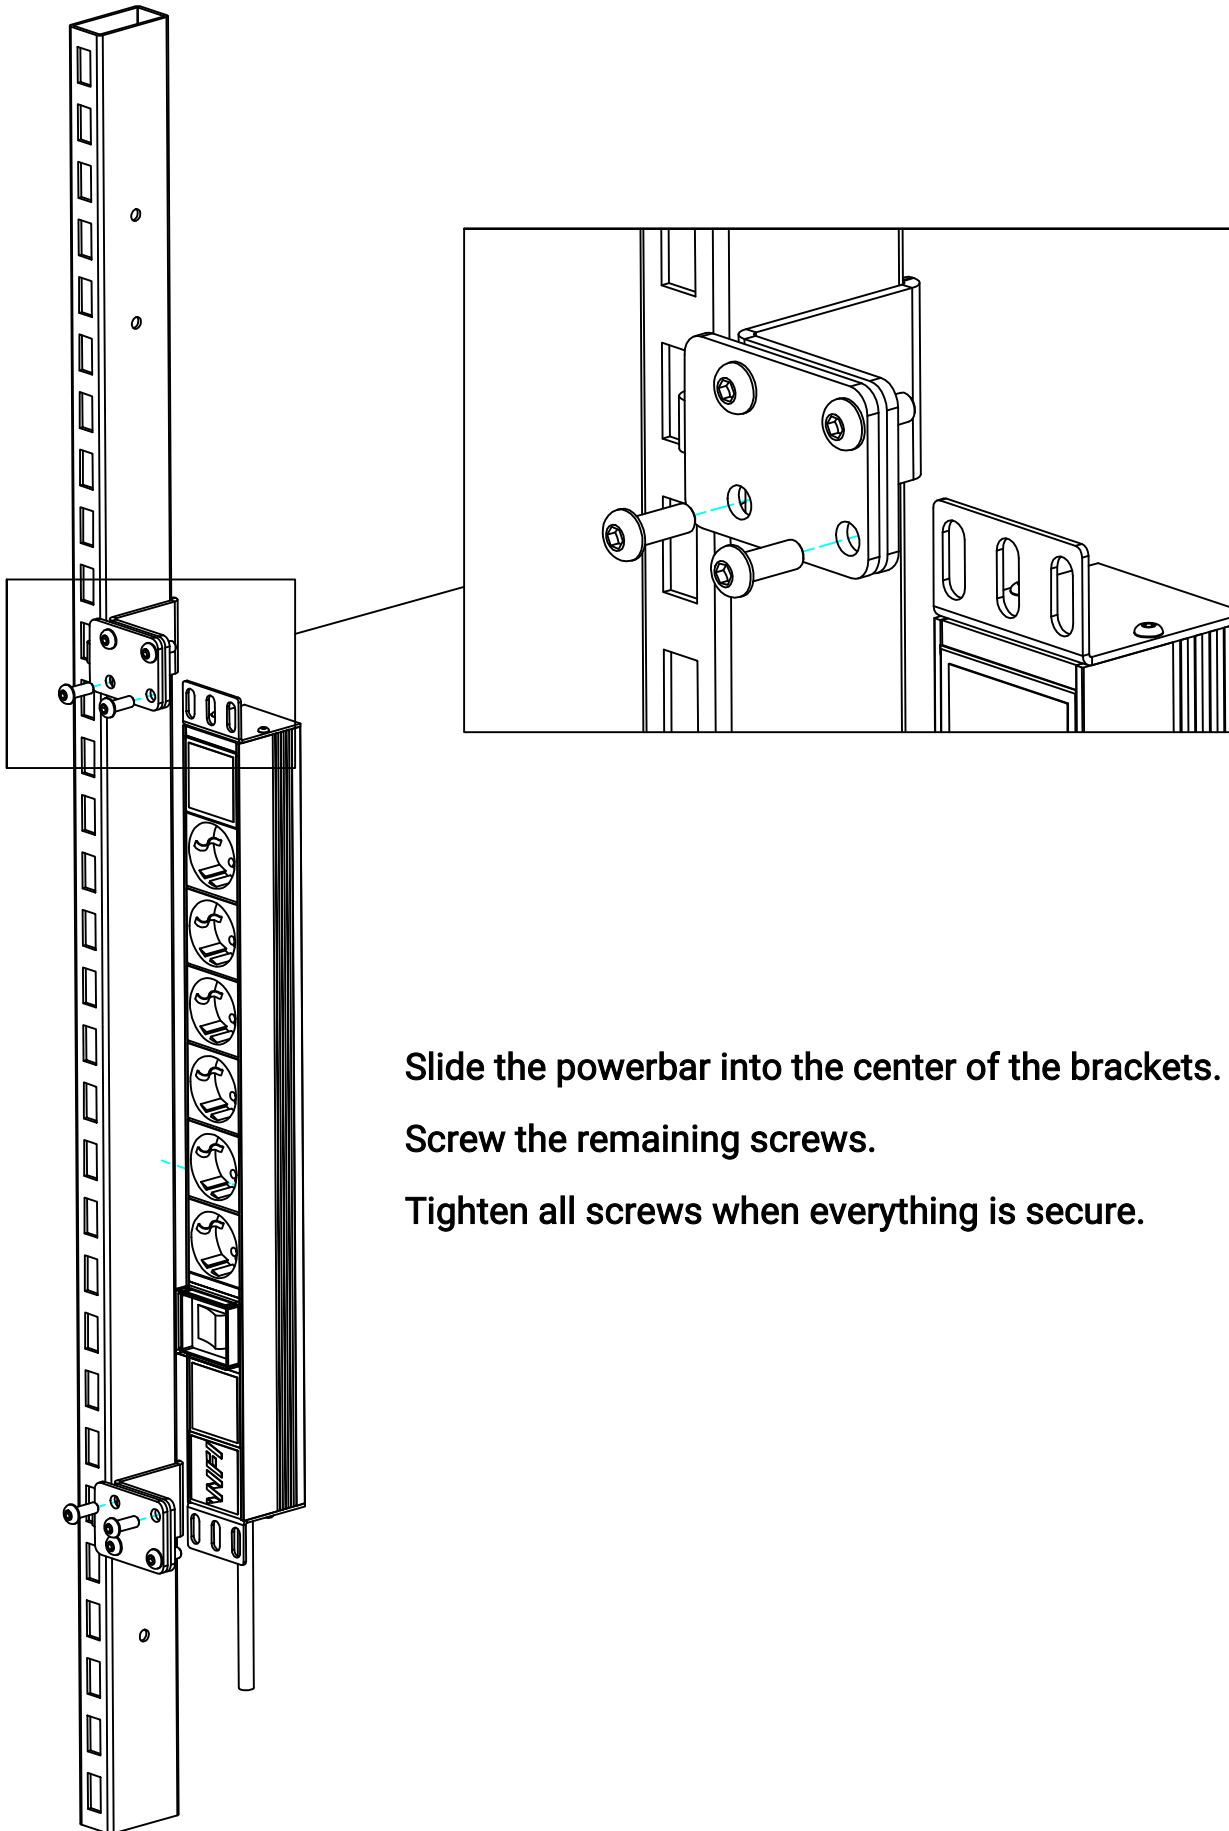

Slide the powerbar into the center of the brackets.

Screw the remaining screws.

Tighten all screws when everything is secure.

