





5-578-302-2

IT-Vagn Power pack


Premium

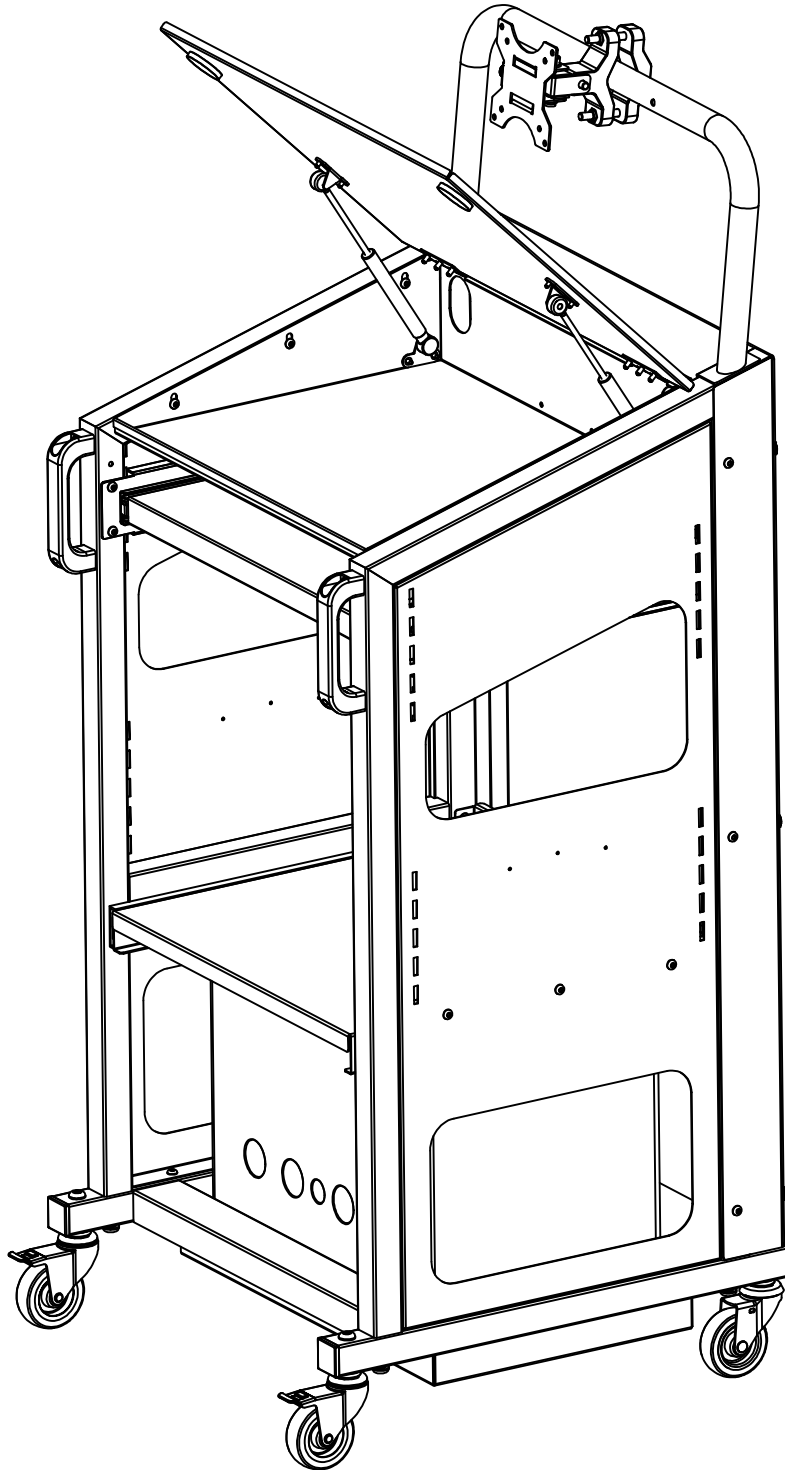

1

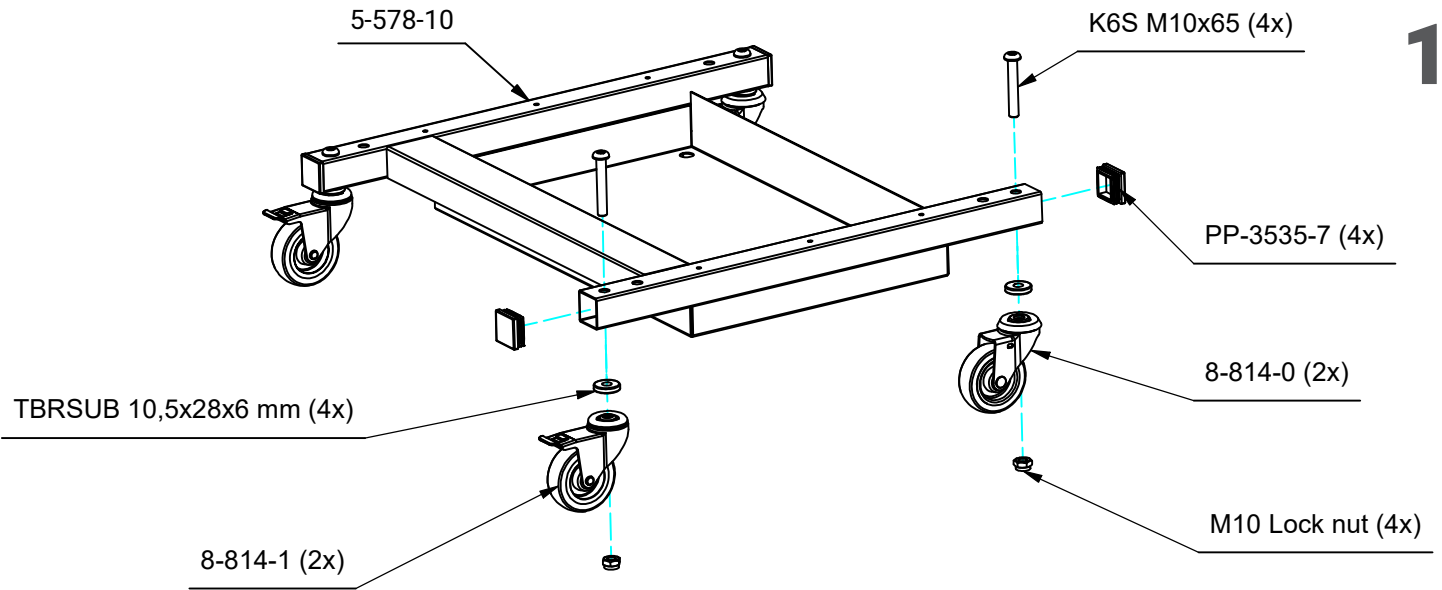



2

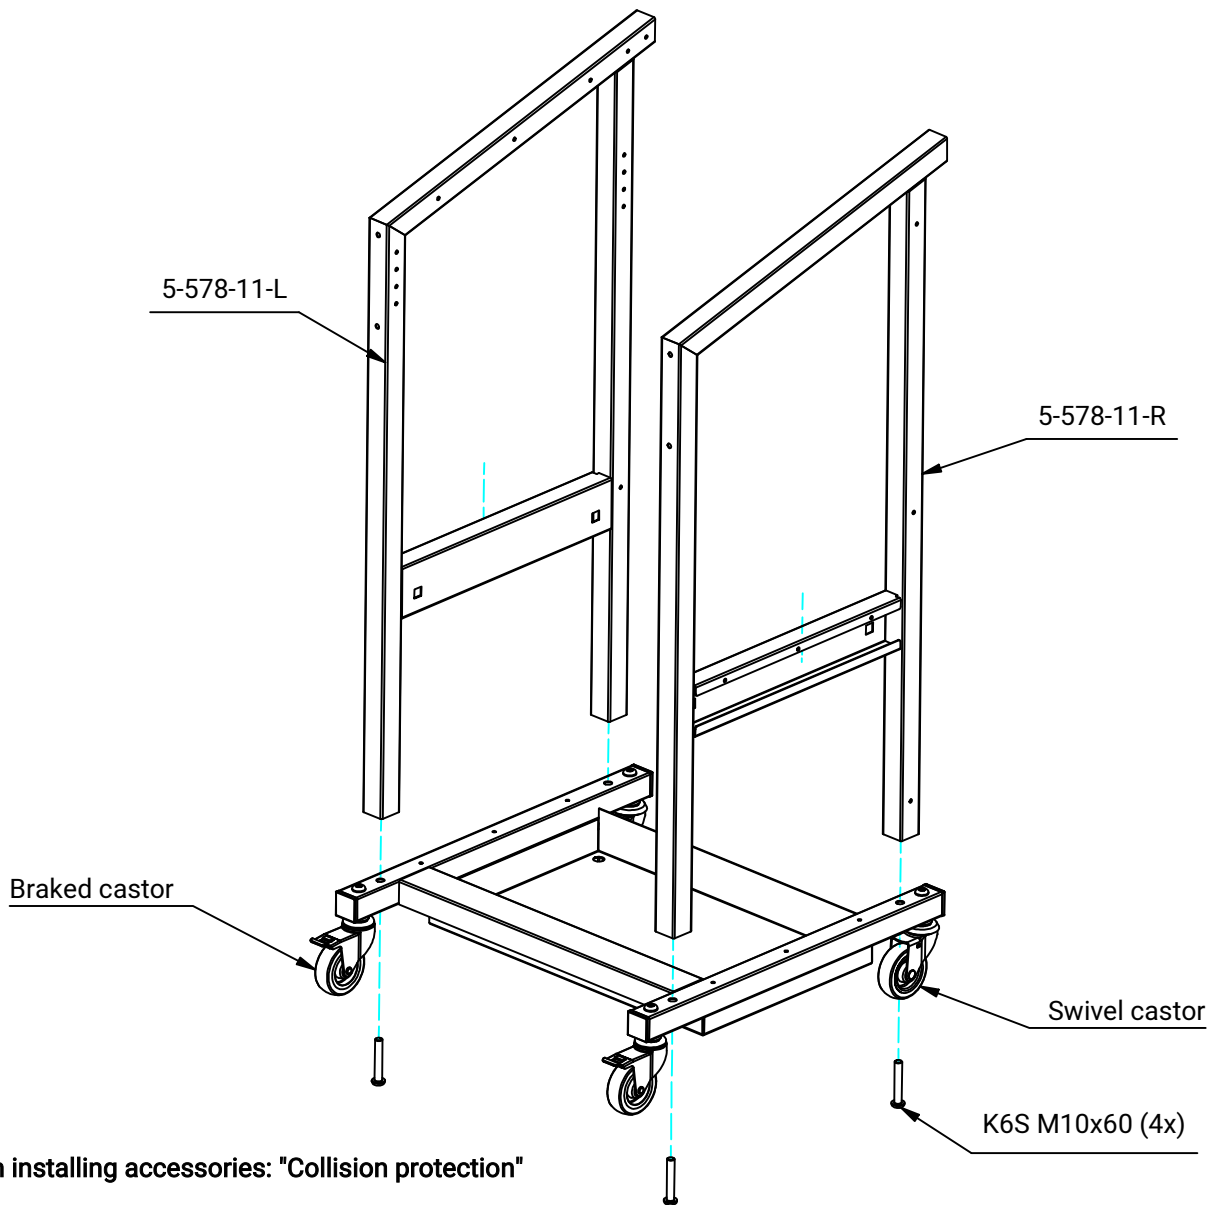


When installing accessories: "Collision protection"
see steps 19




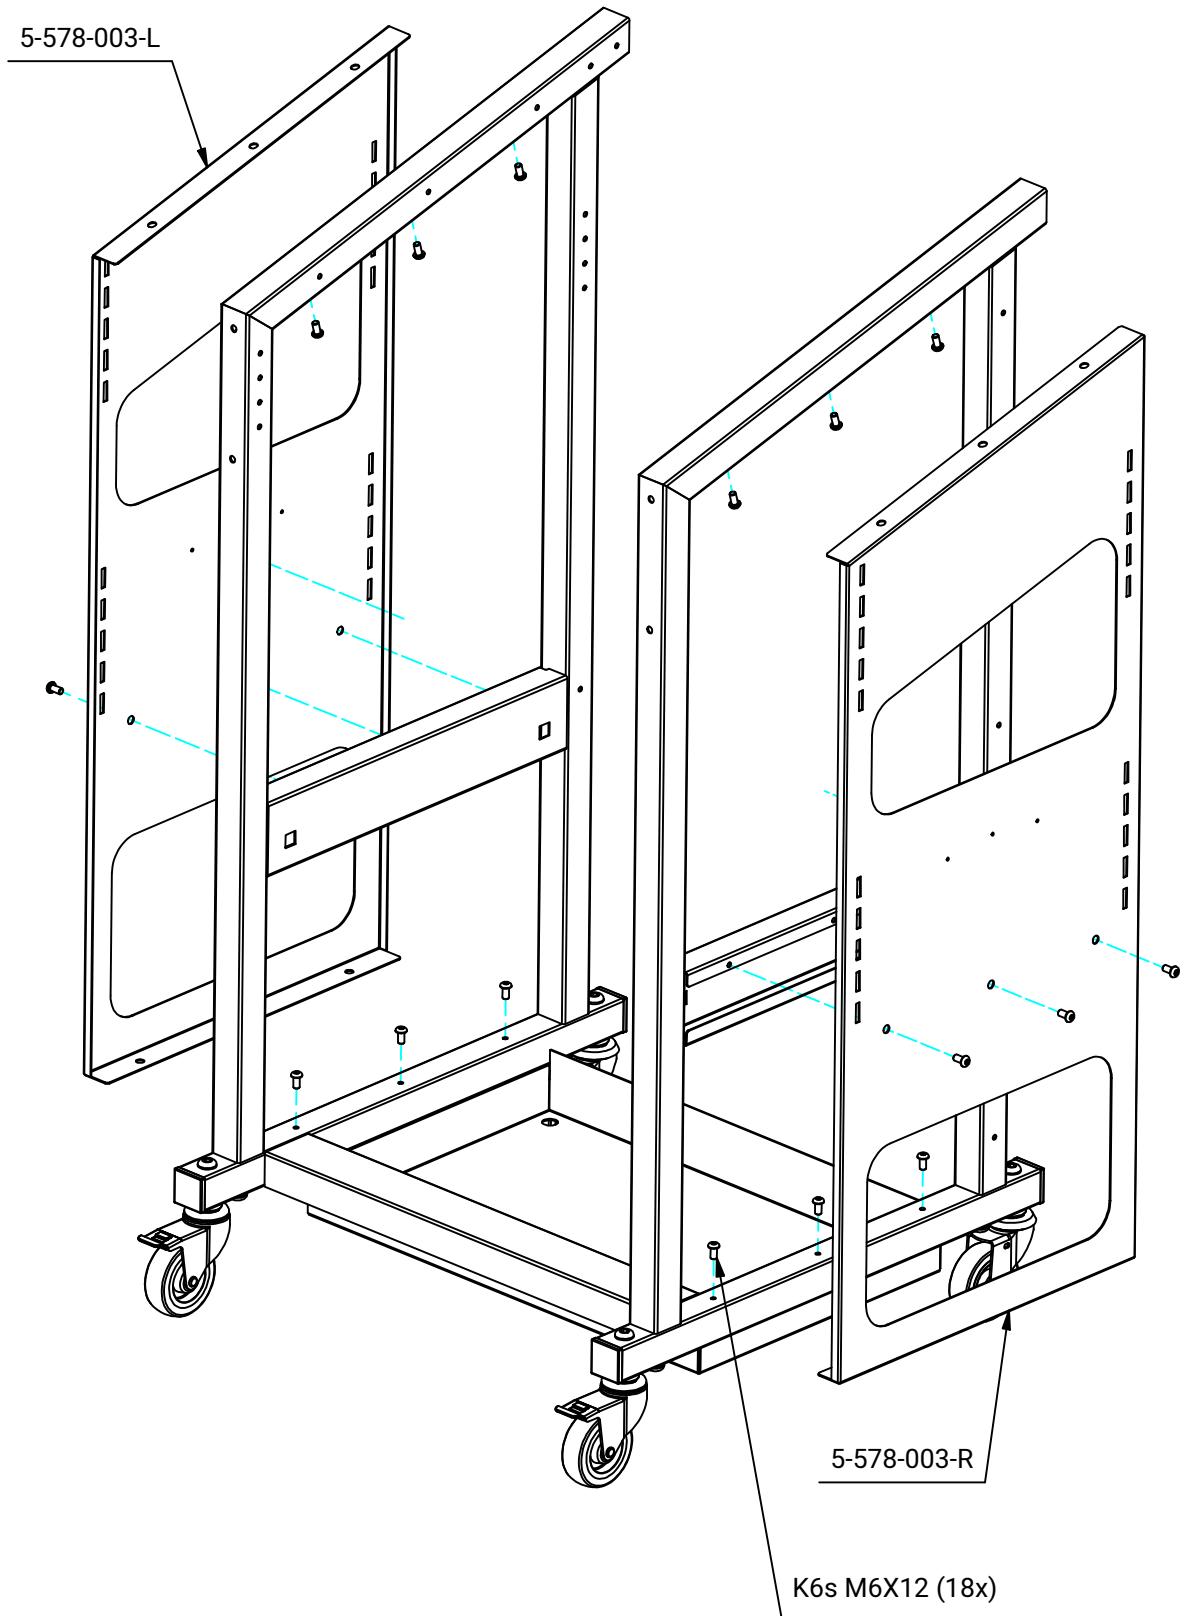

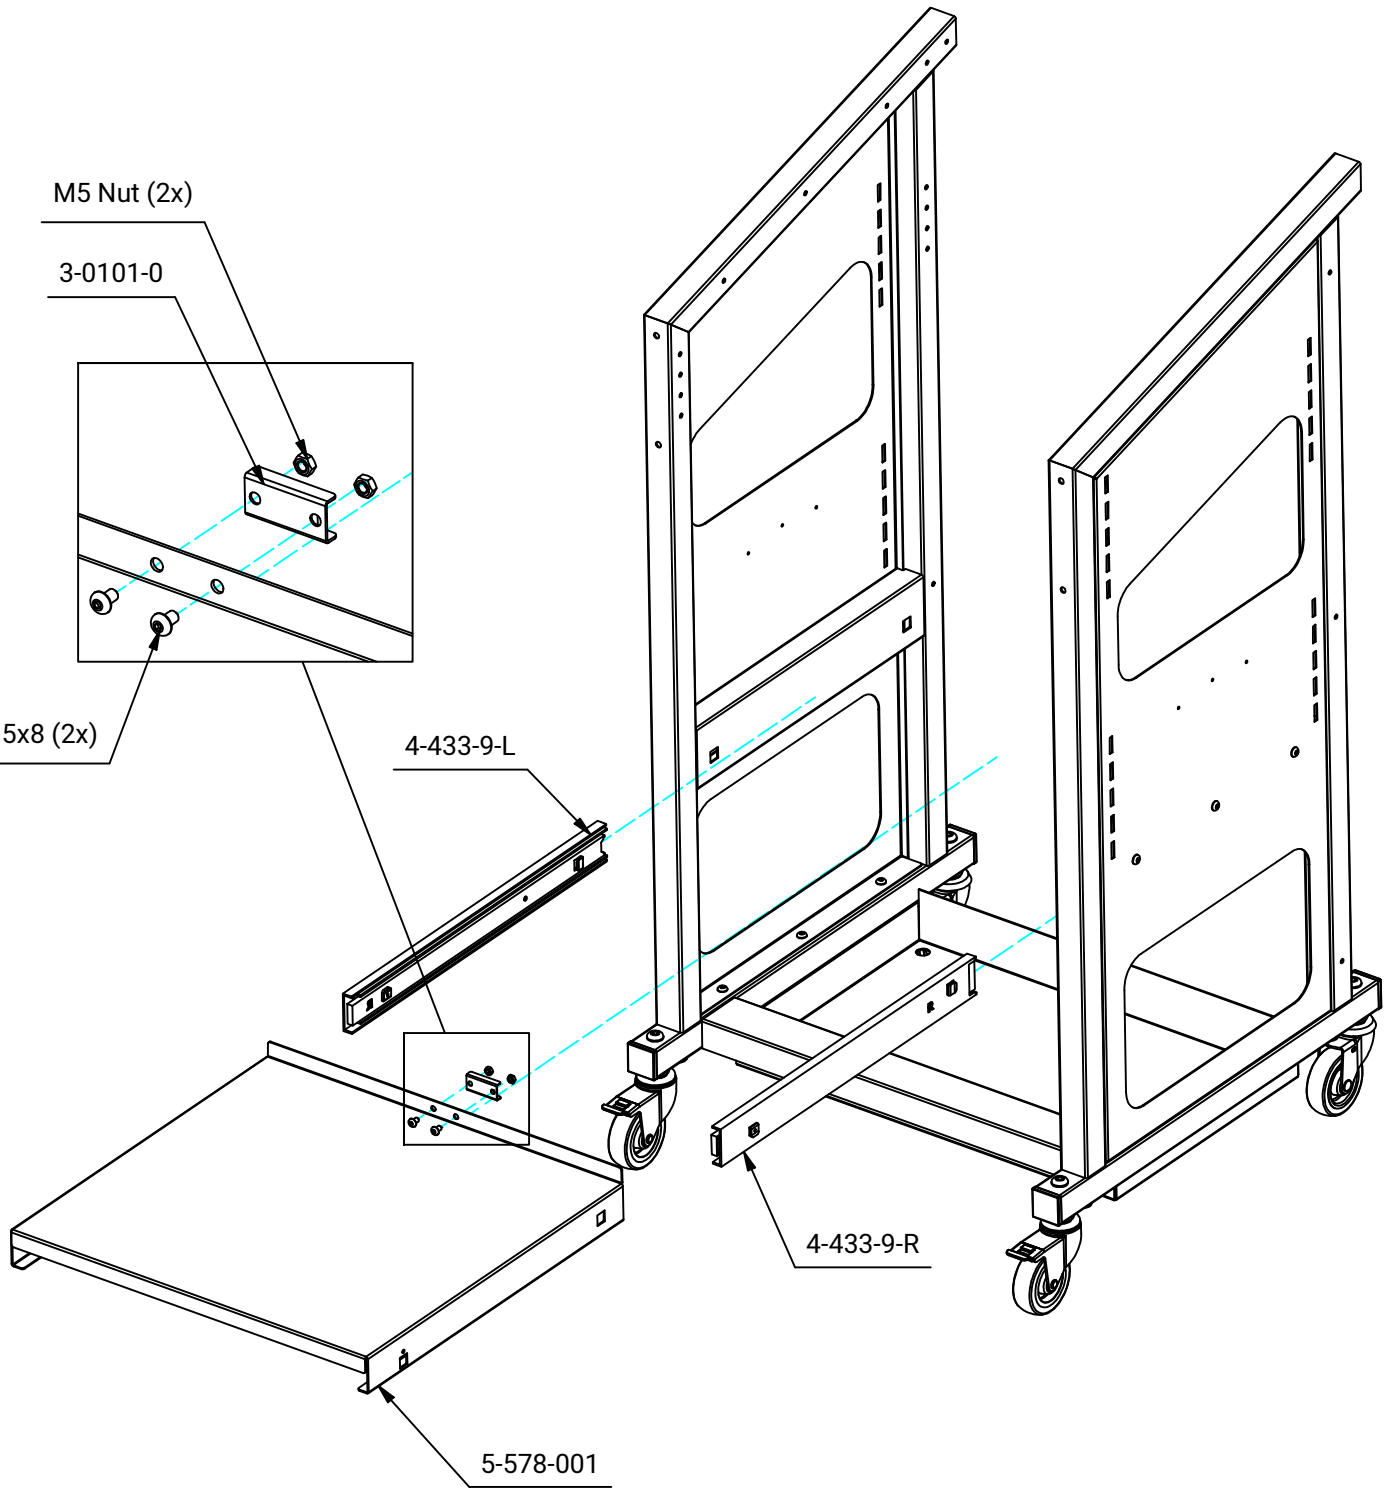




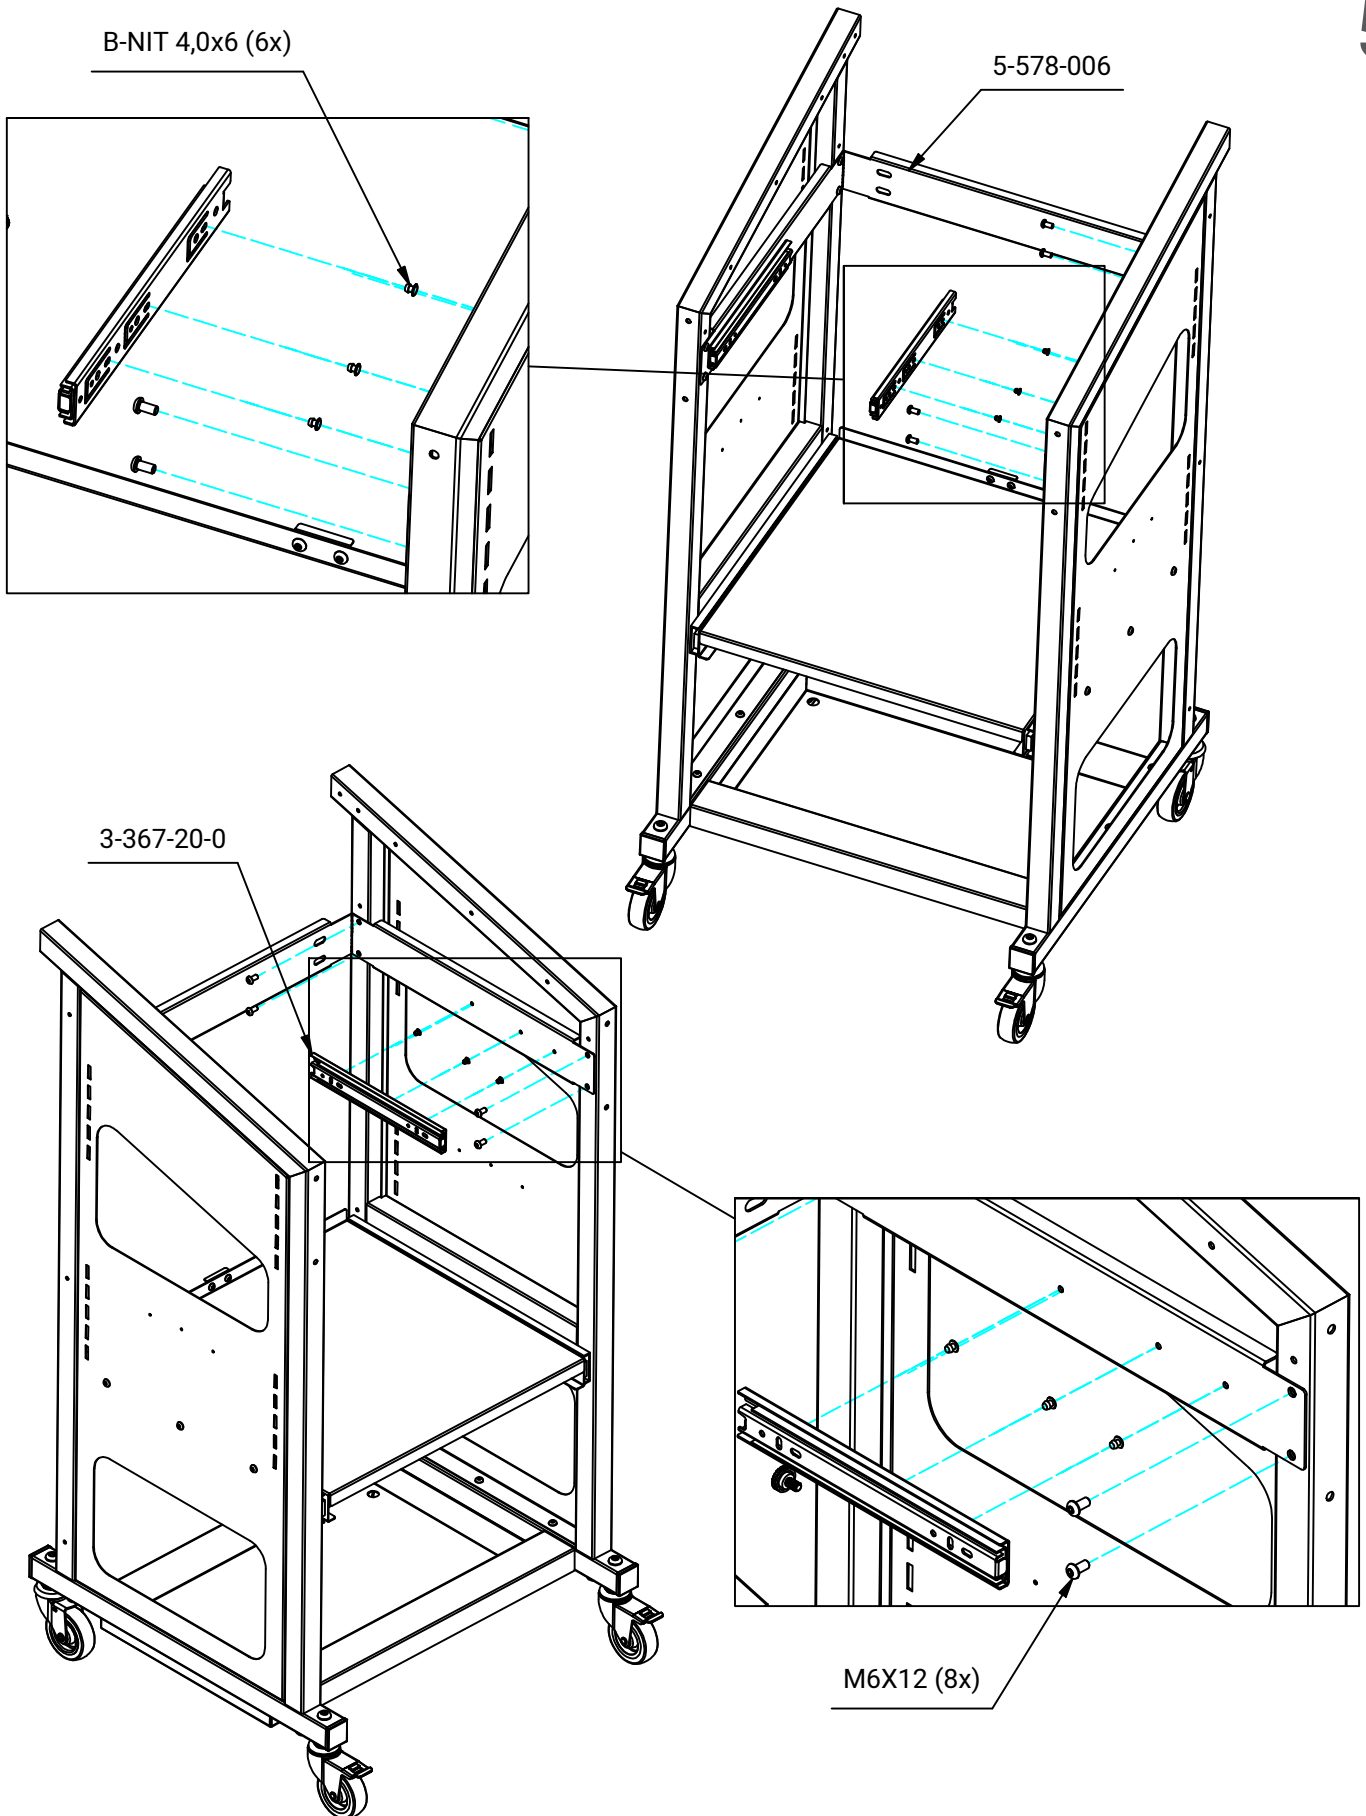



3-270-0 (Mounted with included screws)

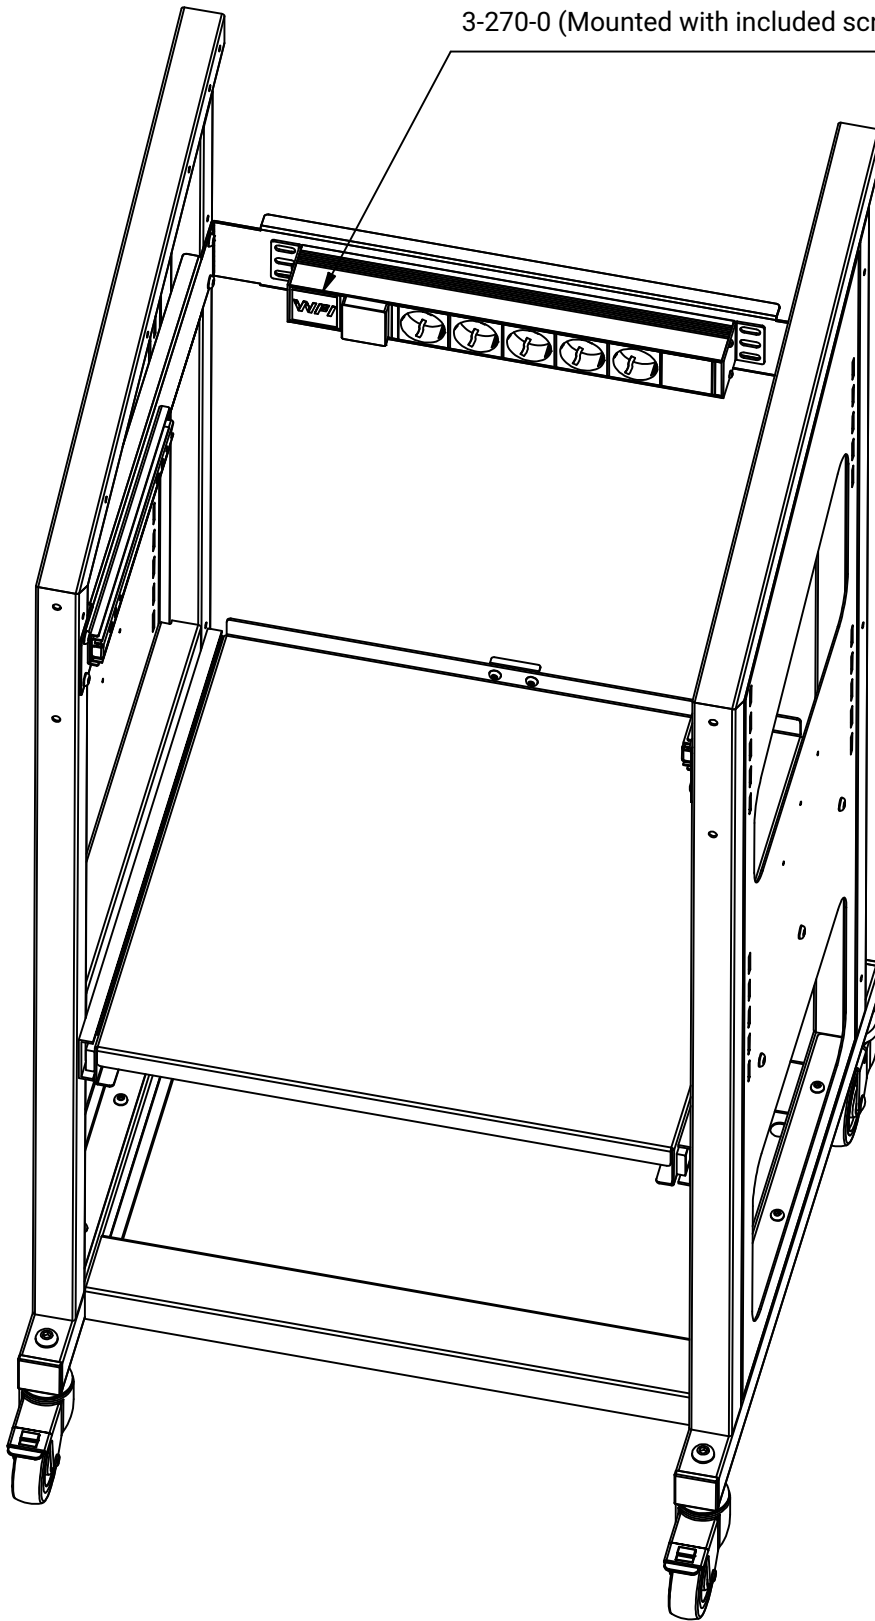



5-578-007

7

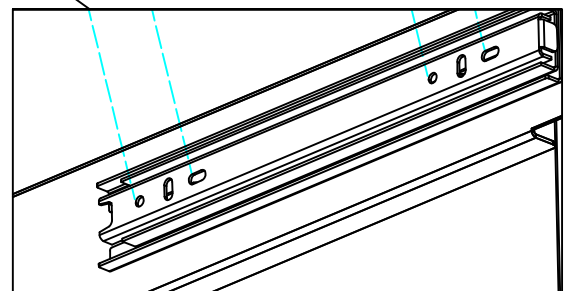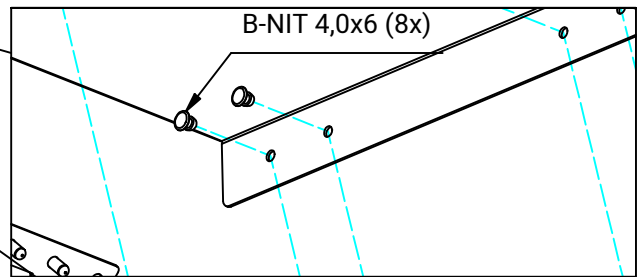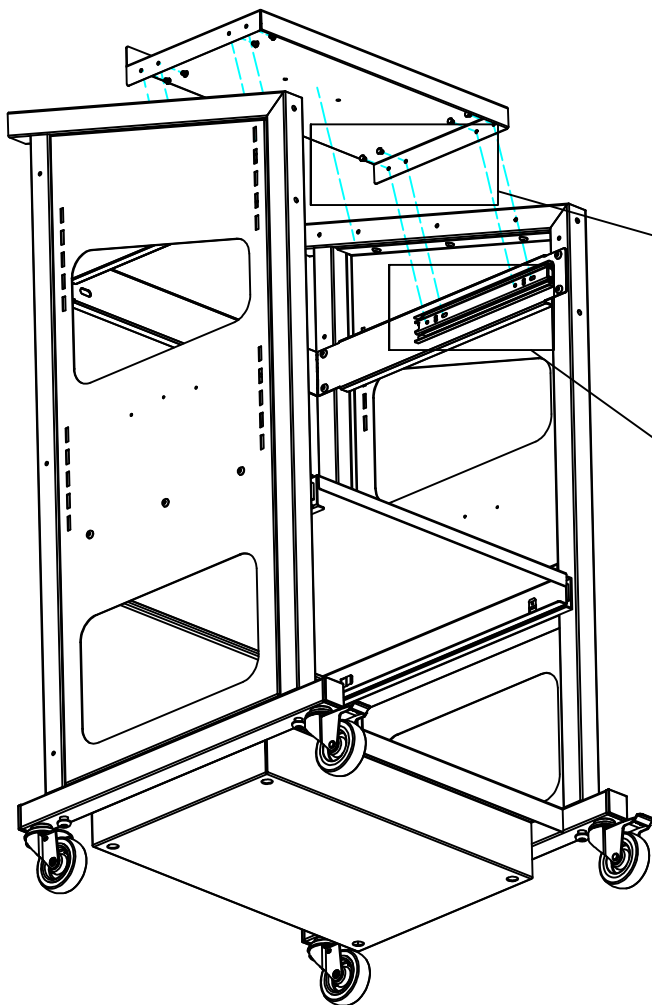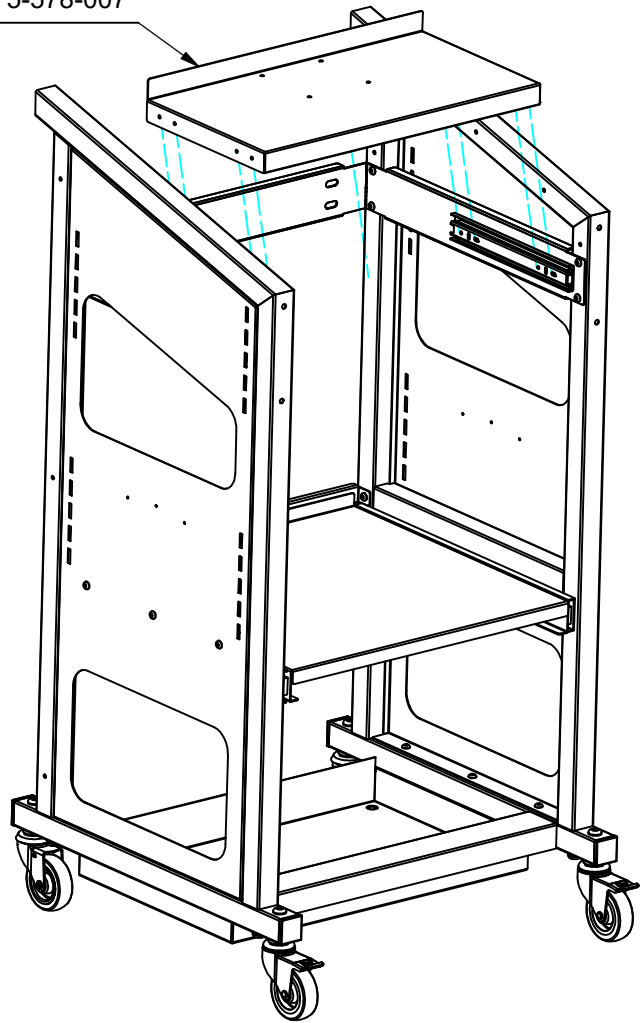


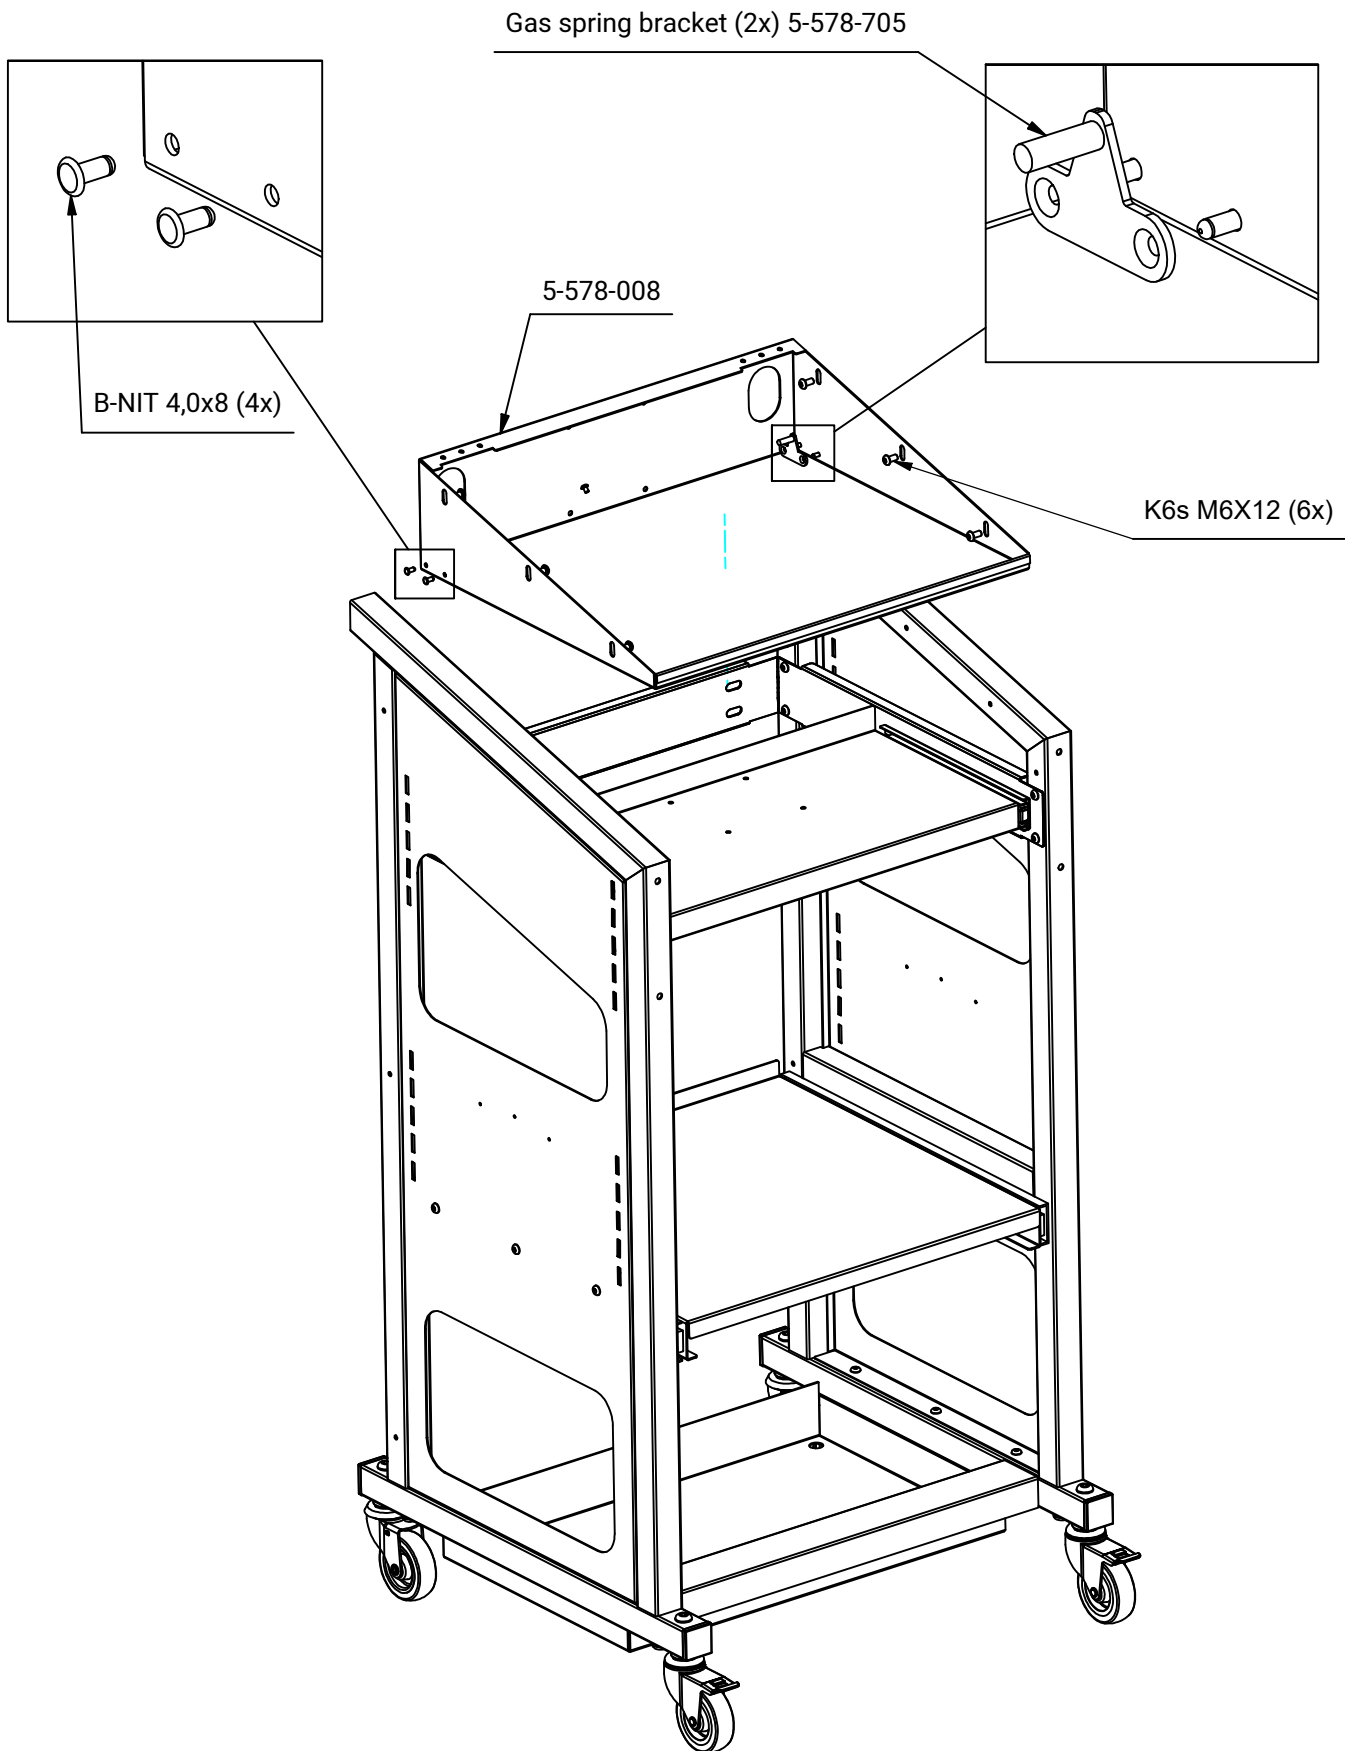

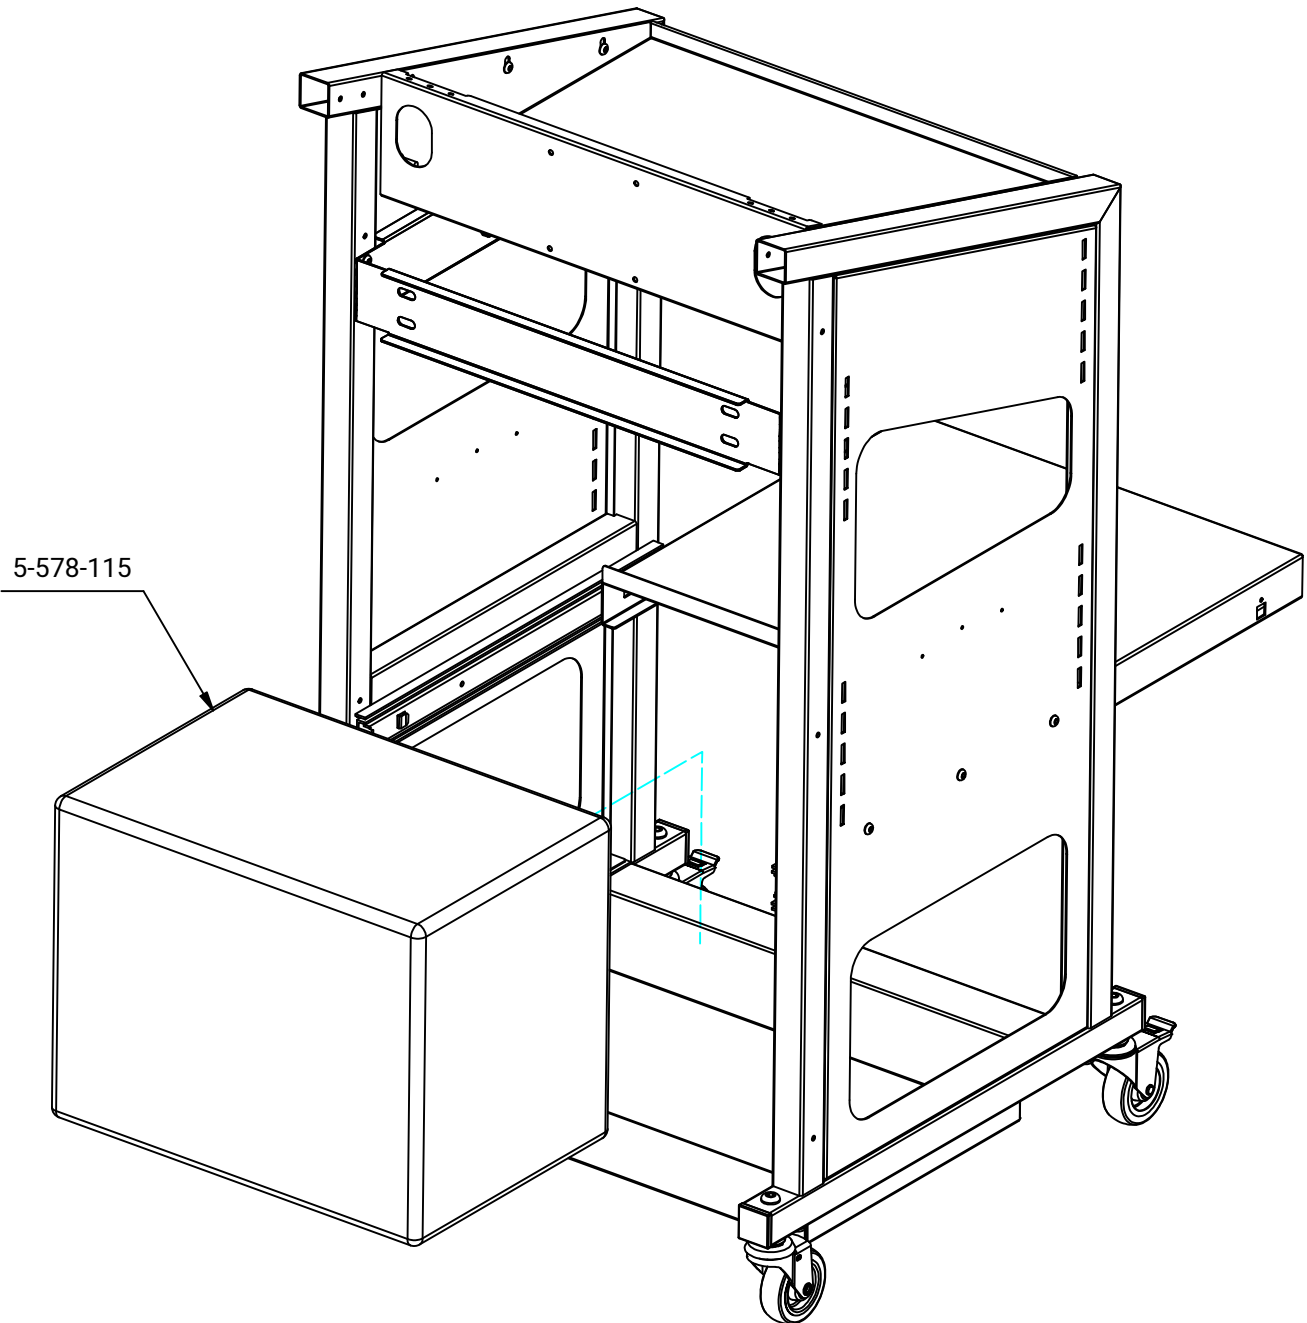



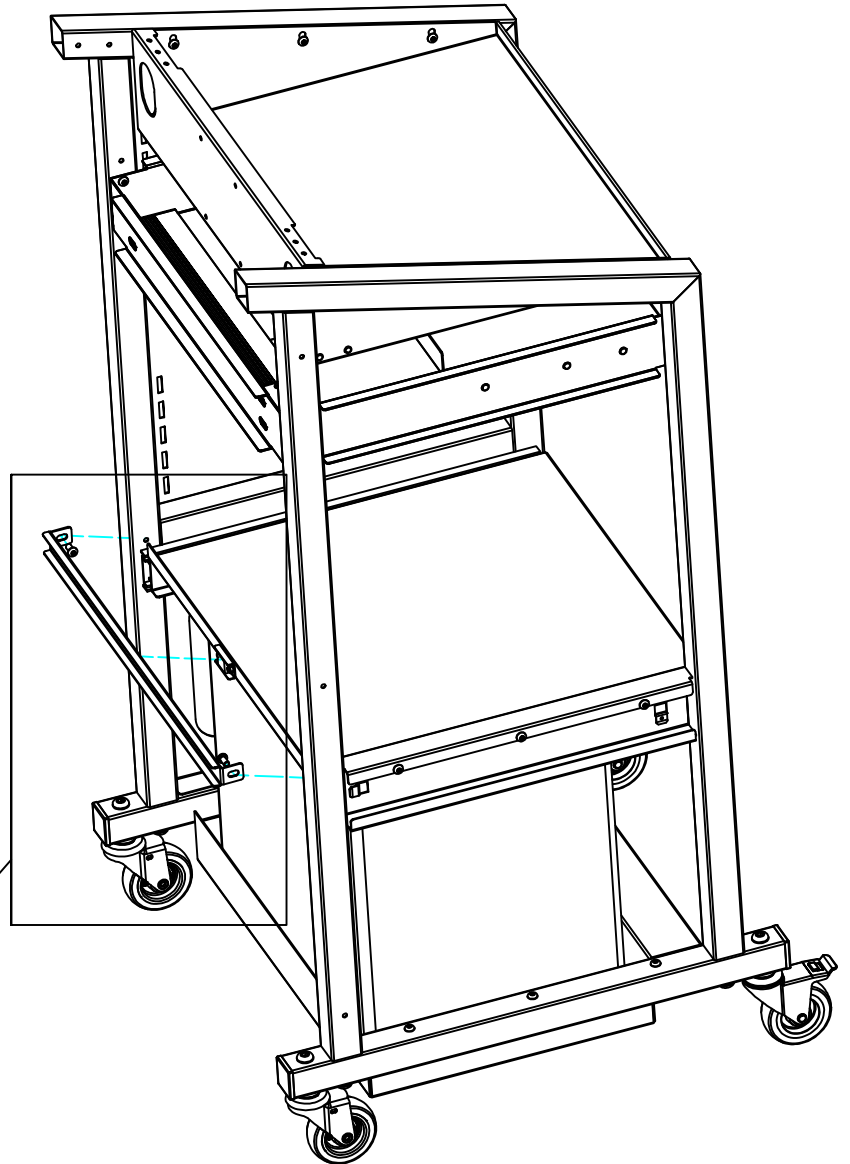




K6s M6X12 (2x)

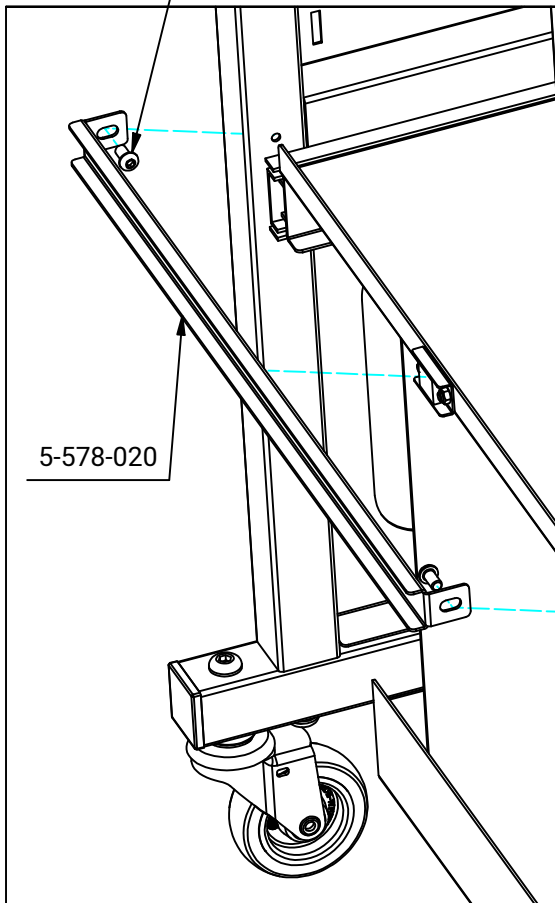


5-578-020



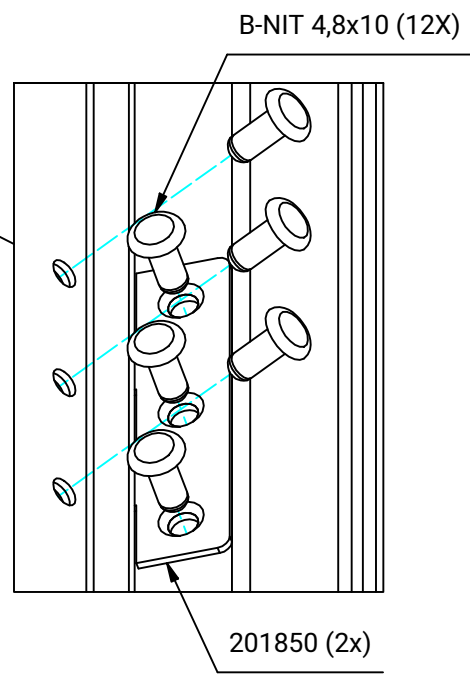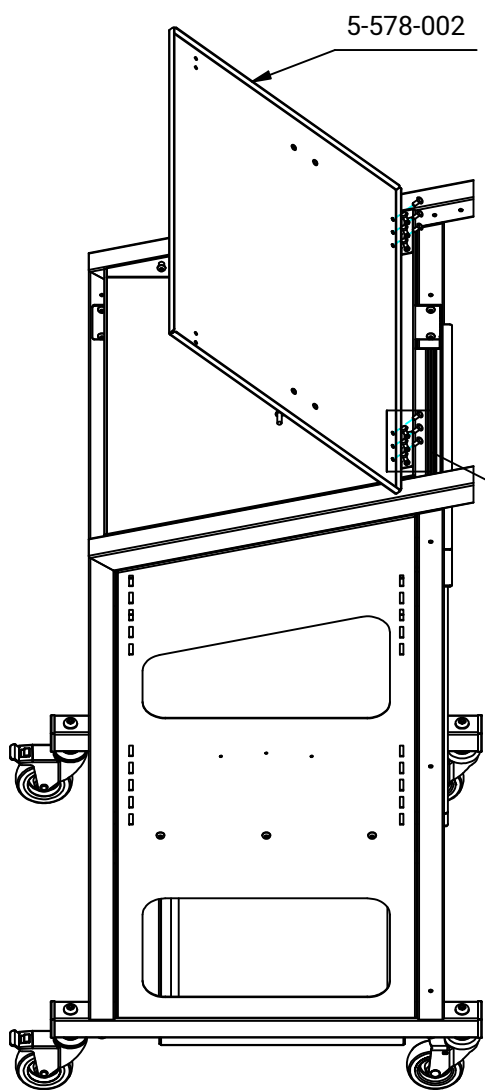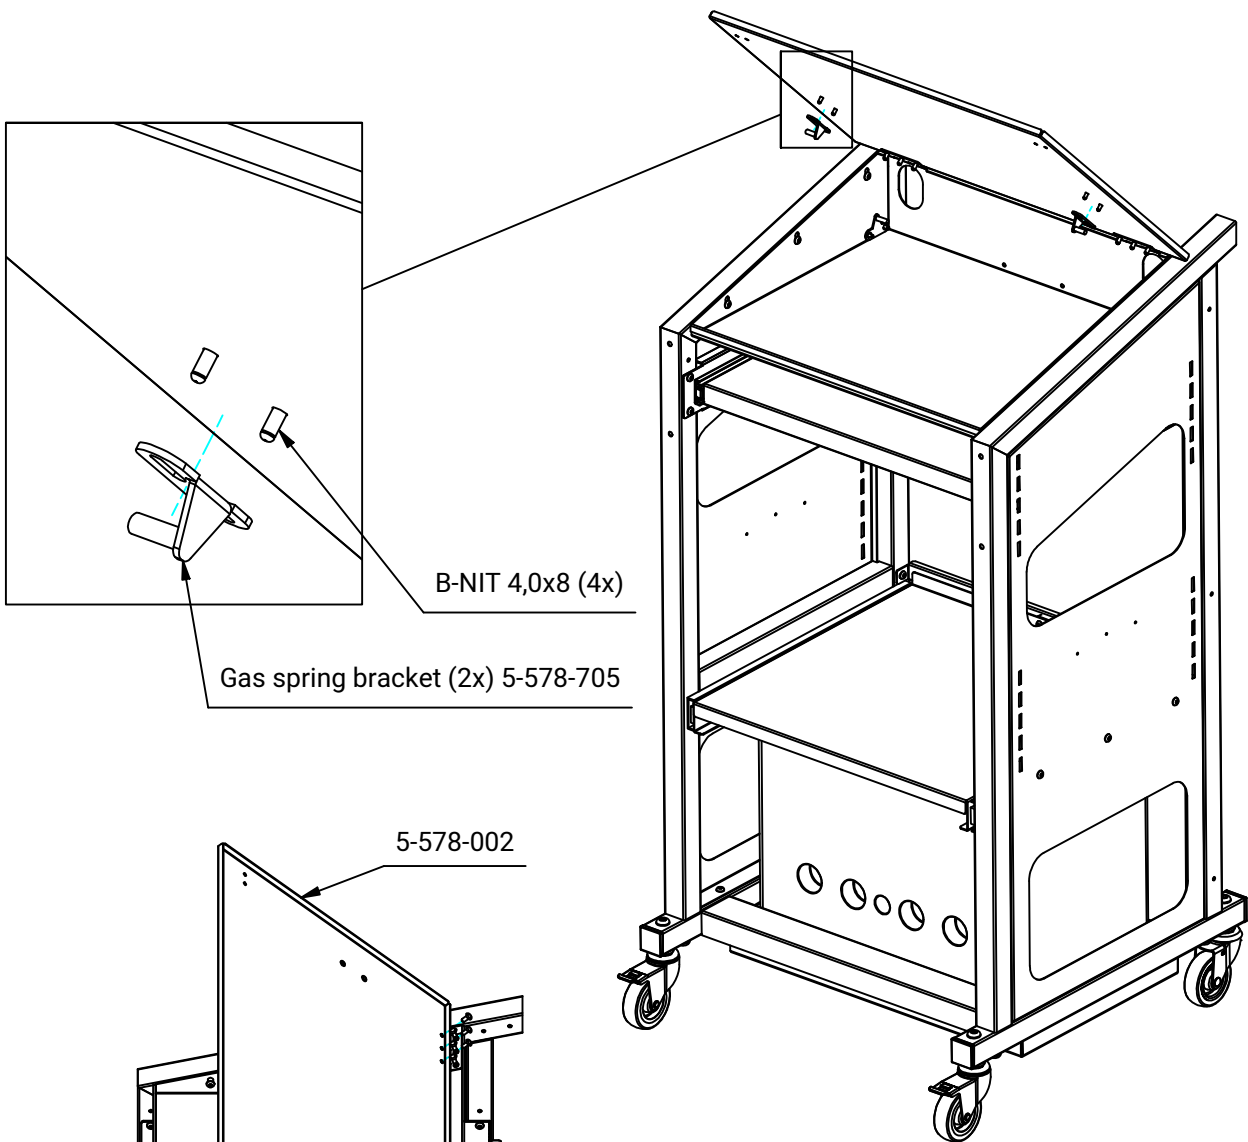

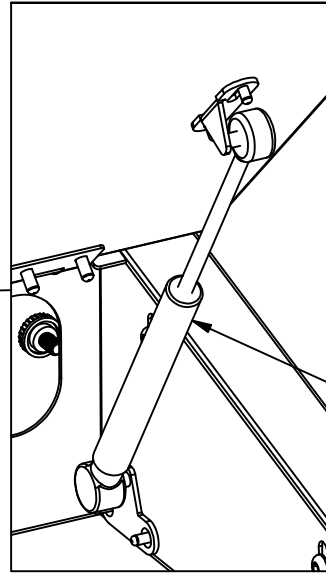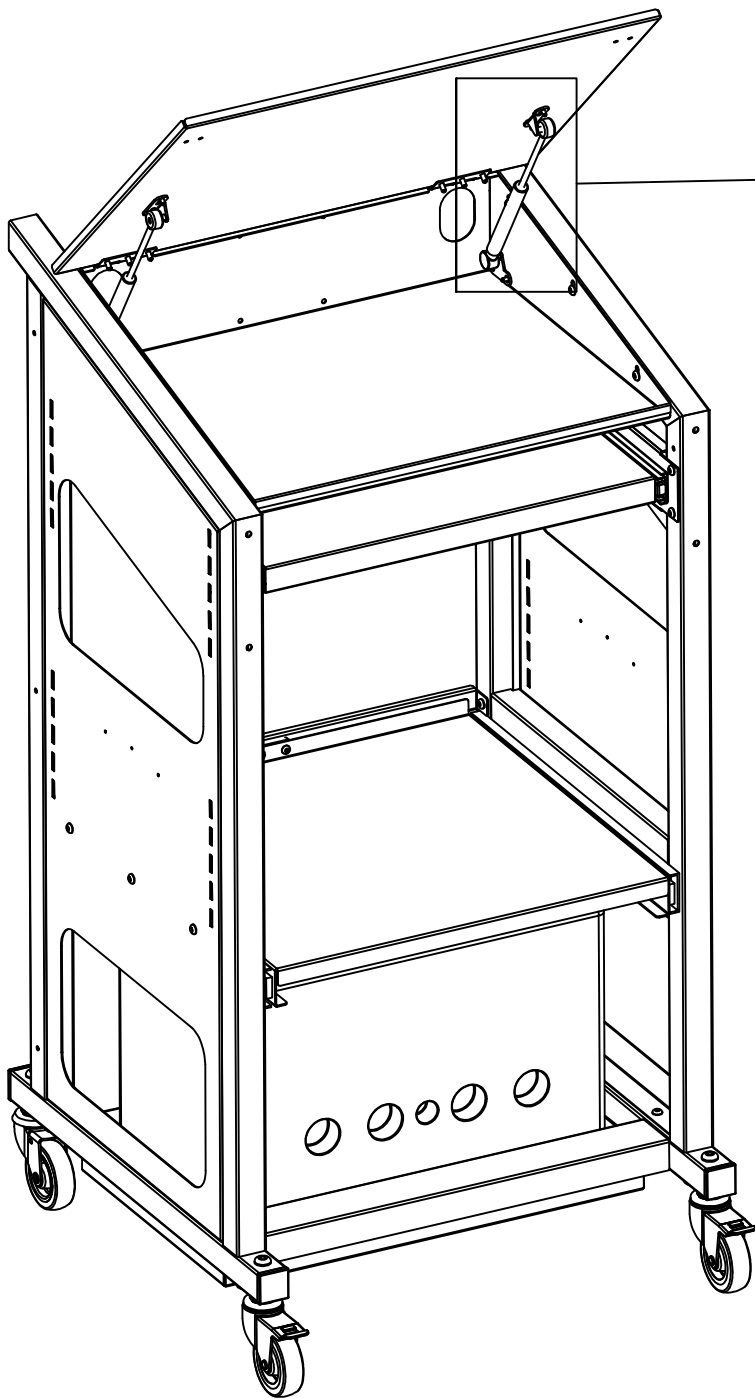


5-578-705

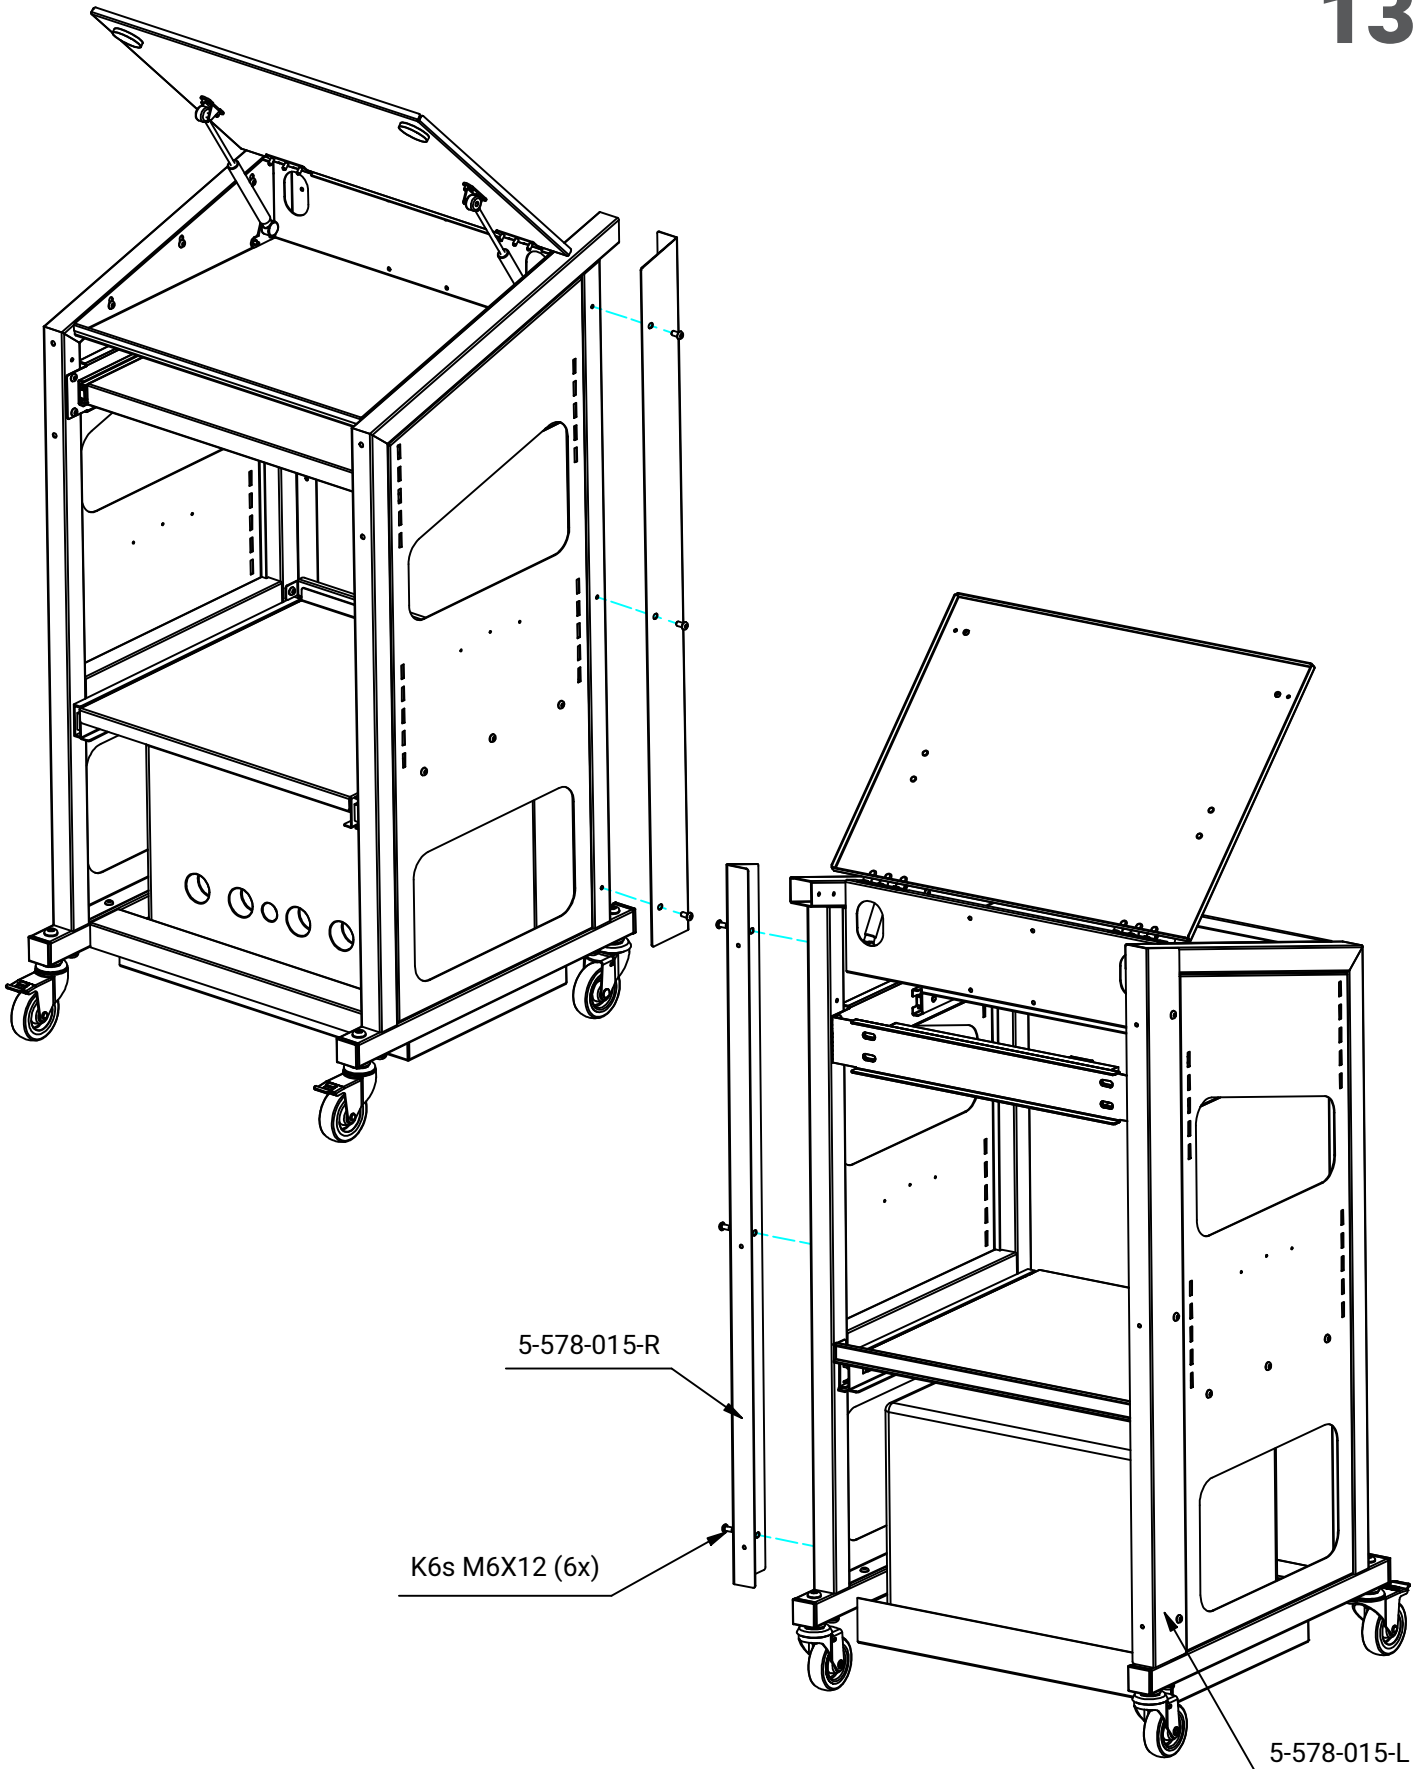


14

M4X6ZINCPL (2x)

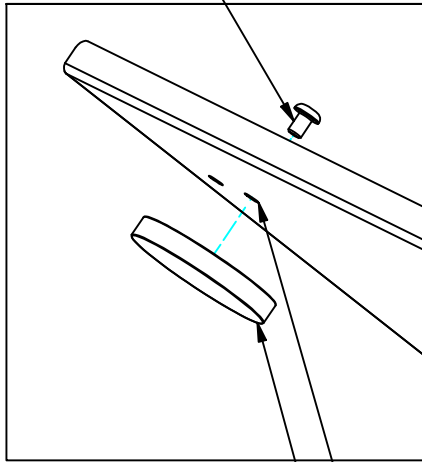


Use the inner hole


9-1601-206 (2x)

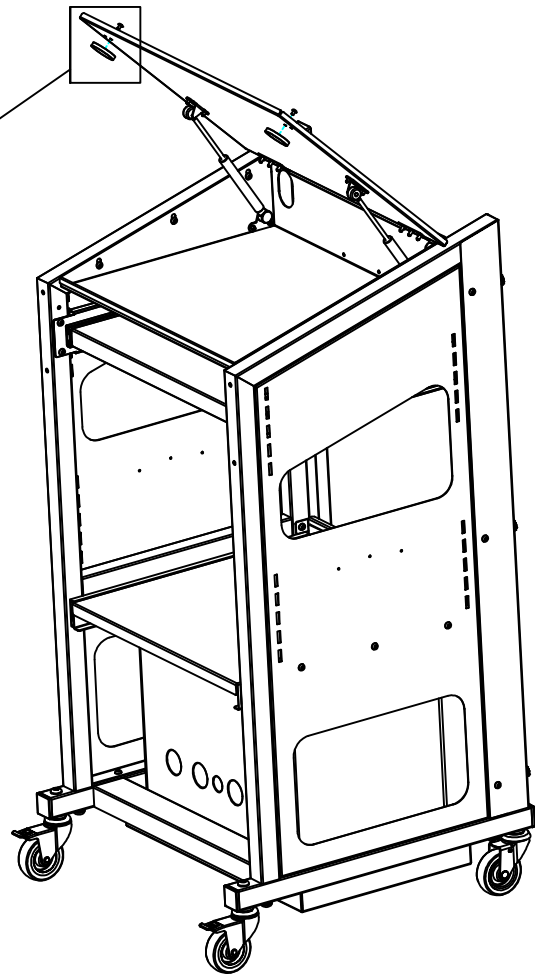

5-5250-001 (2x)

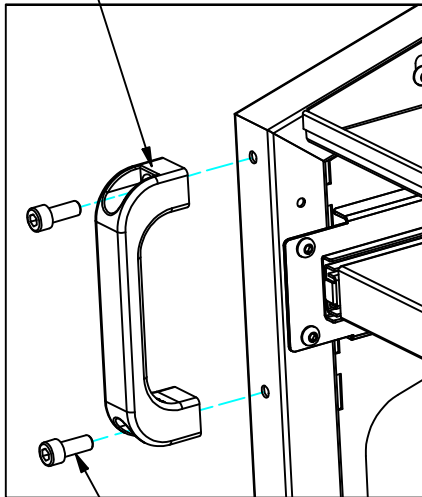


Mc6s M8X20 (4x)

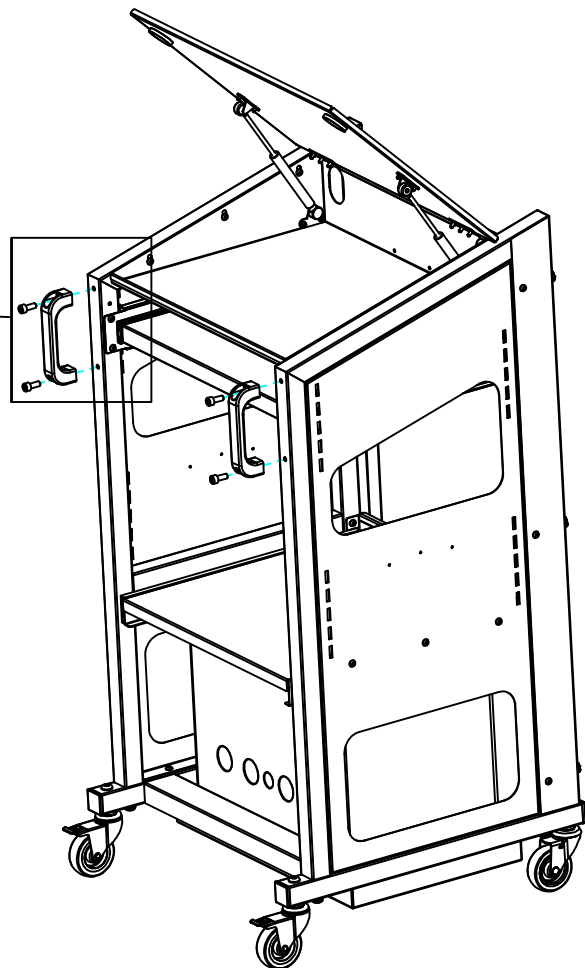


15




16

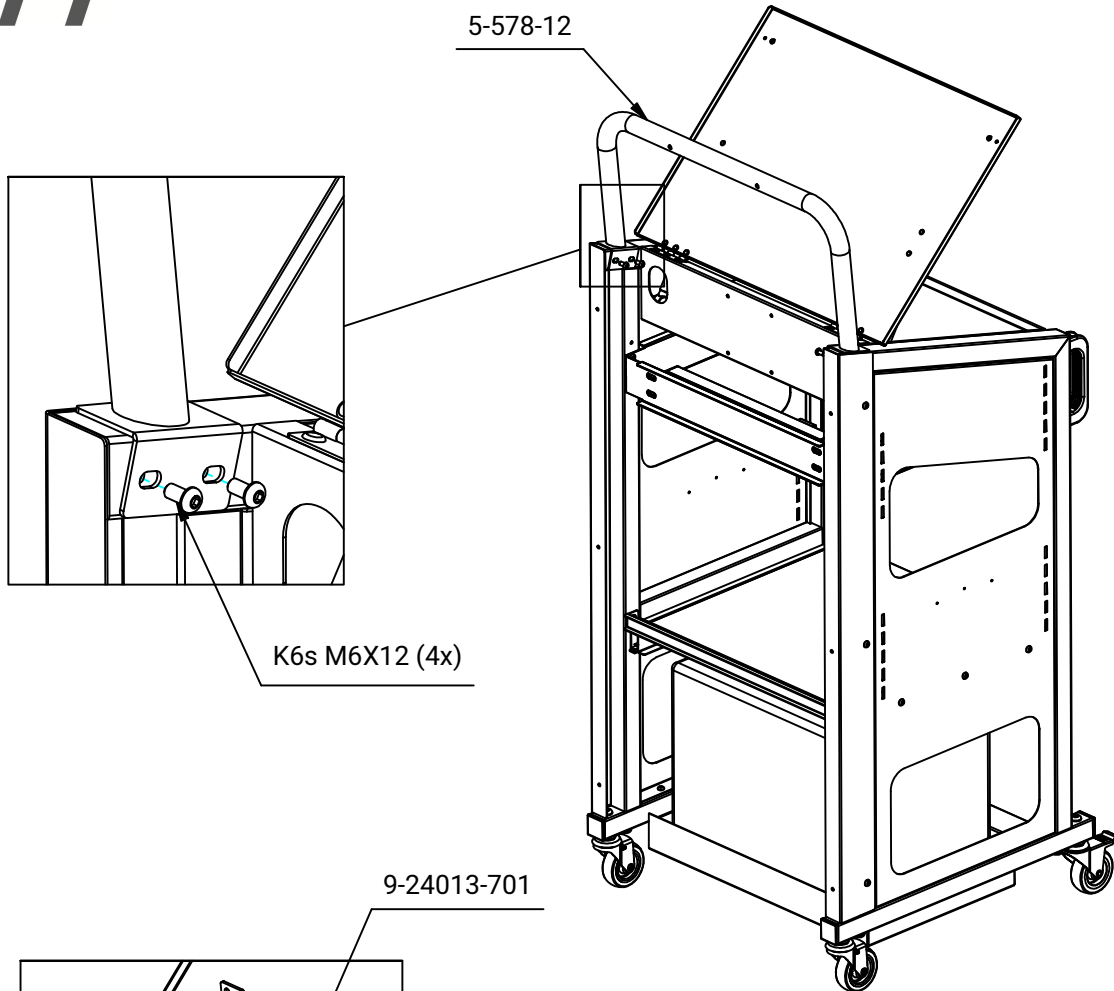


17

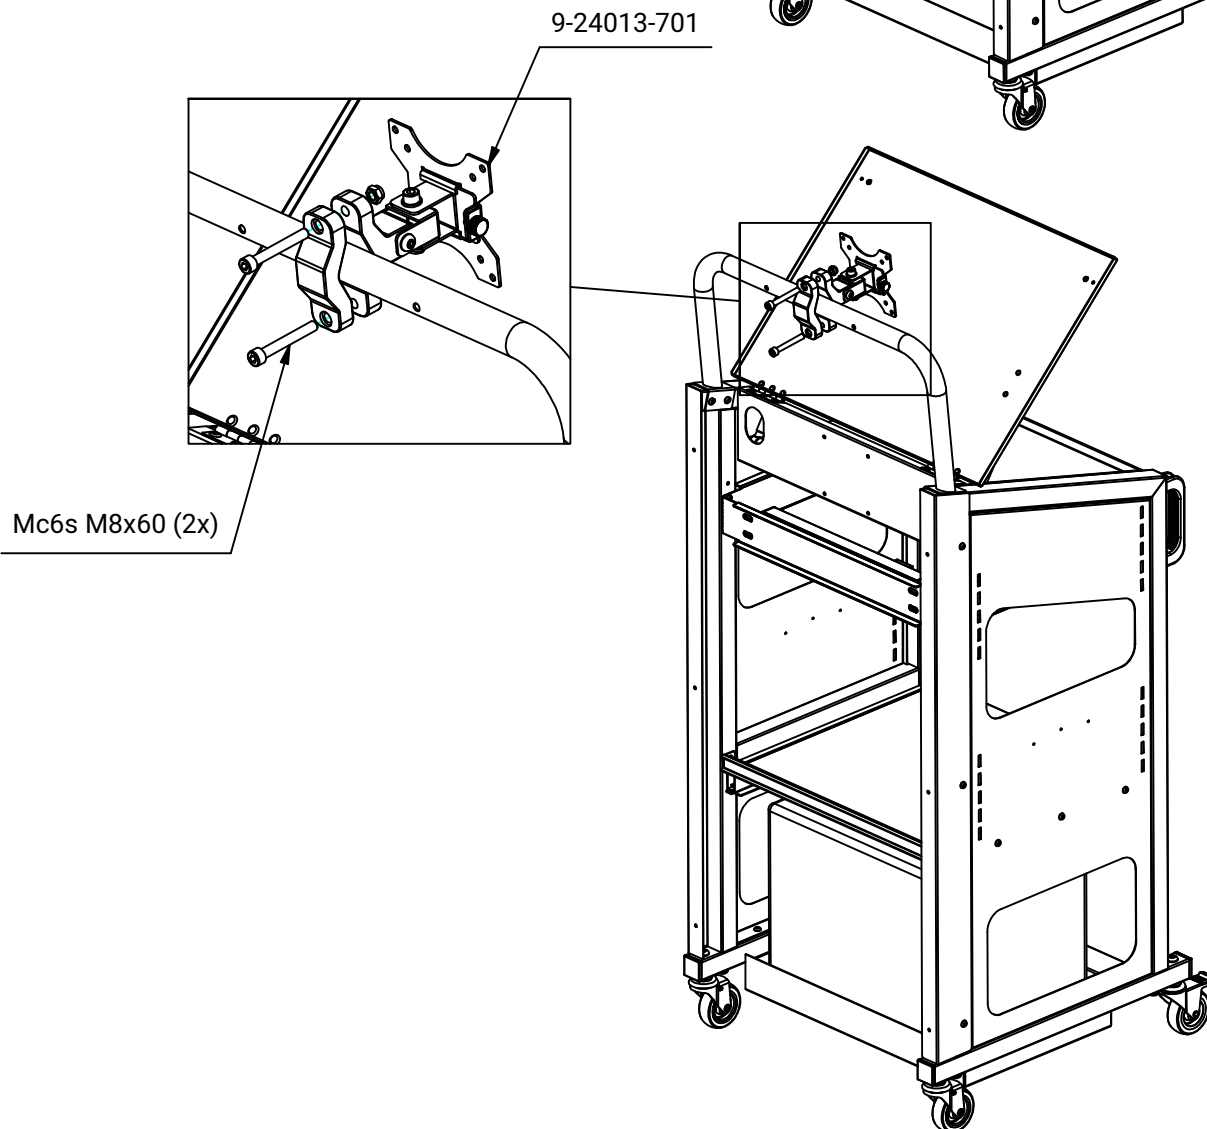

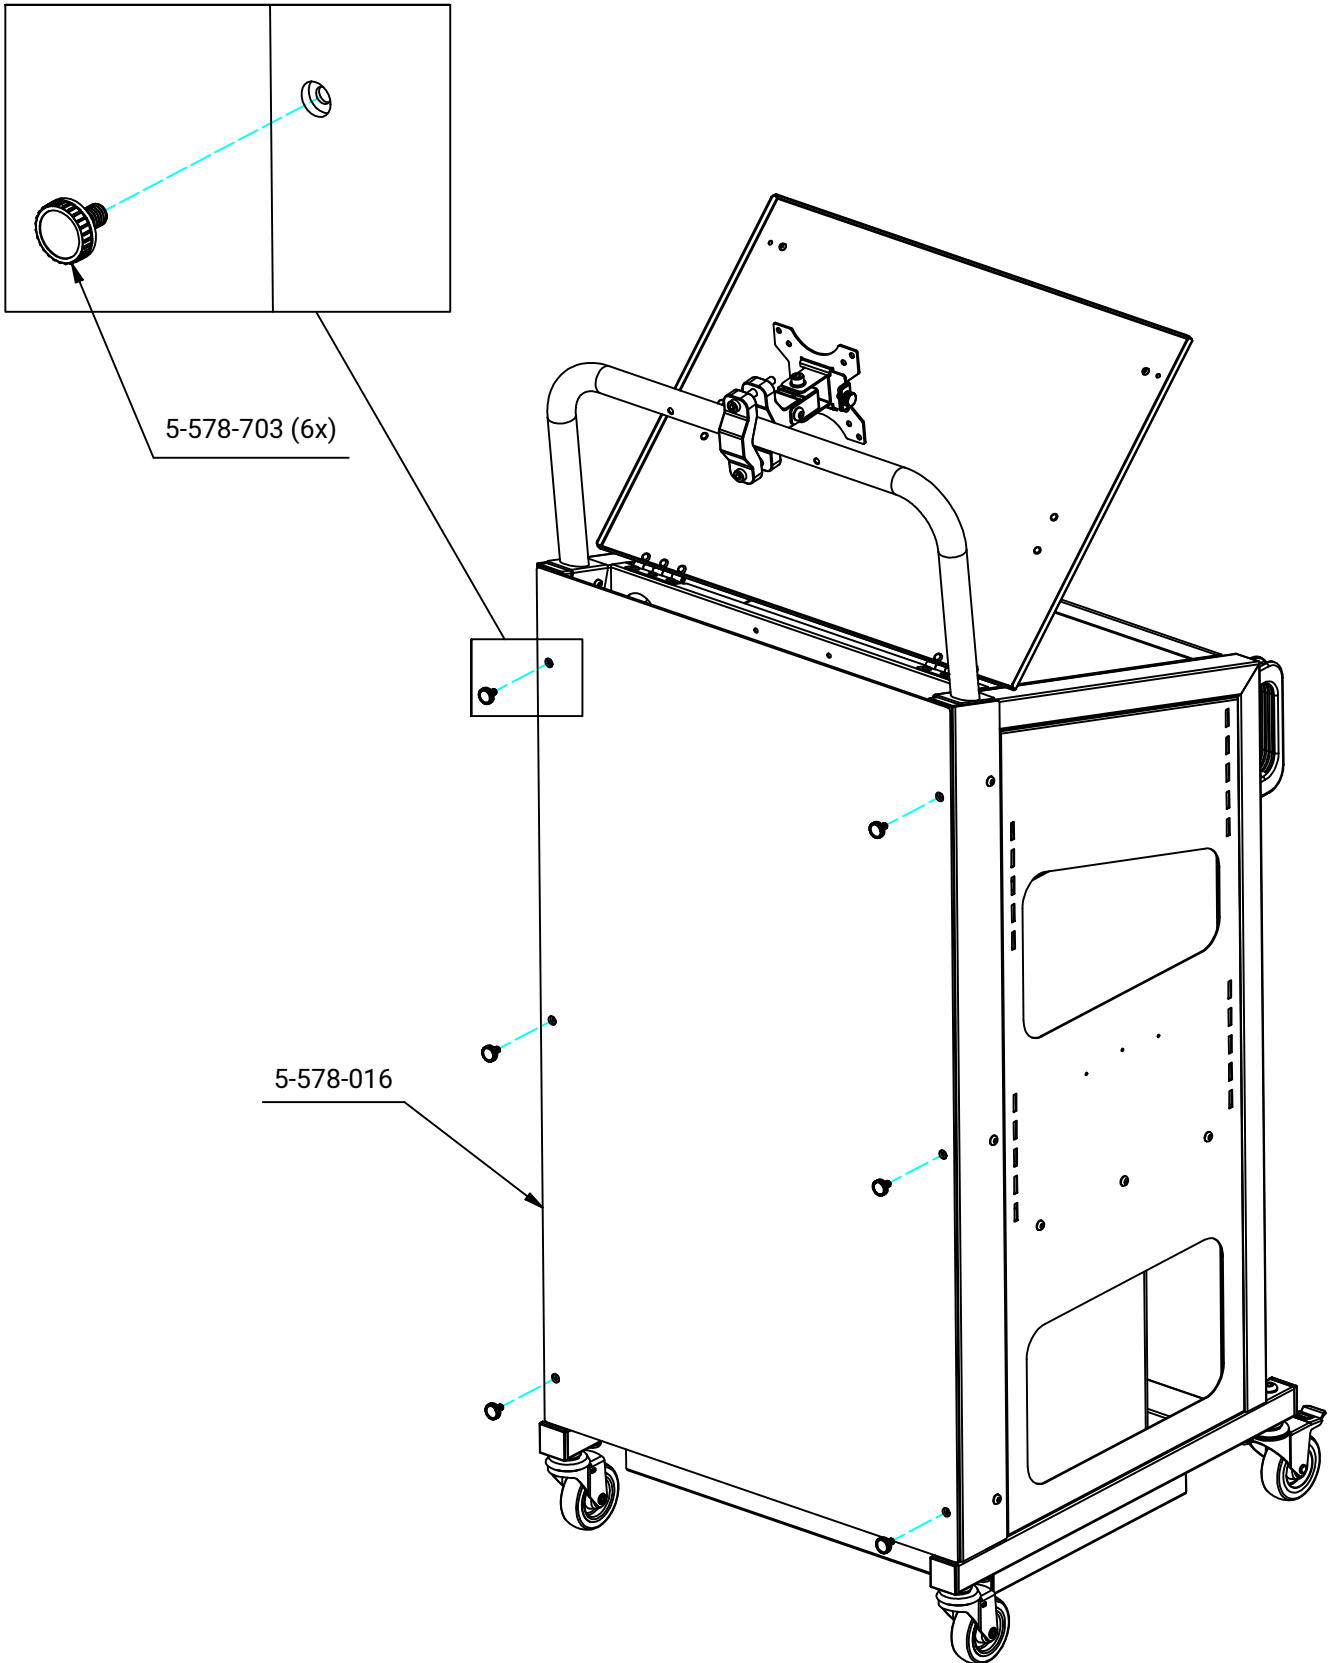

Accessories:

Collision protection

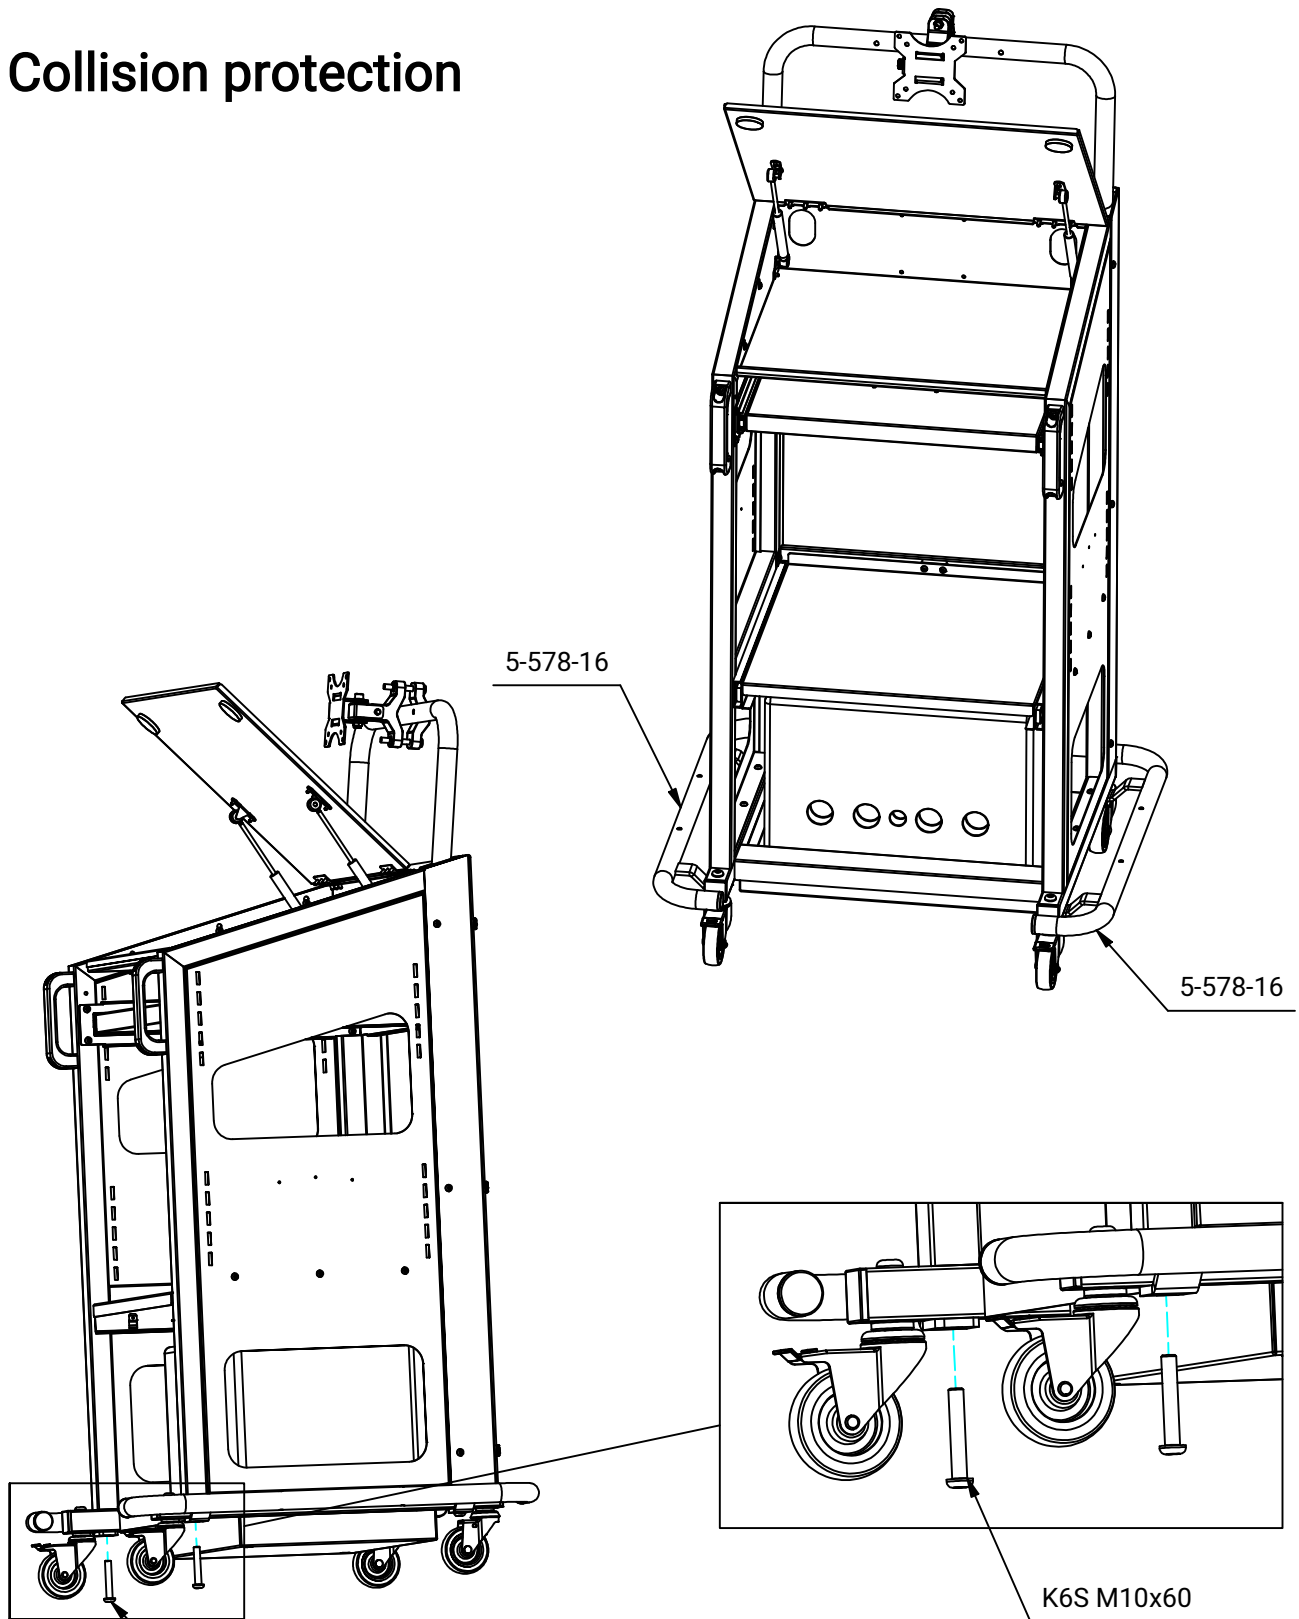

Loosen the existing screw, one side at a time.



