



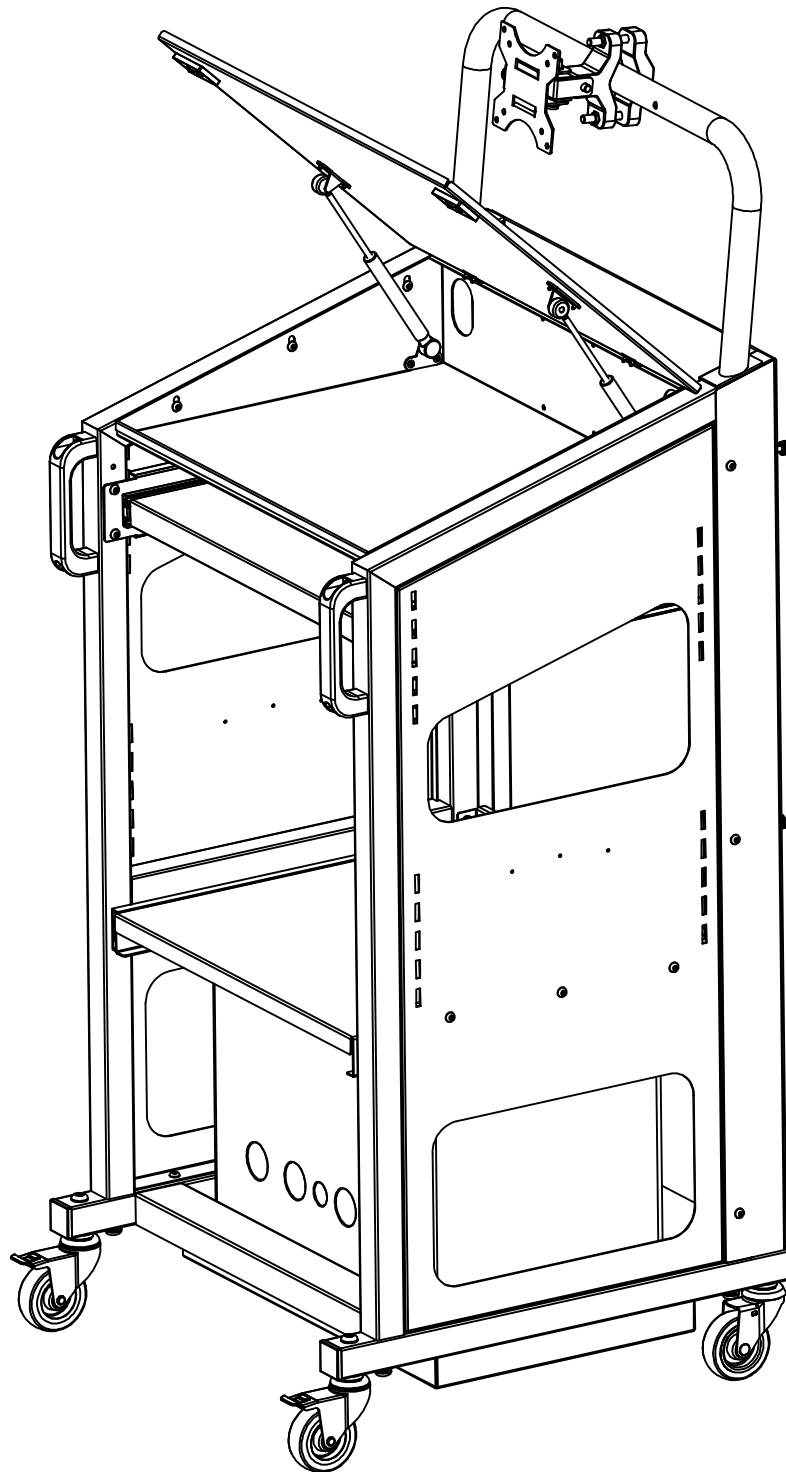


5- 578-302- 2

IT- Vagn Power pack


Premium




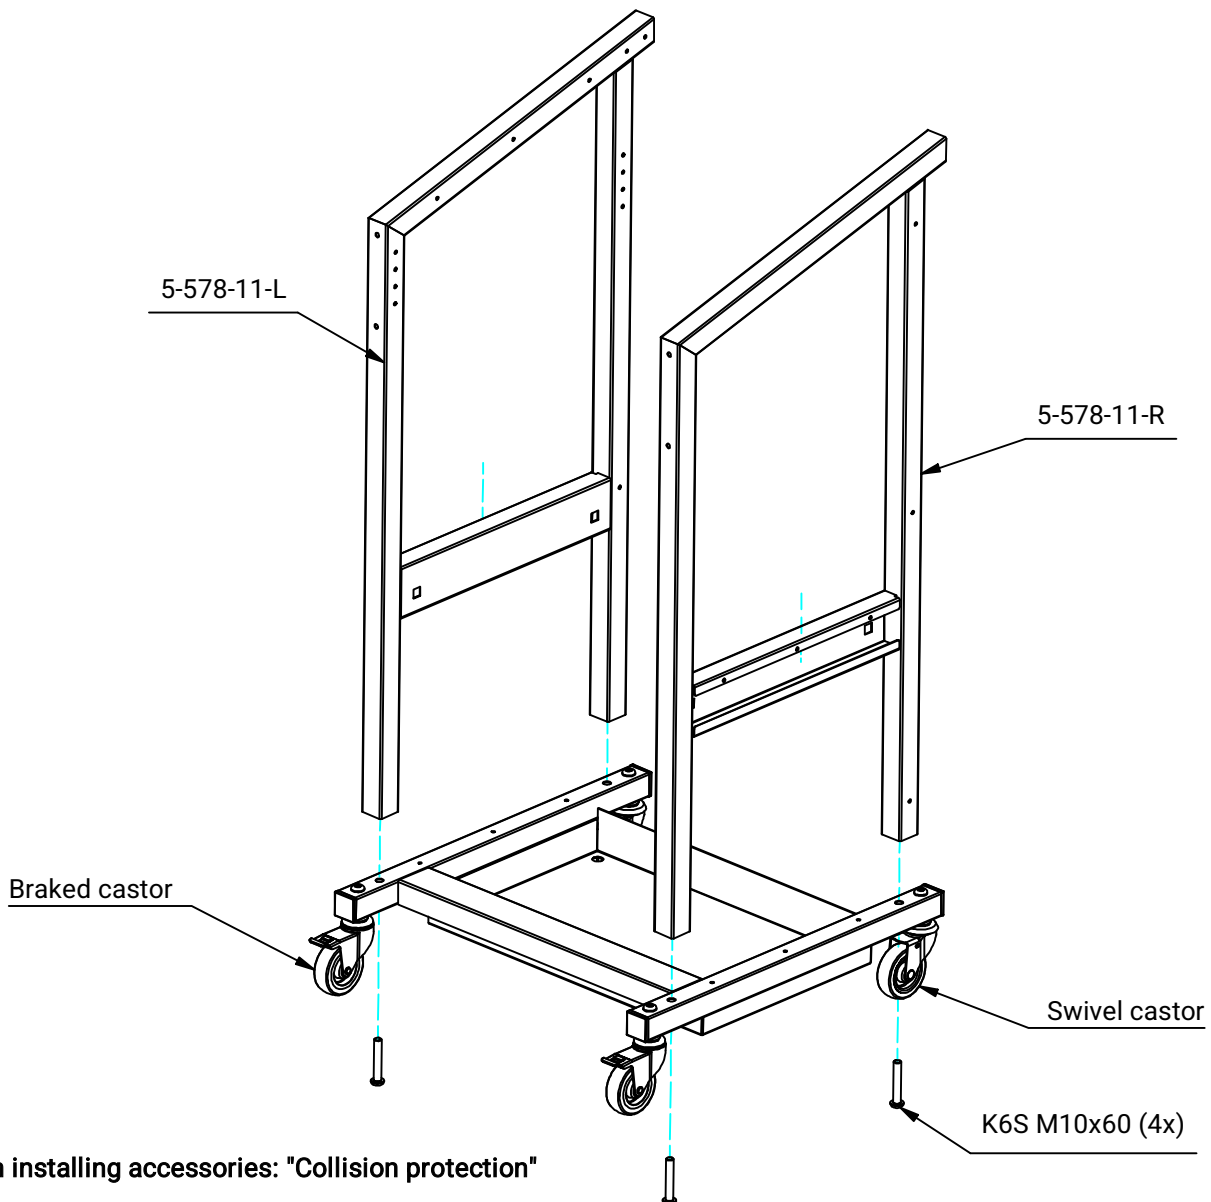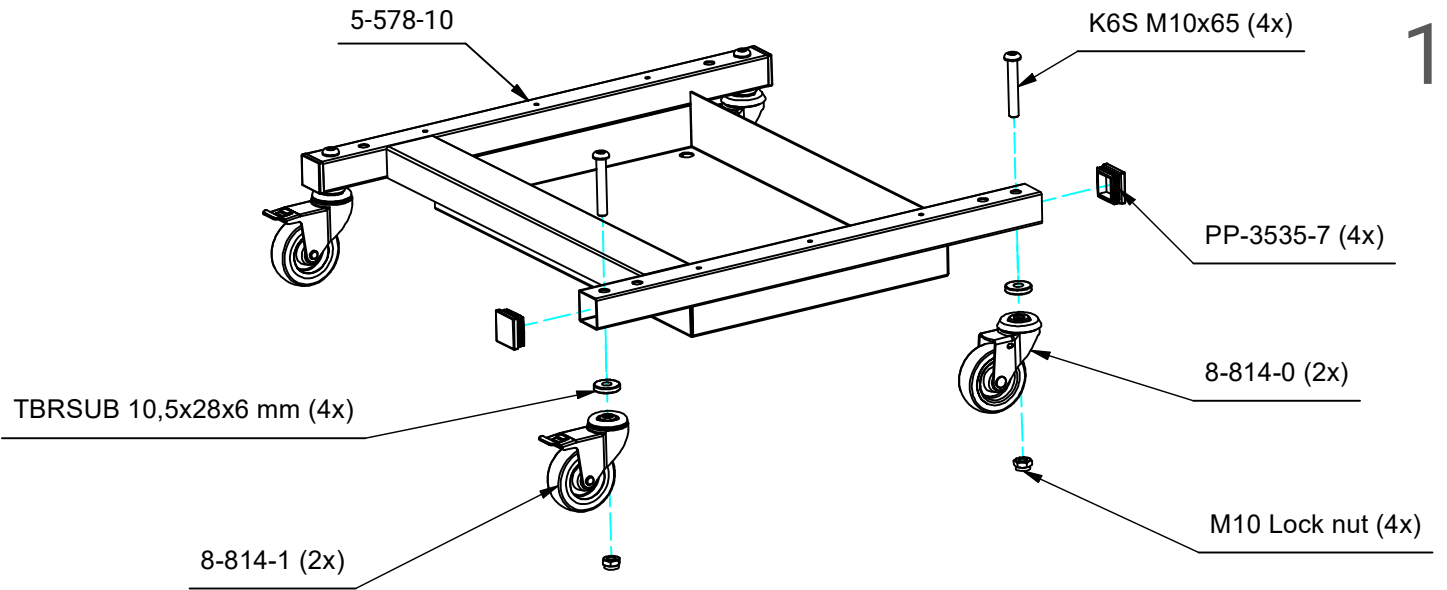


When installing accessories: "Collision protection"
see steps 19




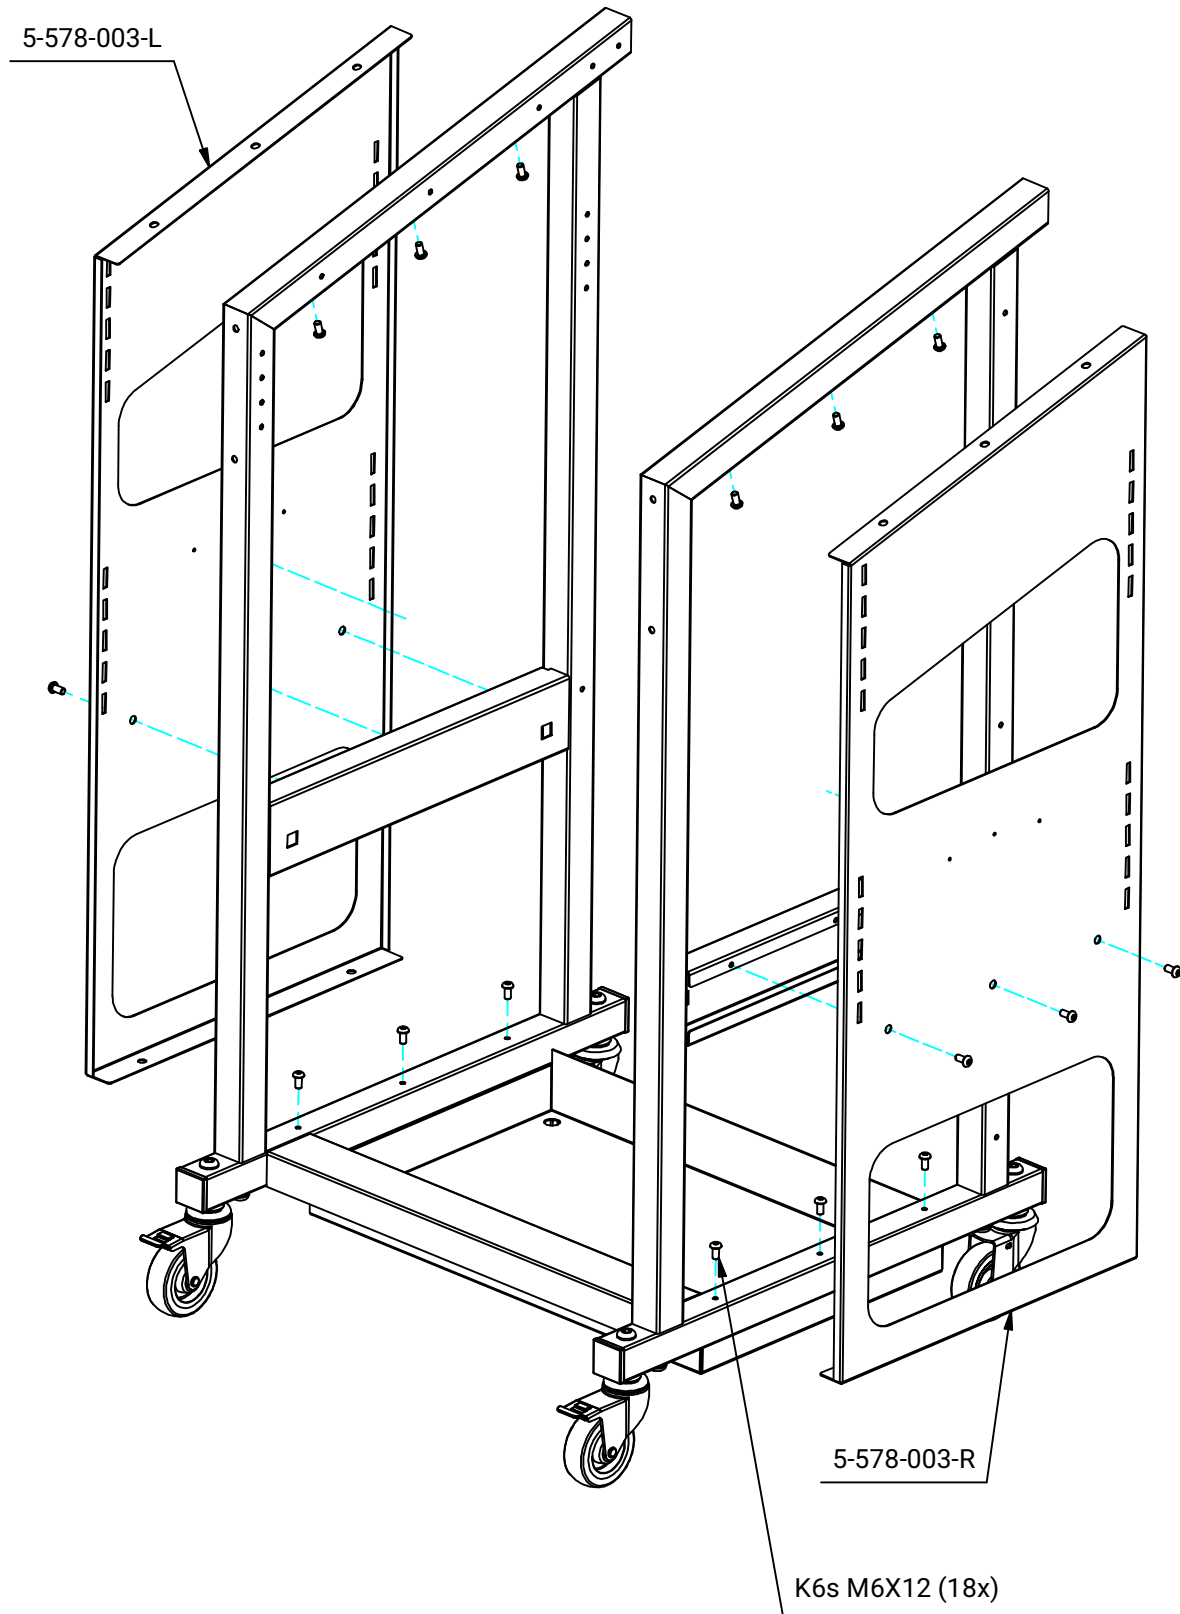

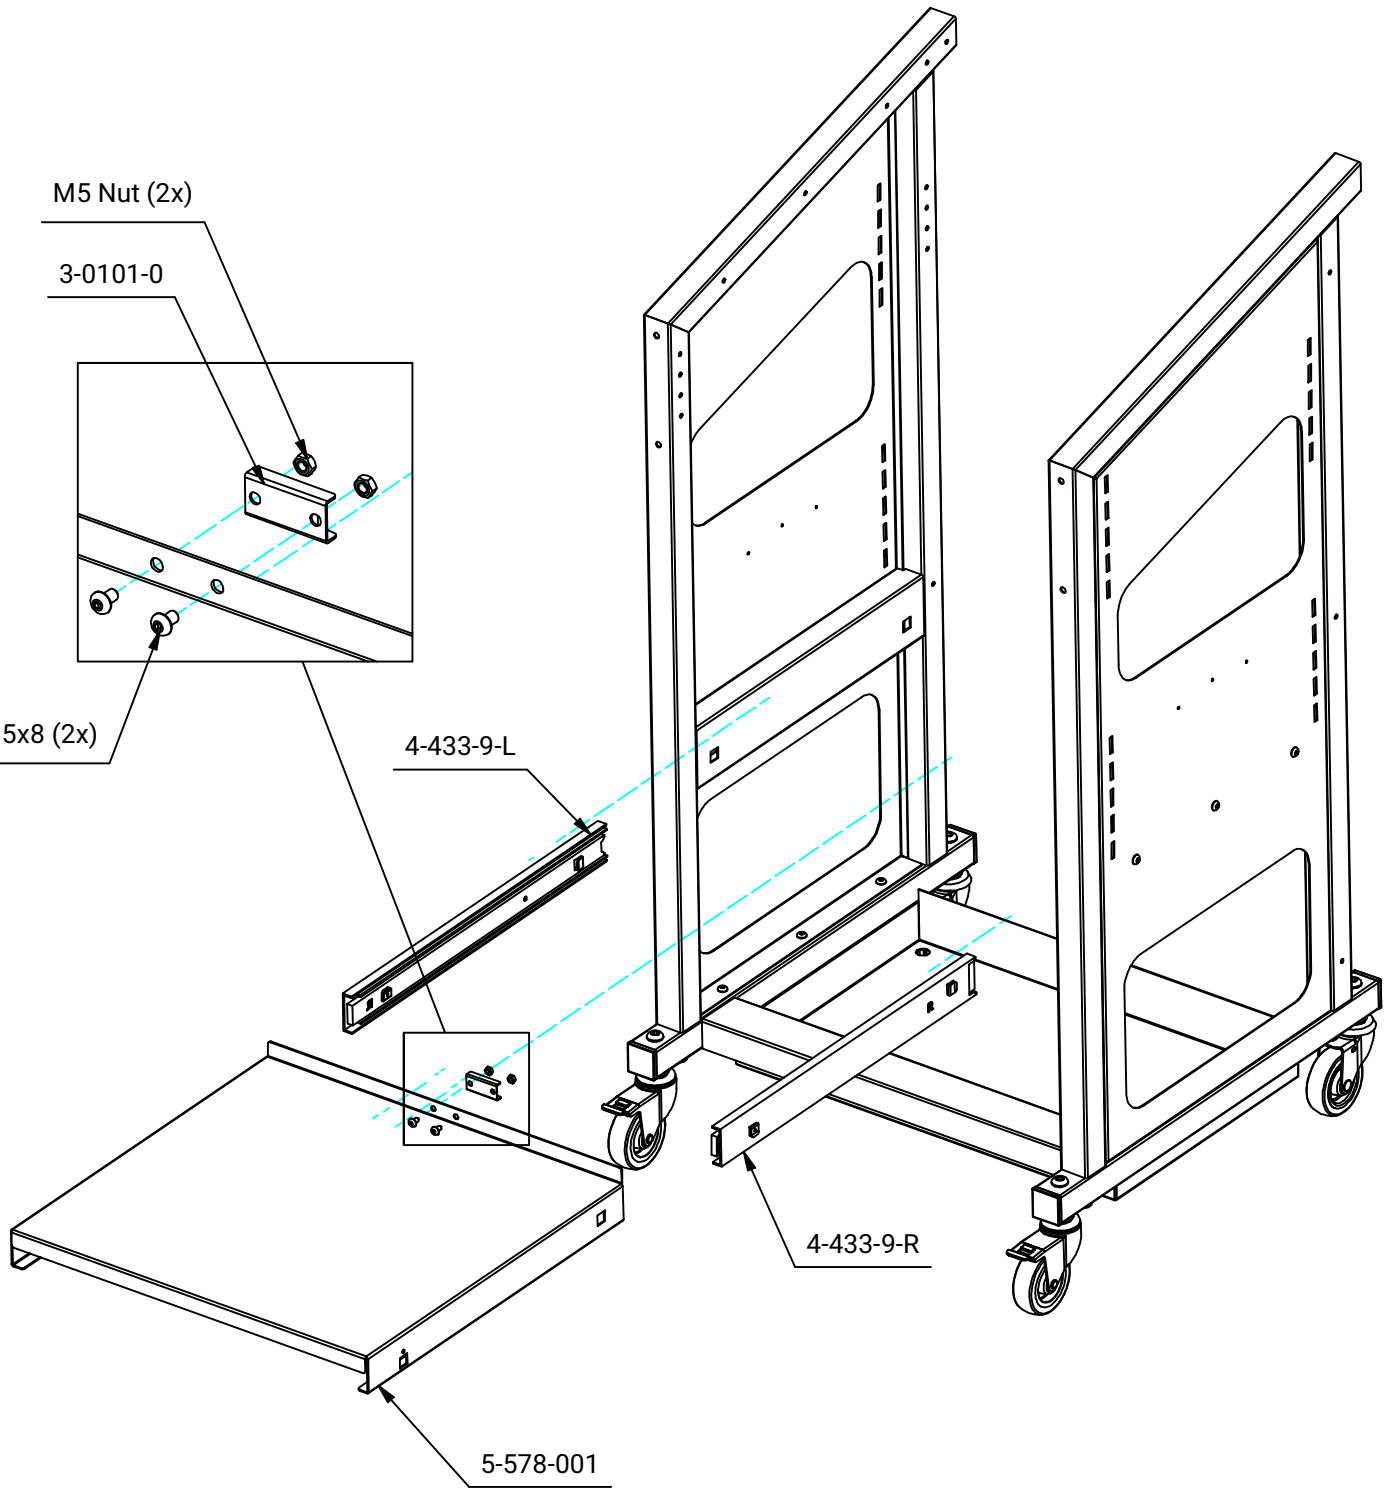




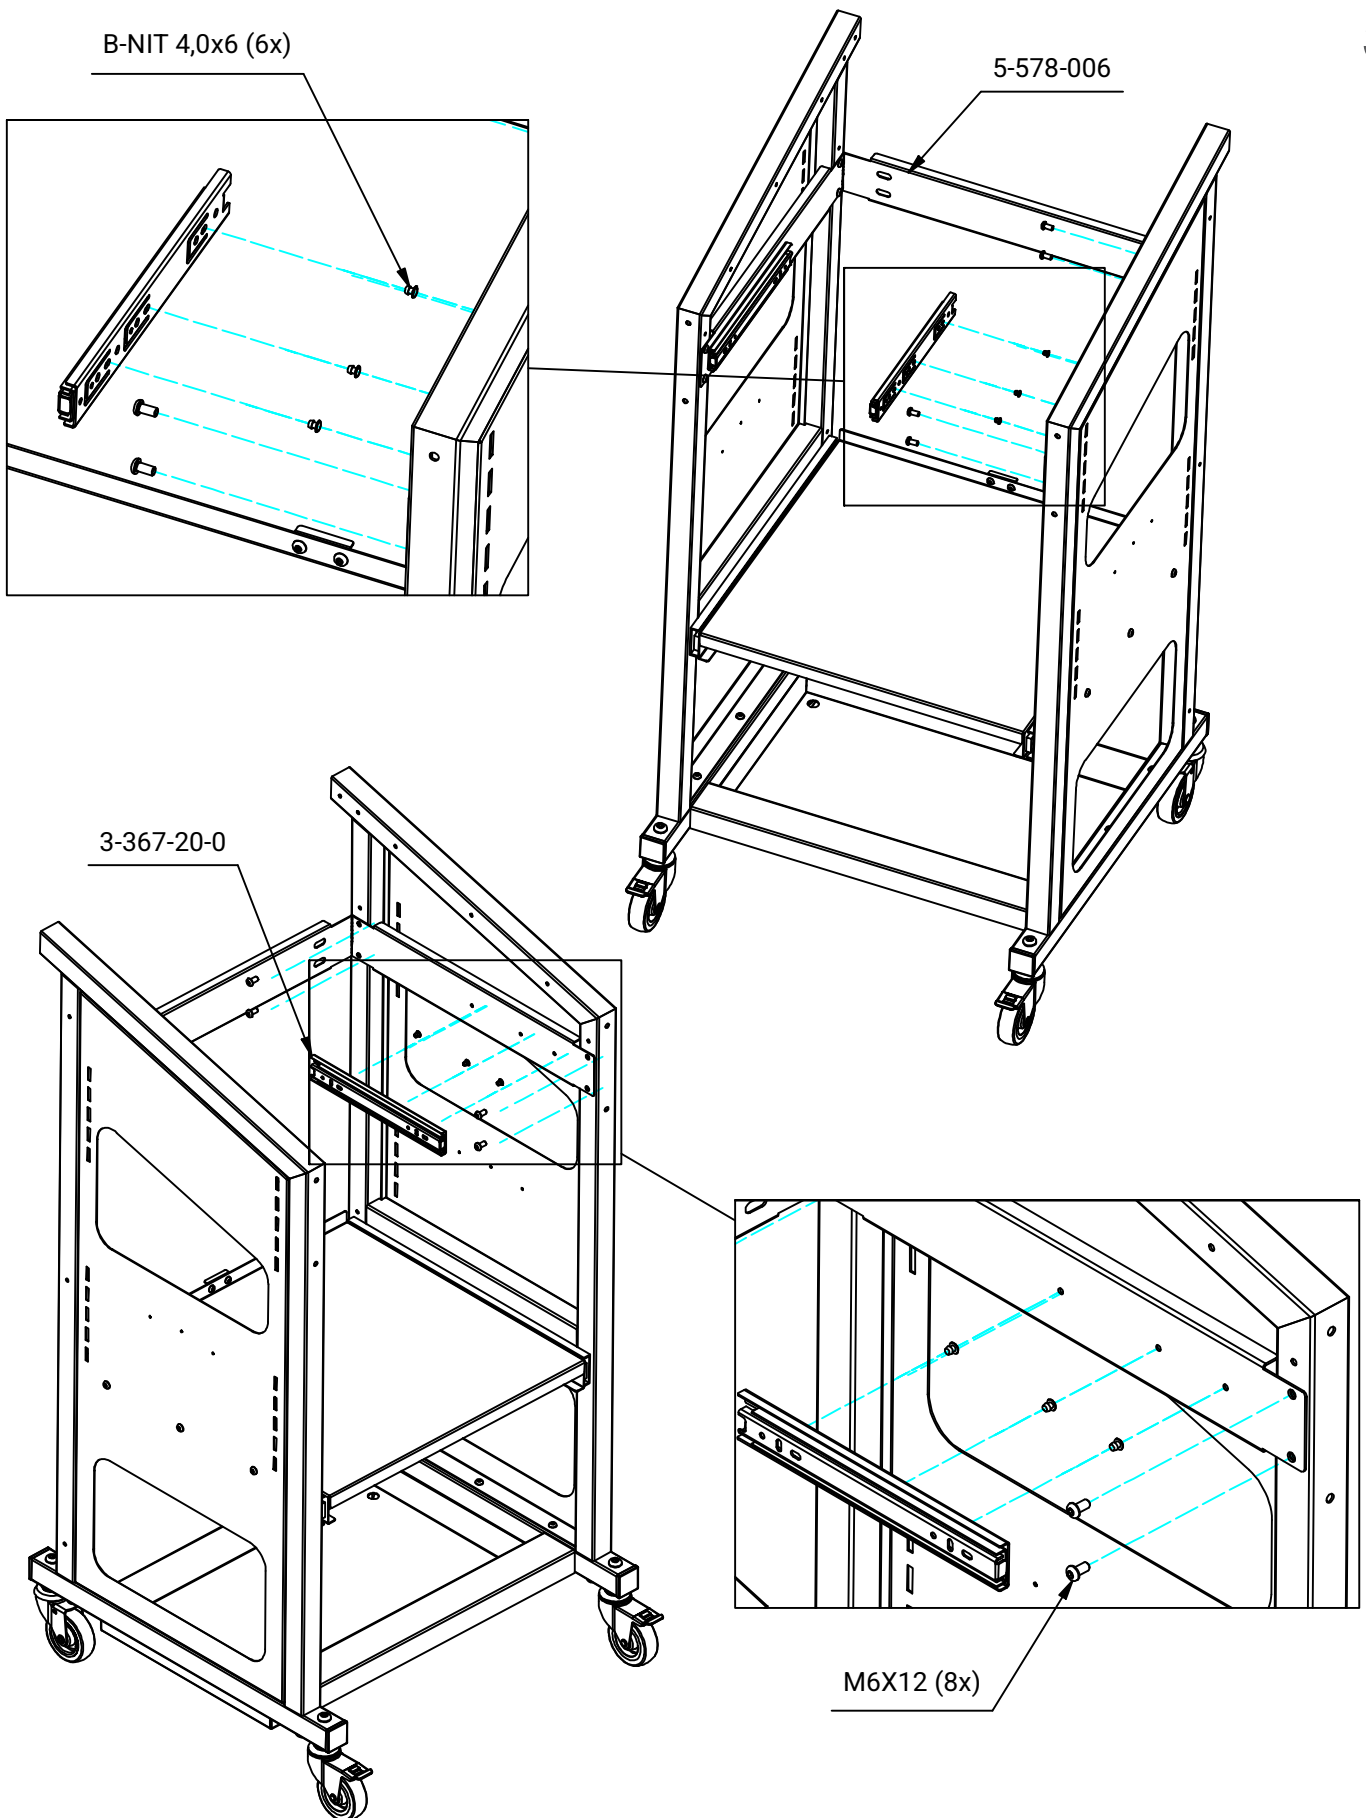



3-270-0 (Mounted with included screws)

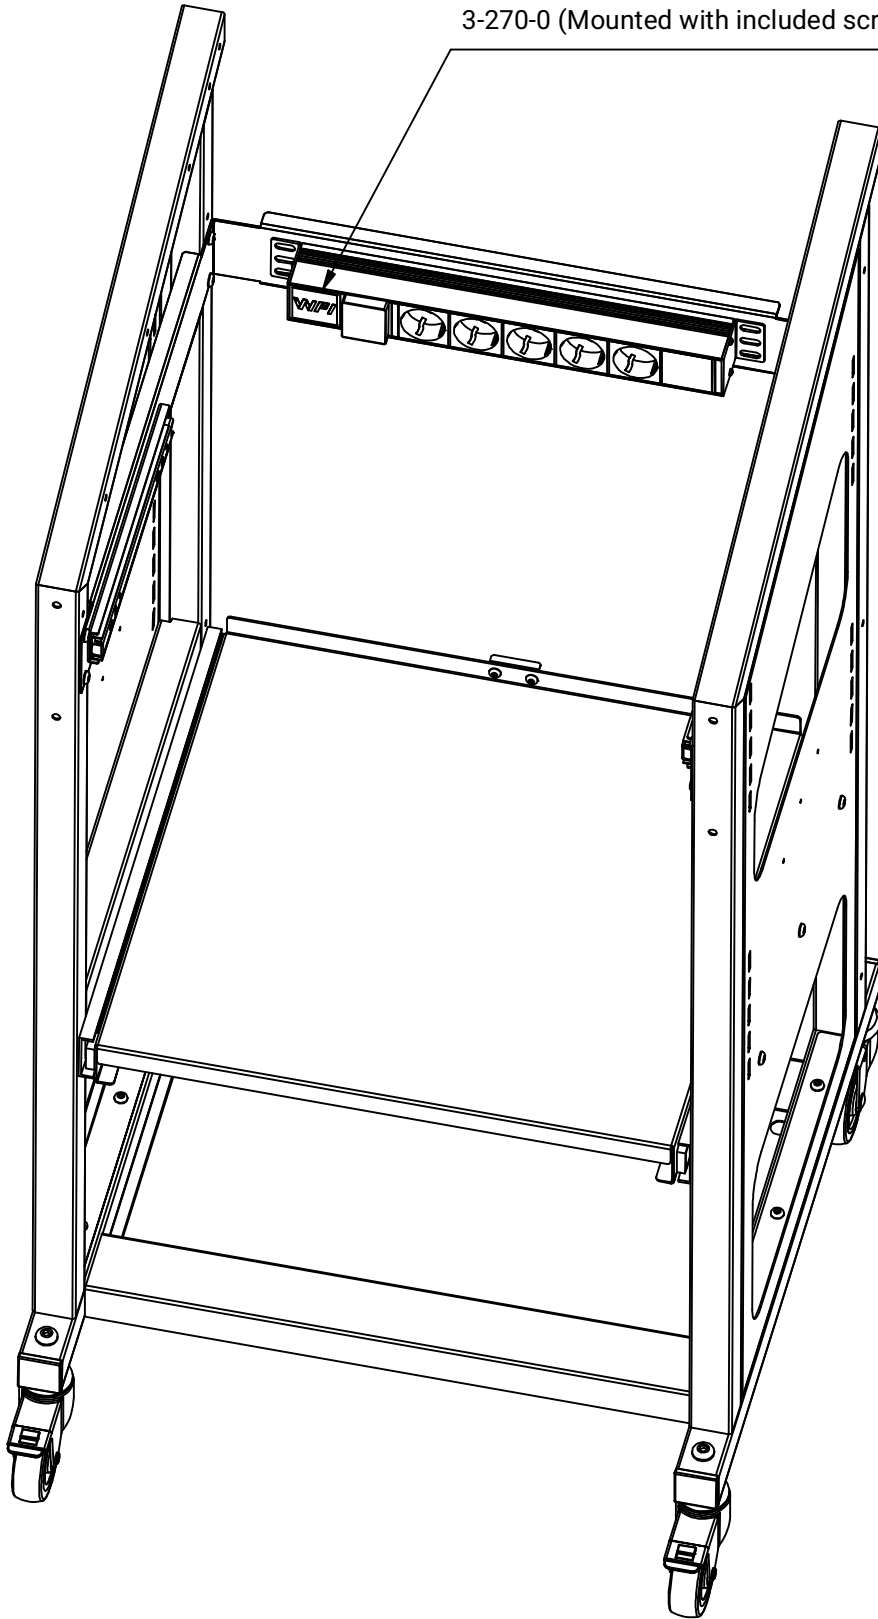



5-578-007


7

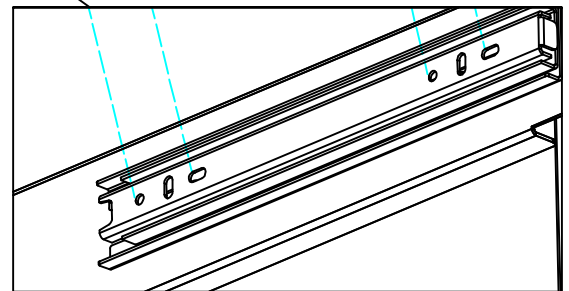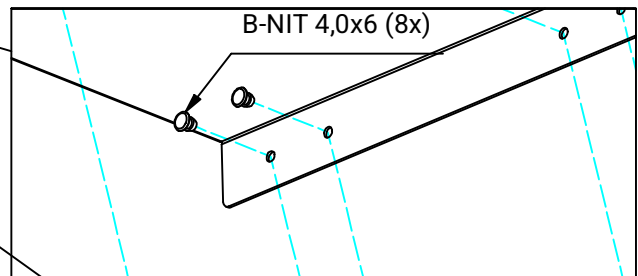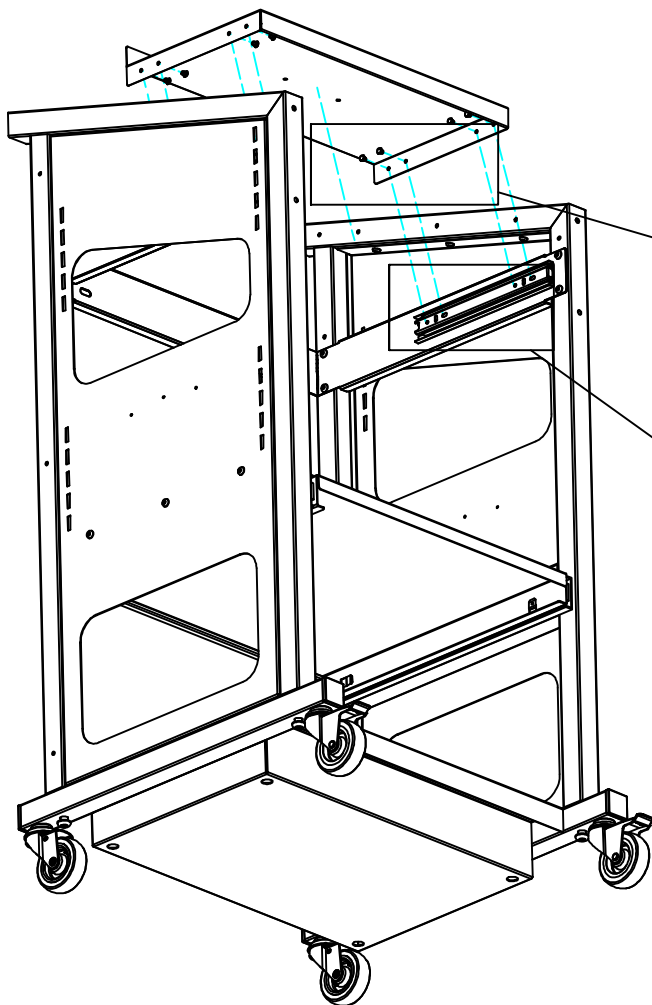
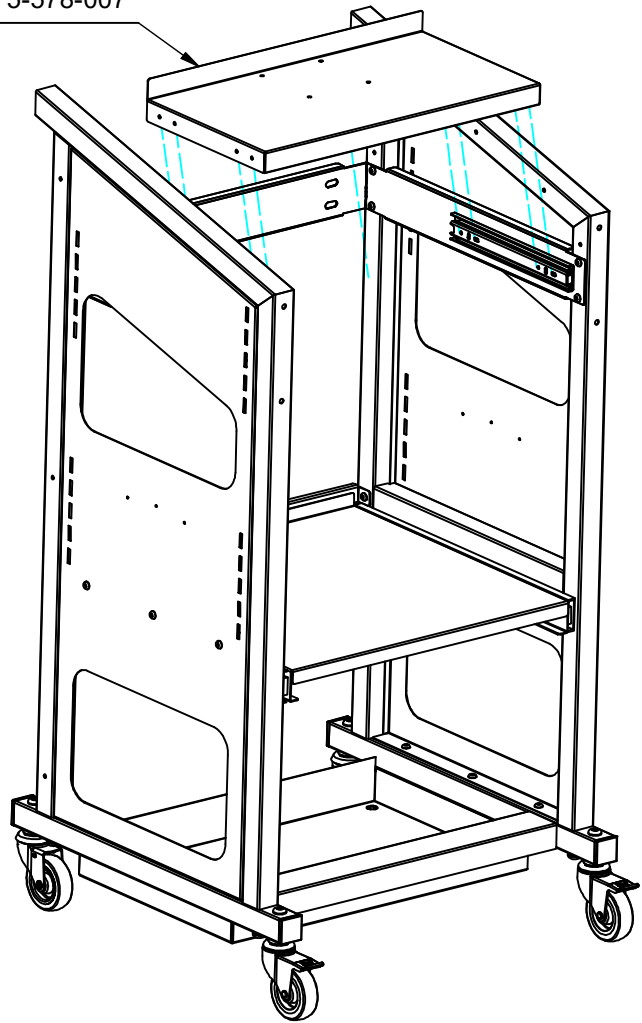


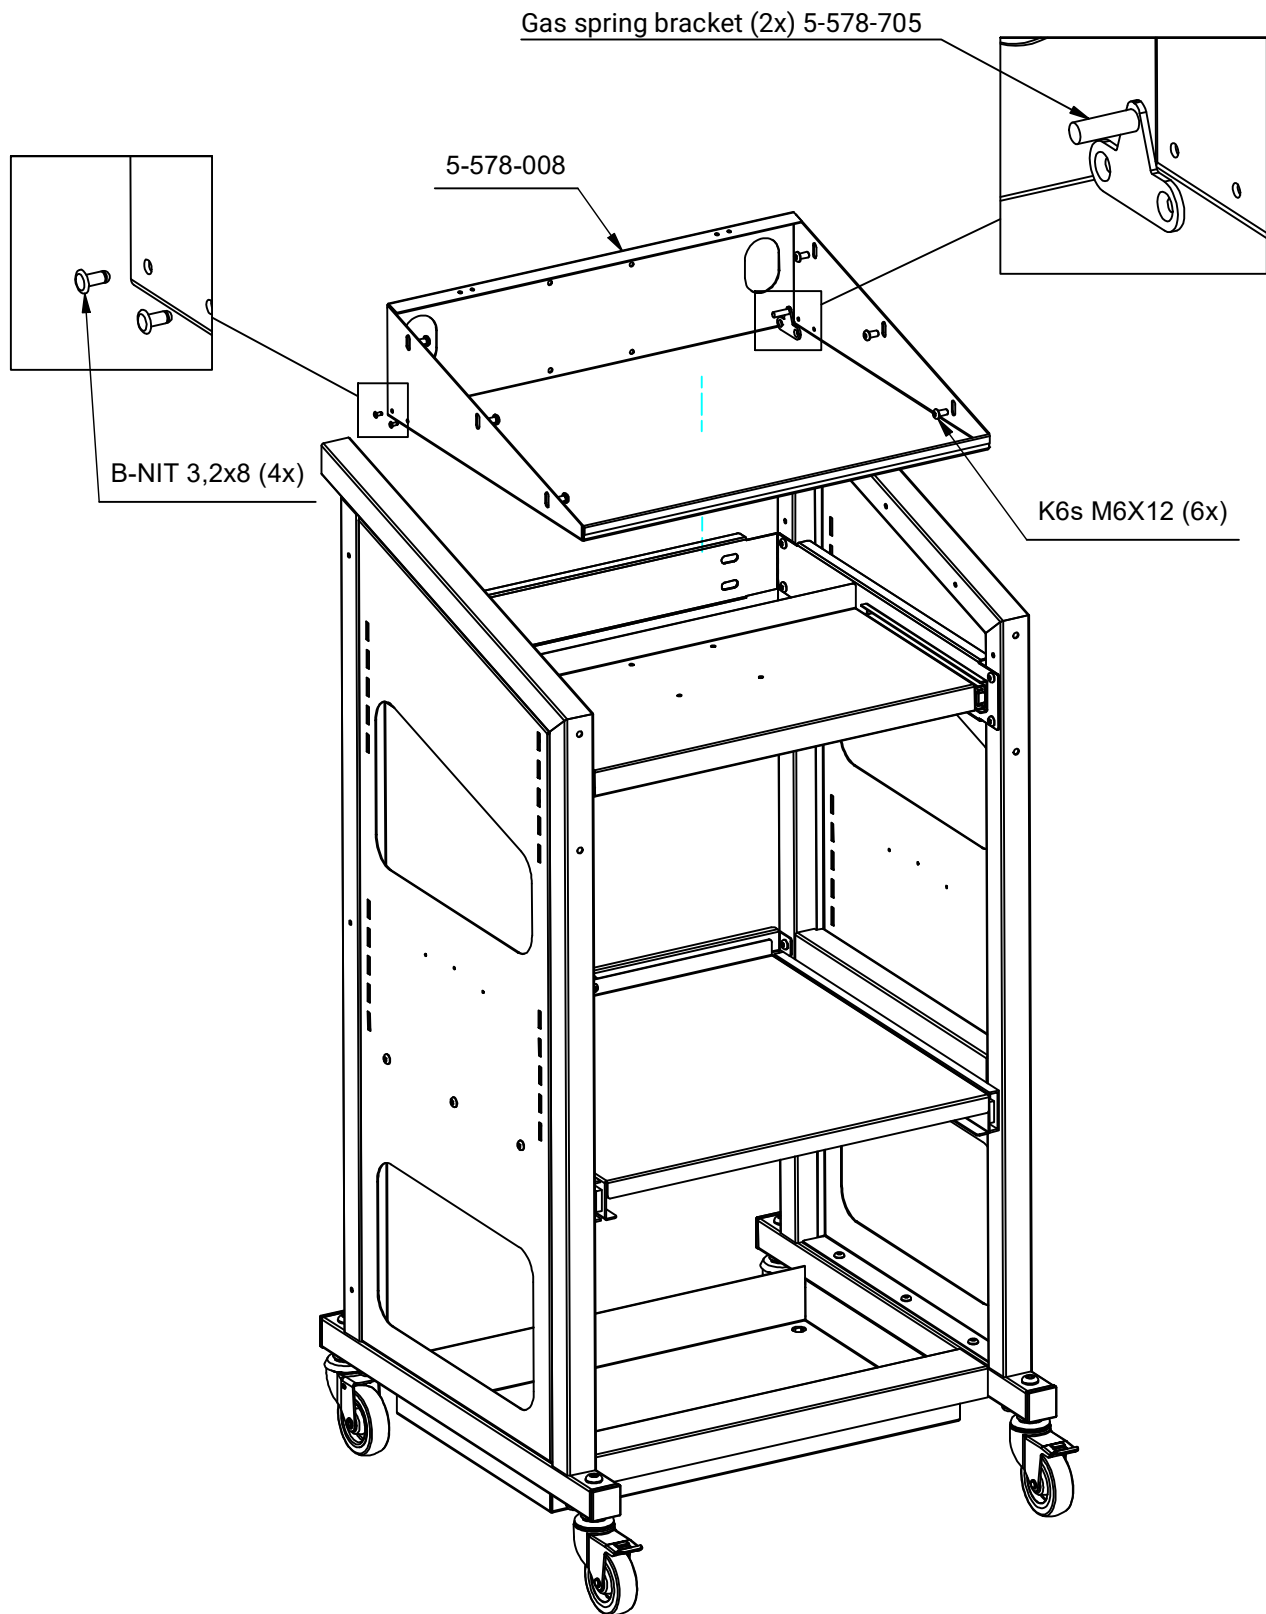

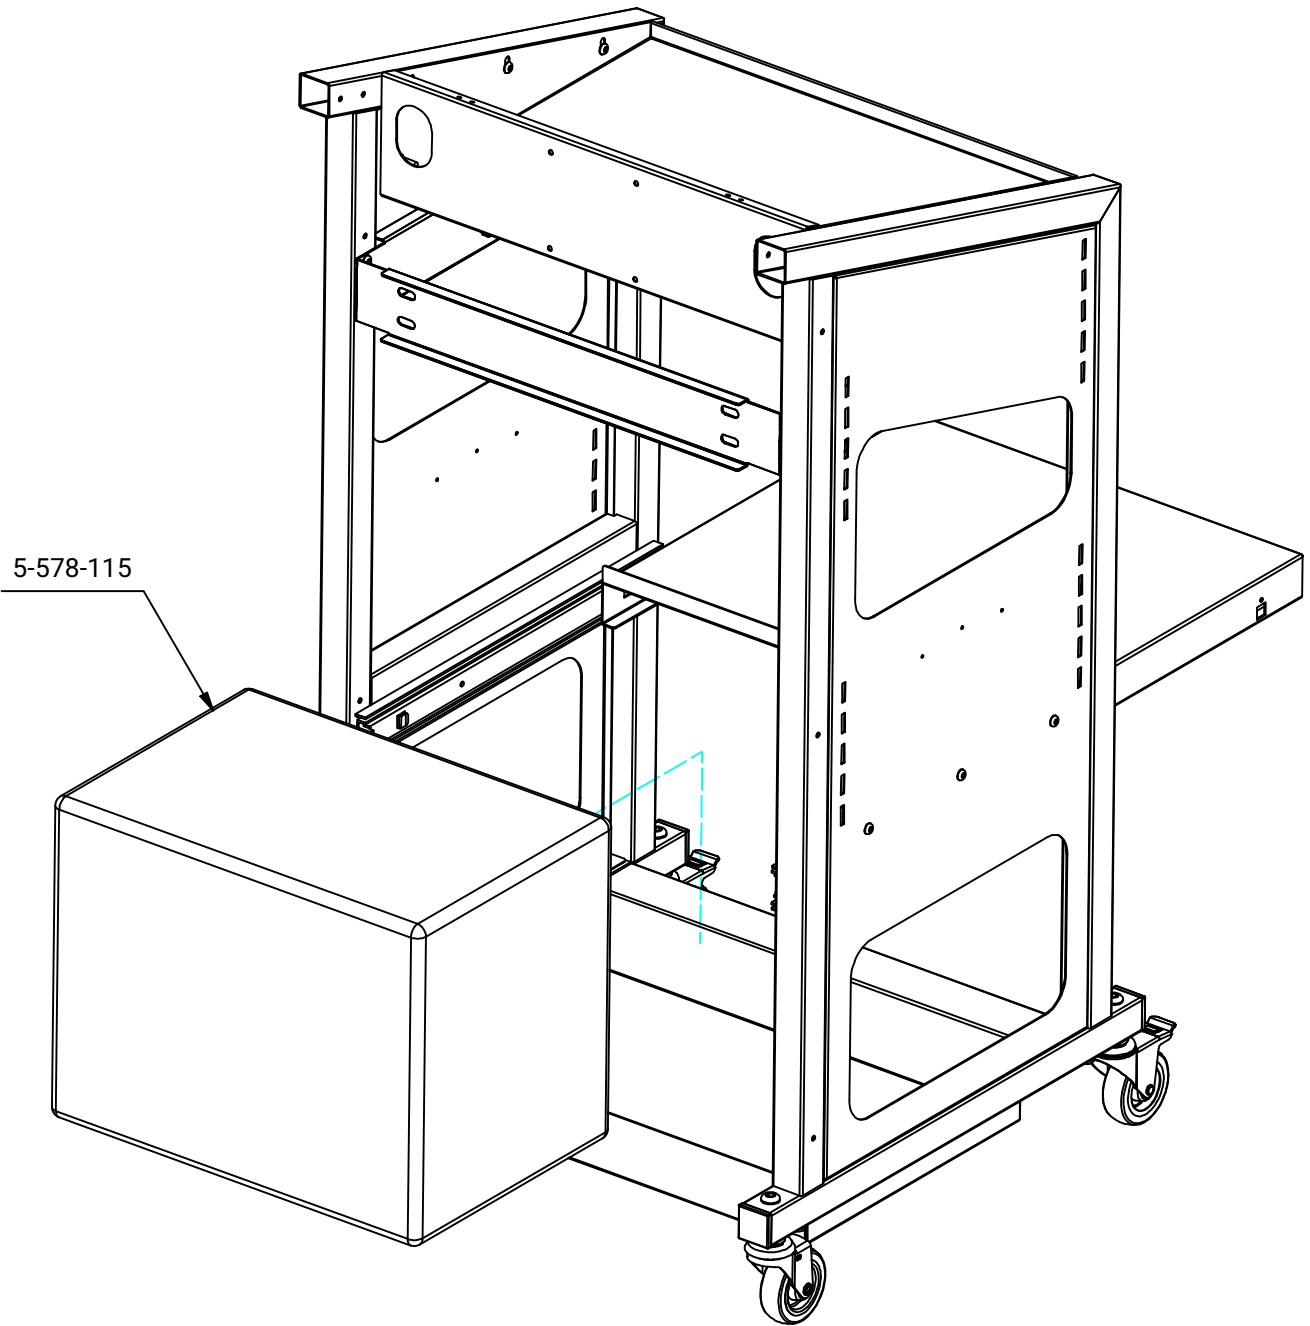


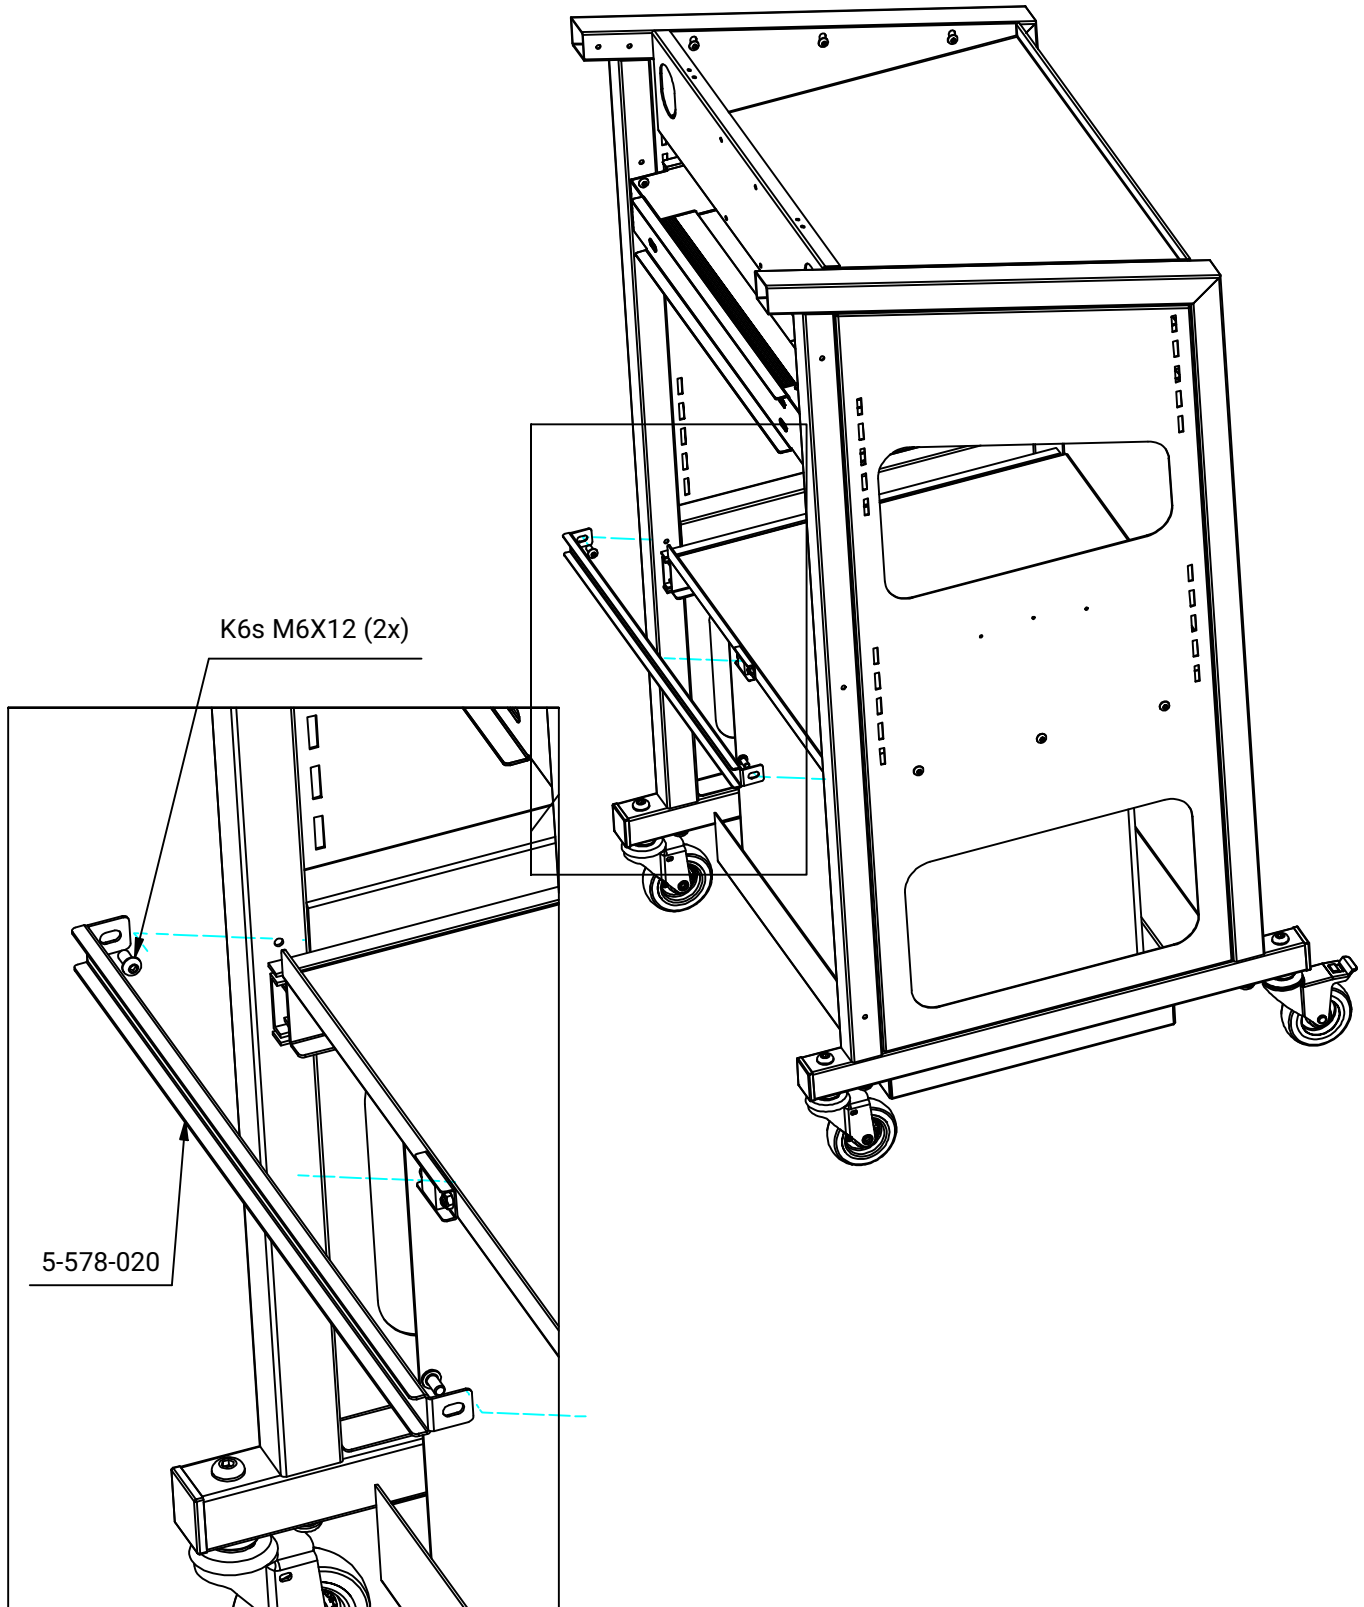

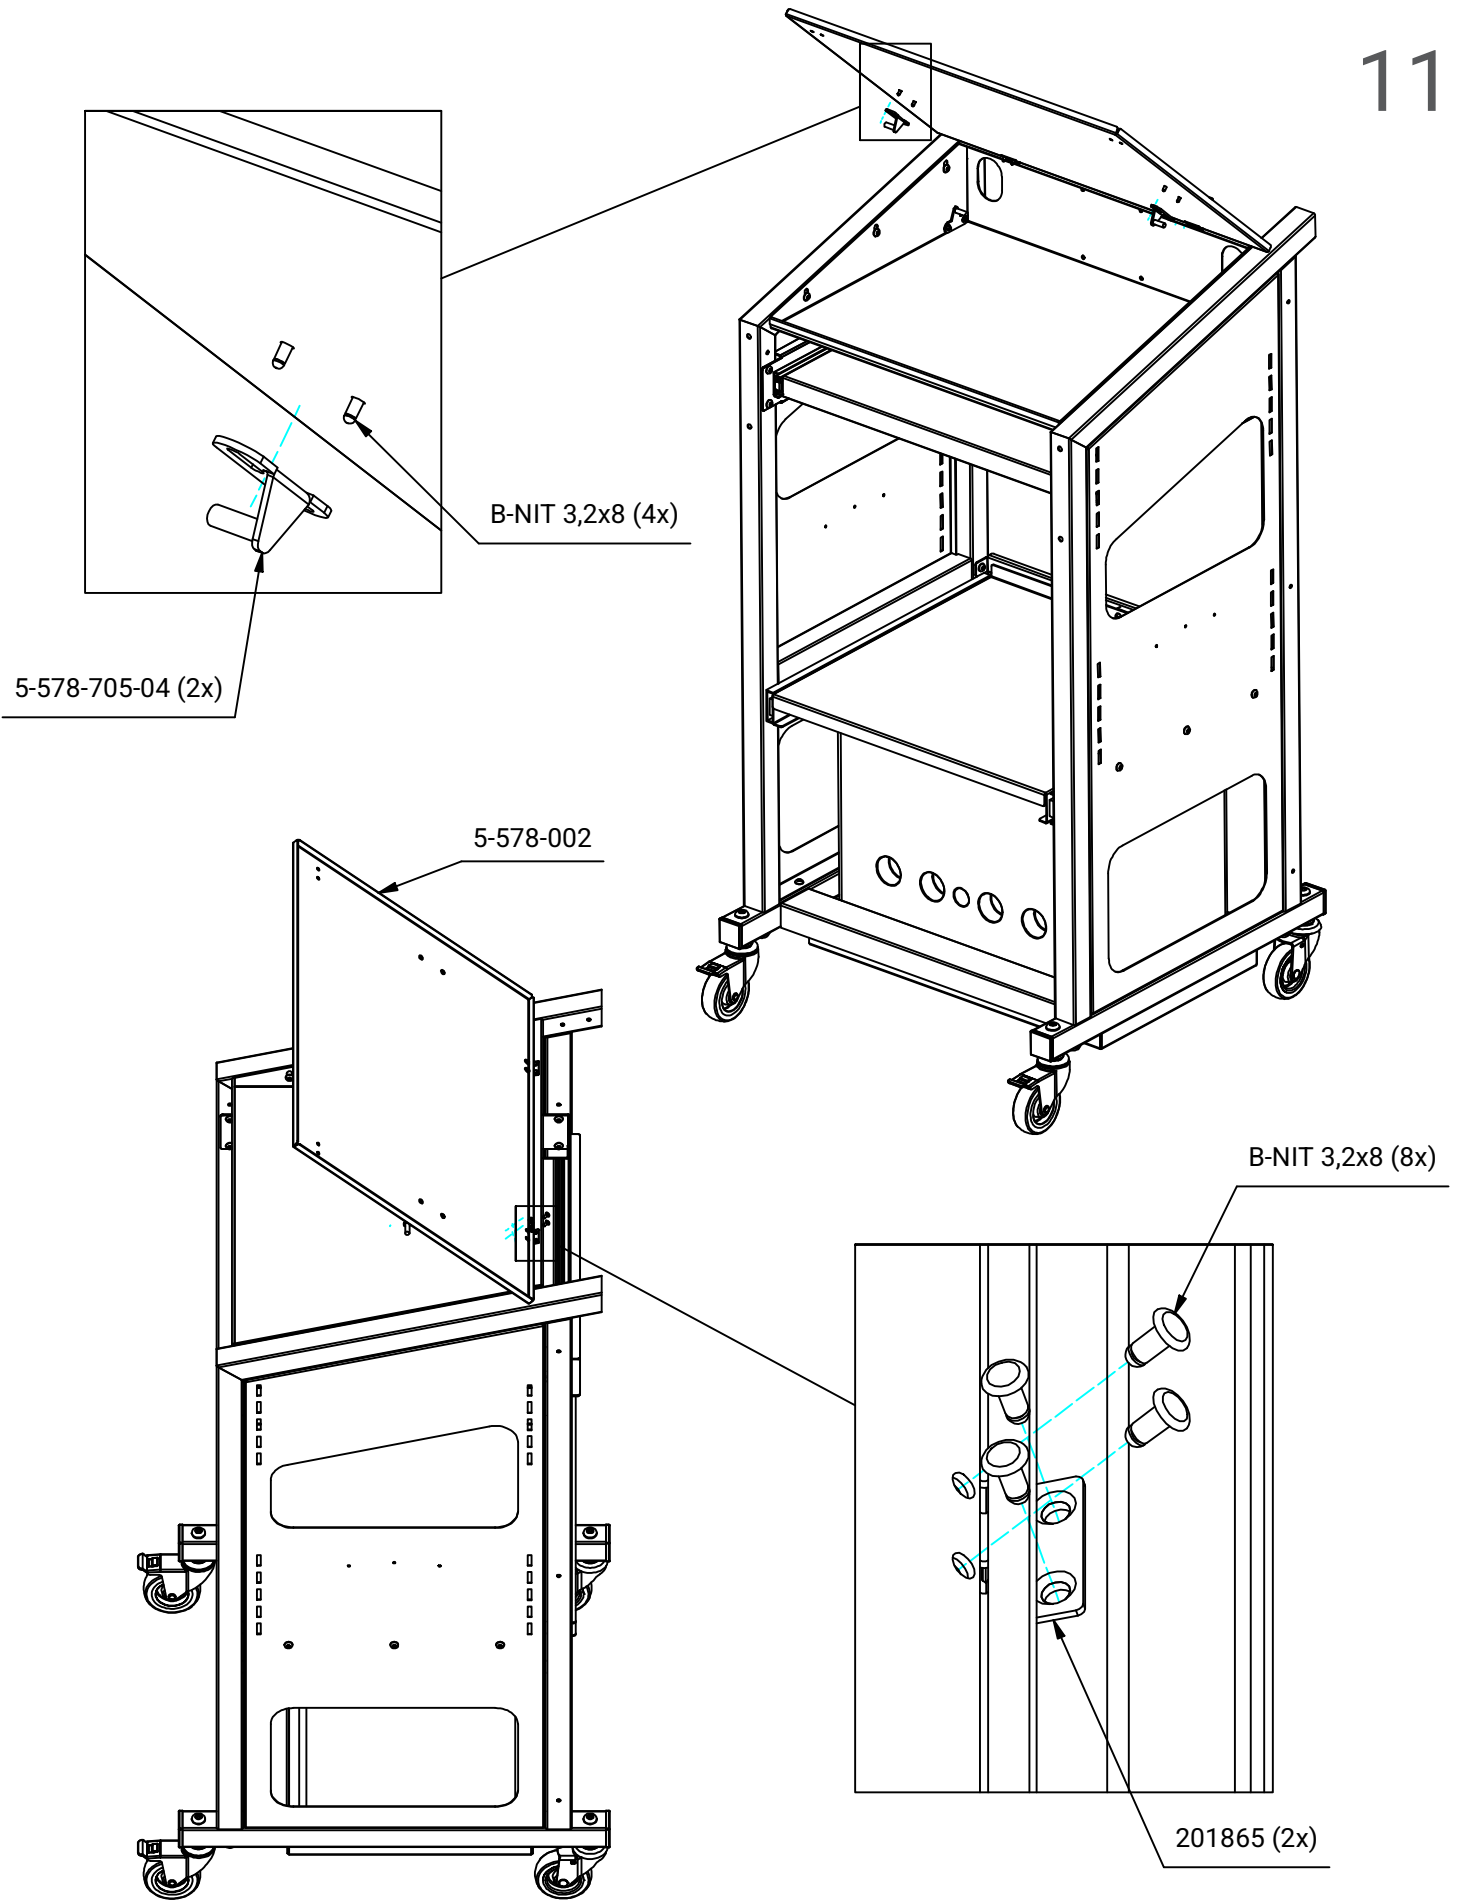

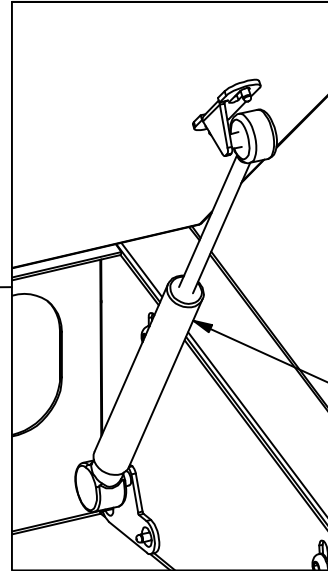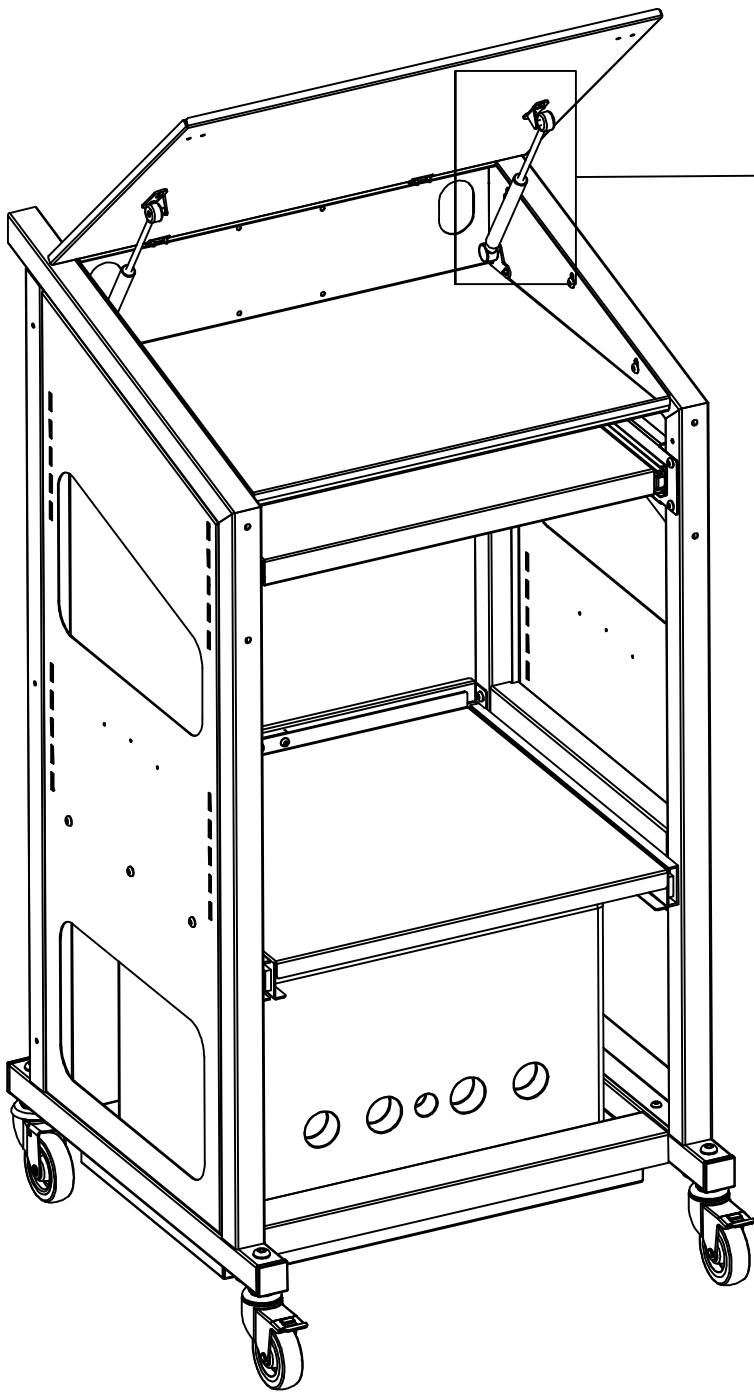


5-578-705

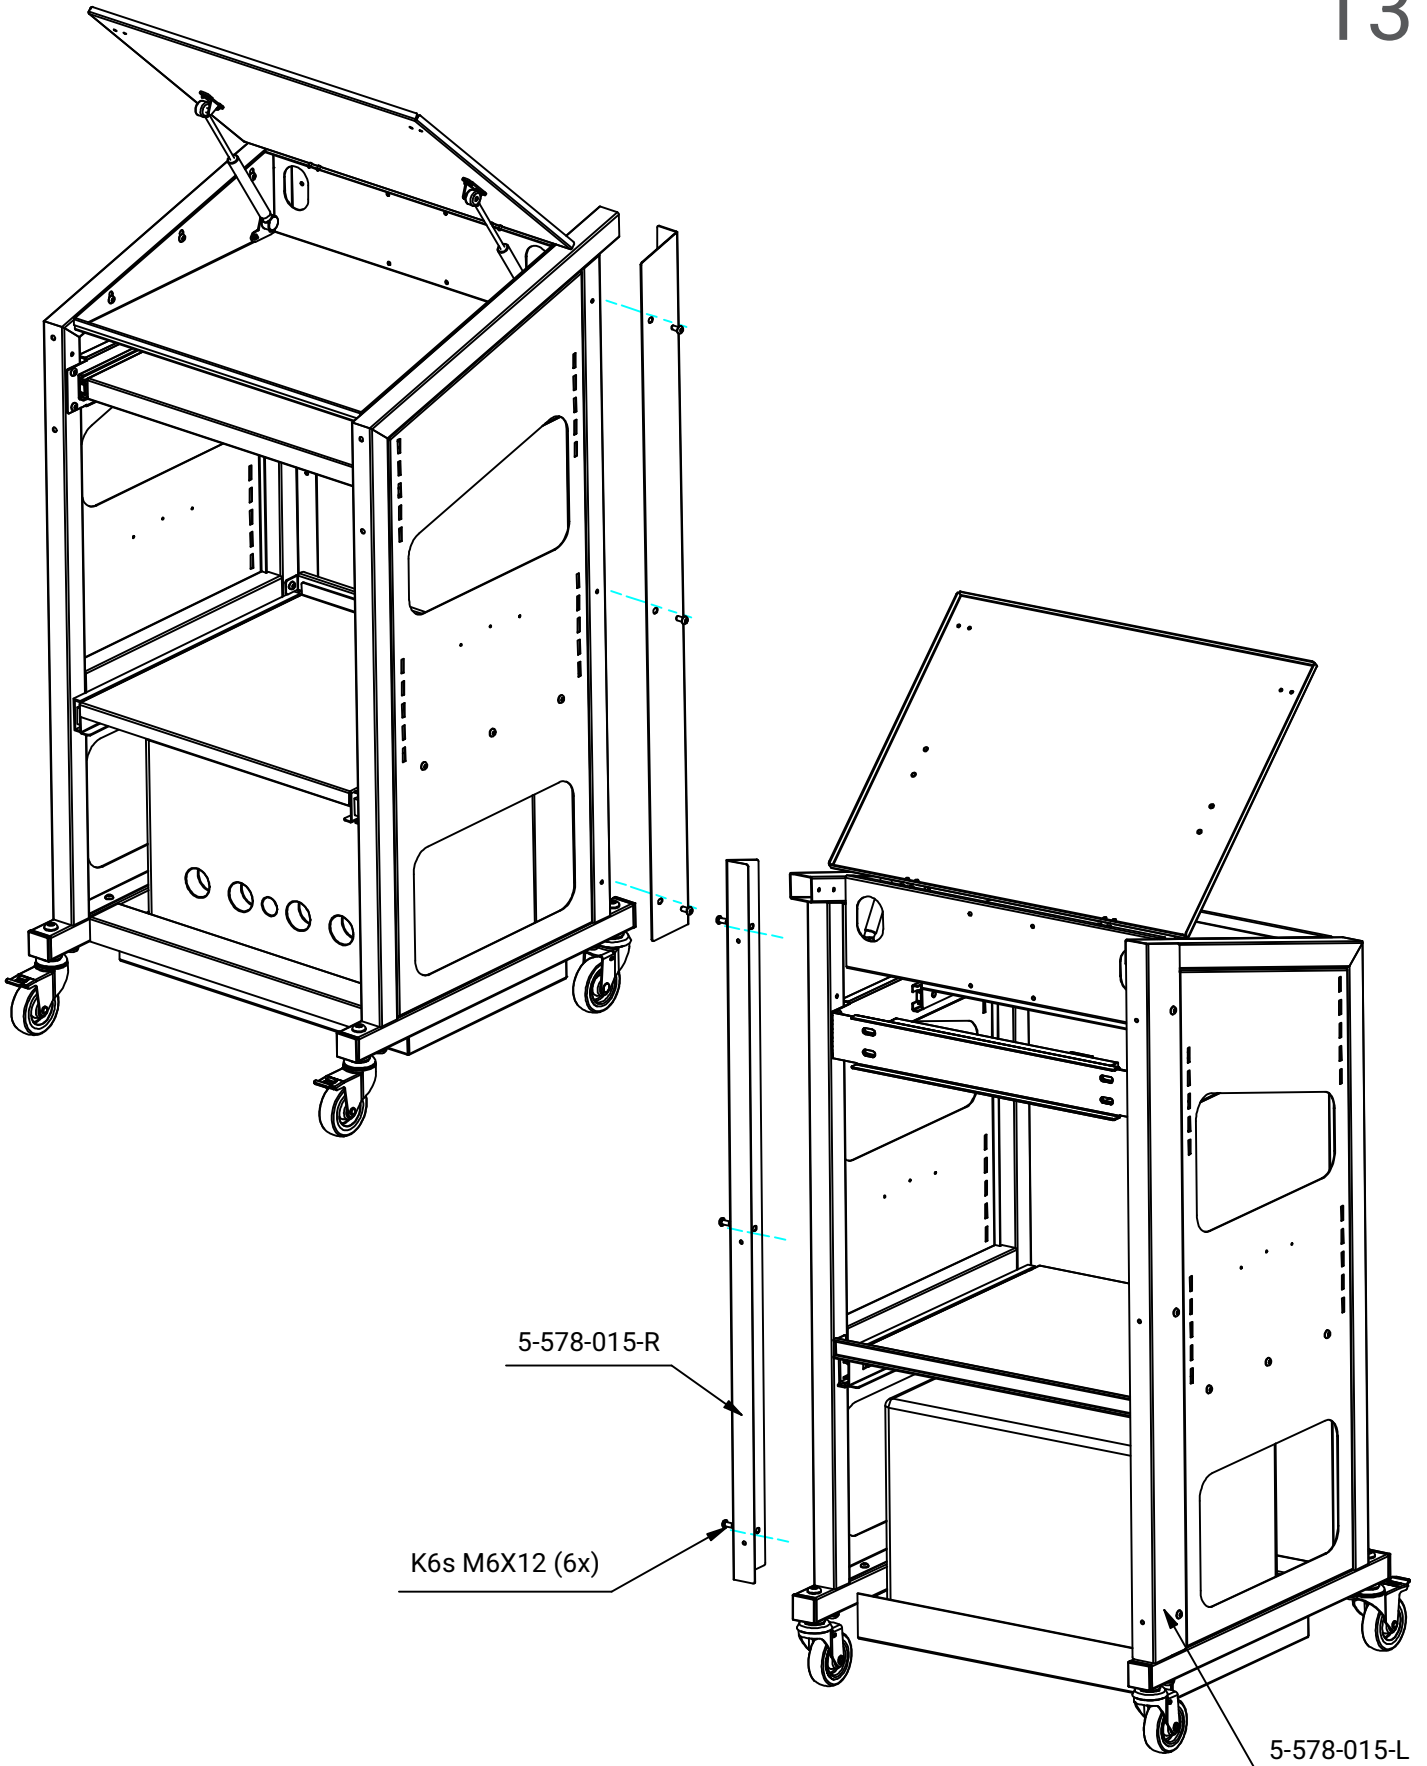


14


B-NIT 4,0x8 (4x)

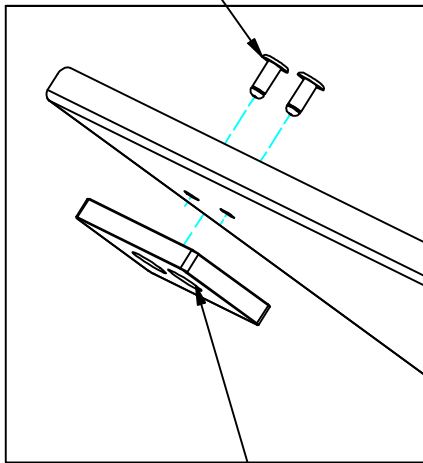


3-0103-0 (2x)

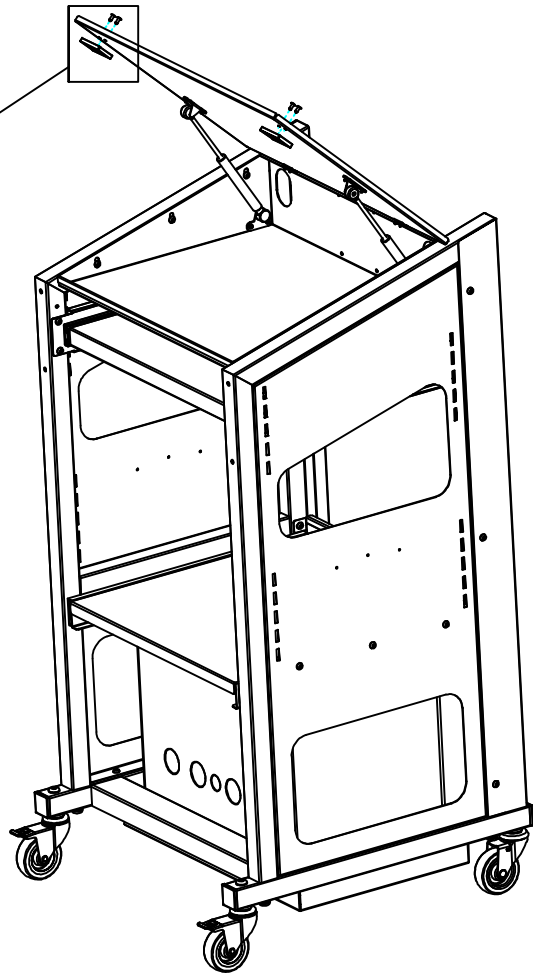

5-5250-001 (2x)

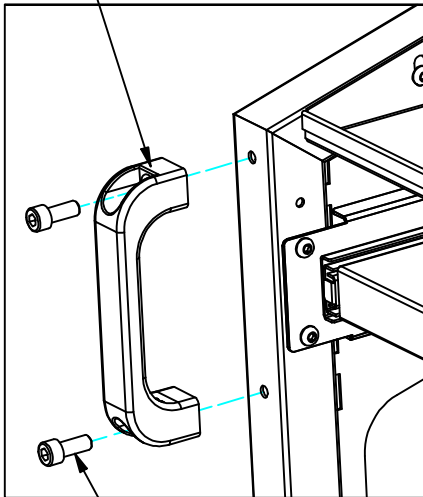


Mc6s M8X20 (4x)

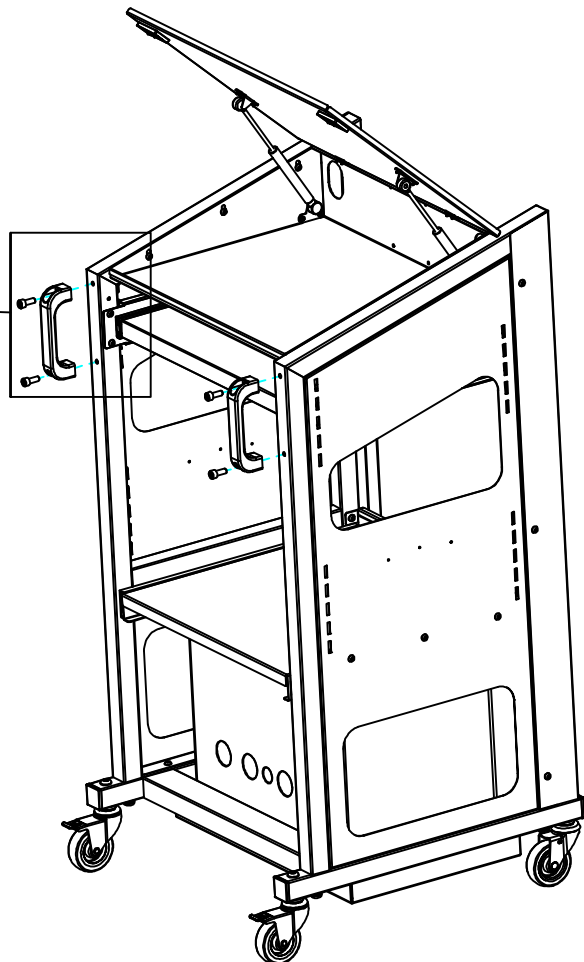


15




16

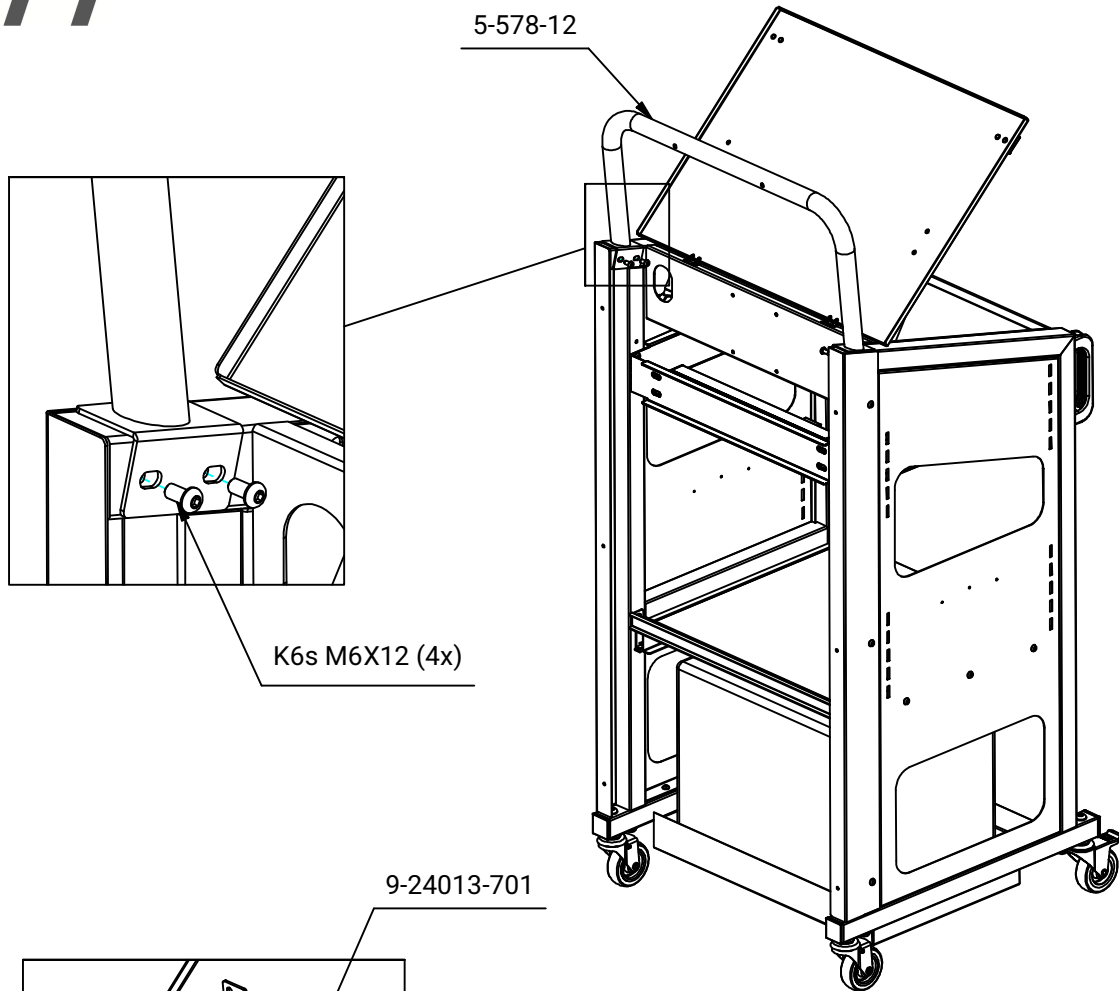


17

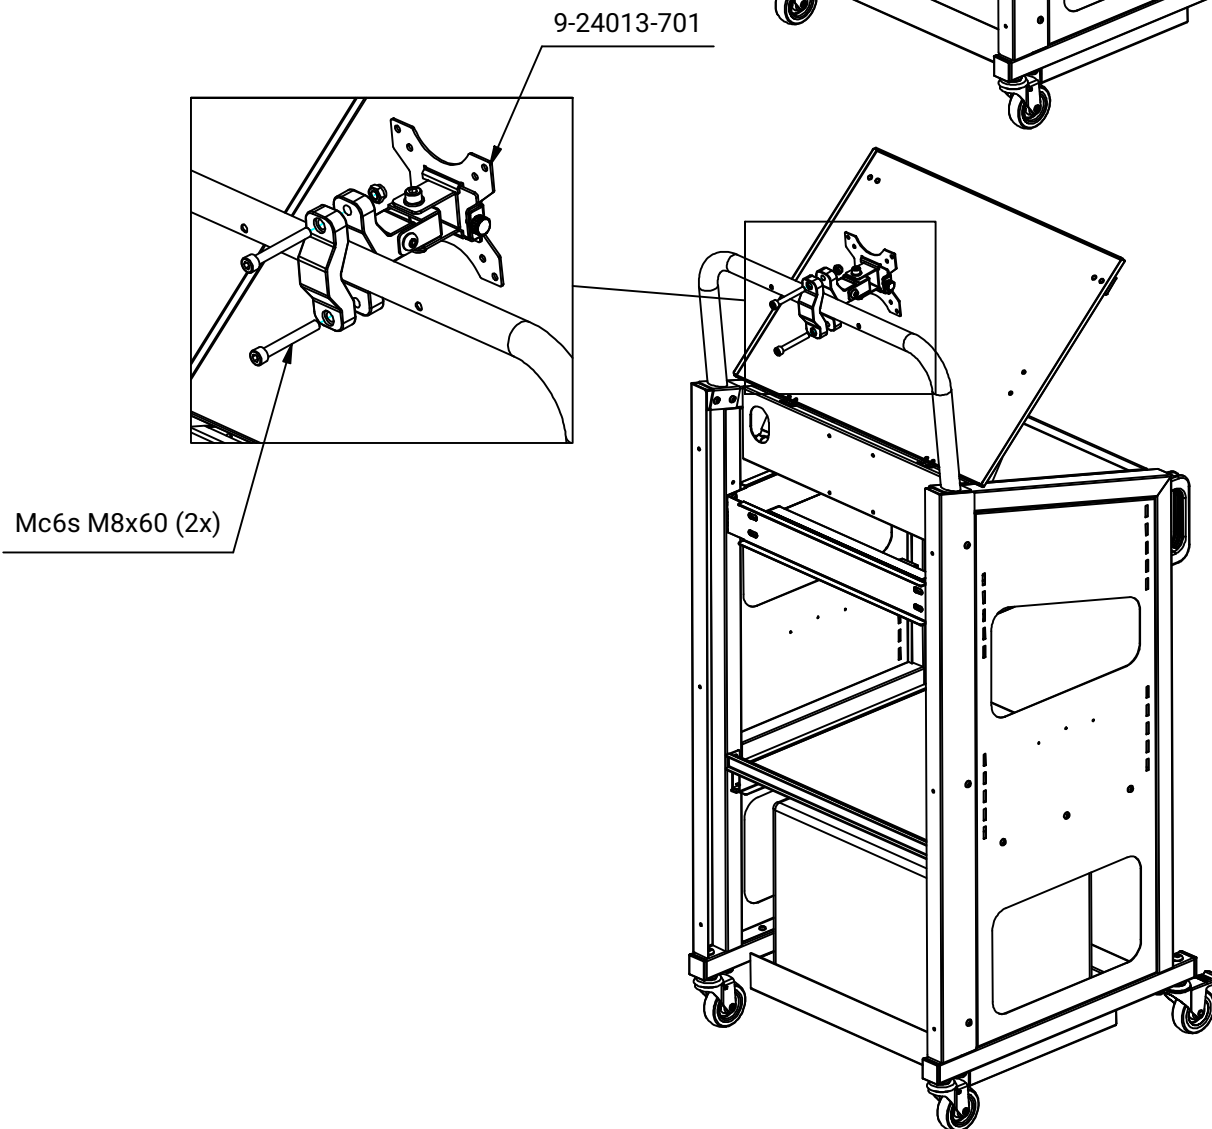


5-578-703 (6x)

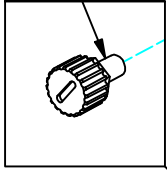

5-578-016

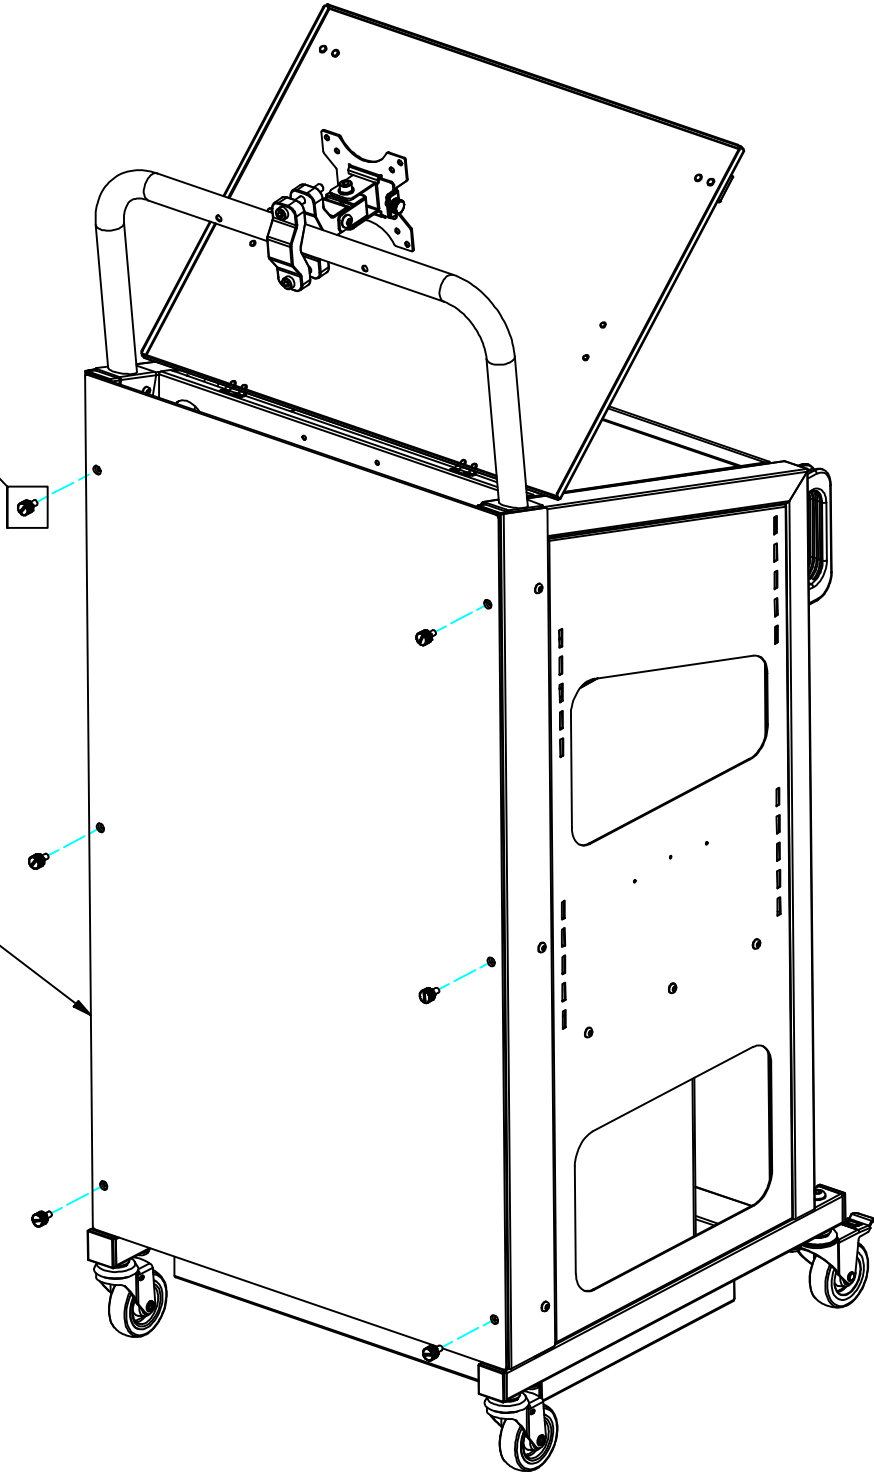

Accessories: Collision protection

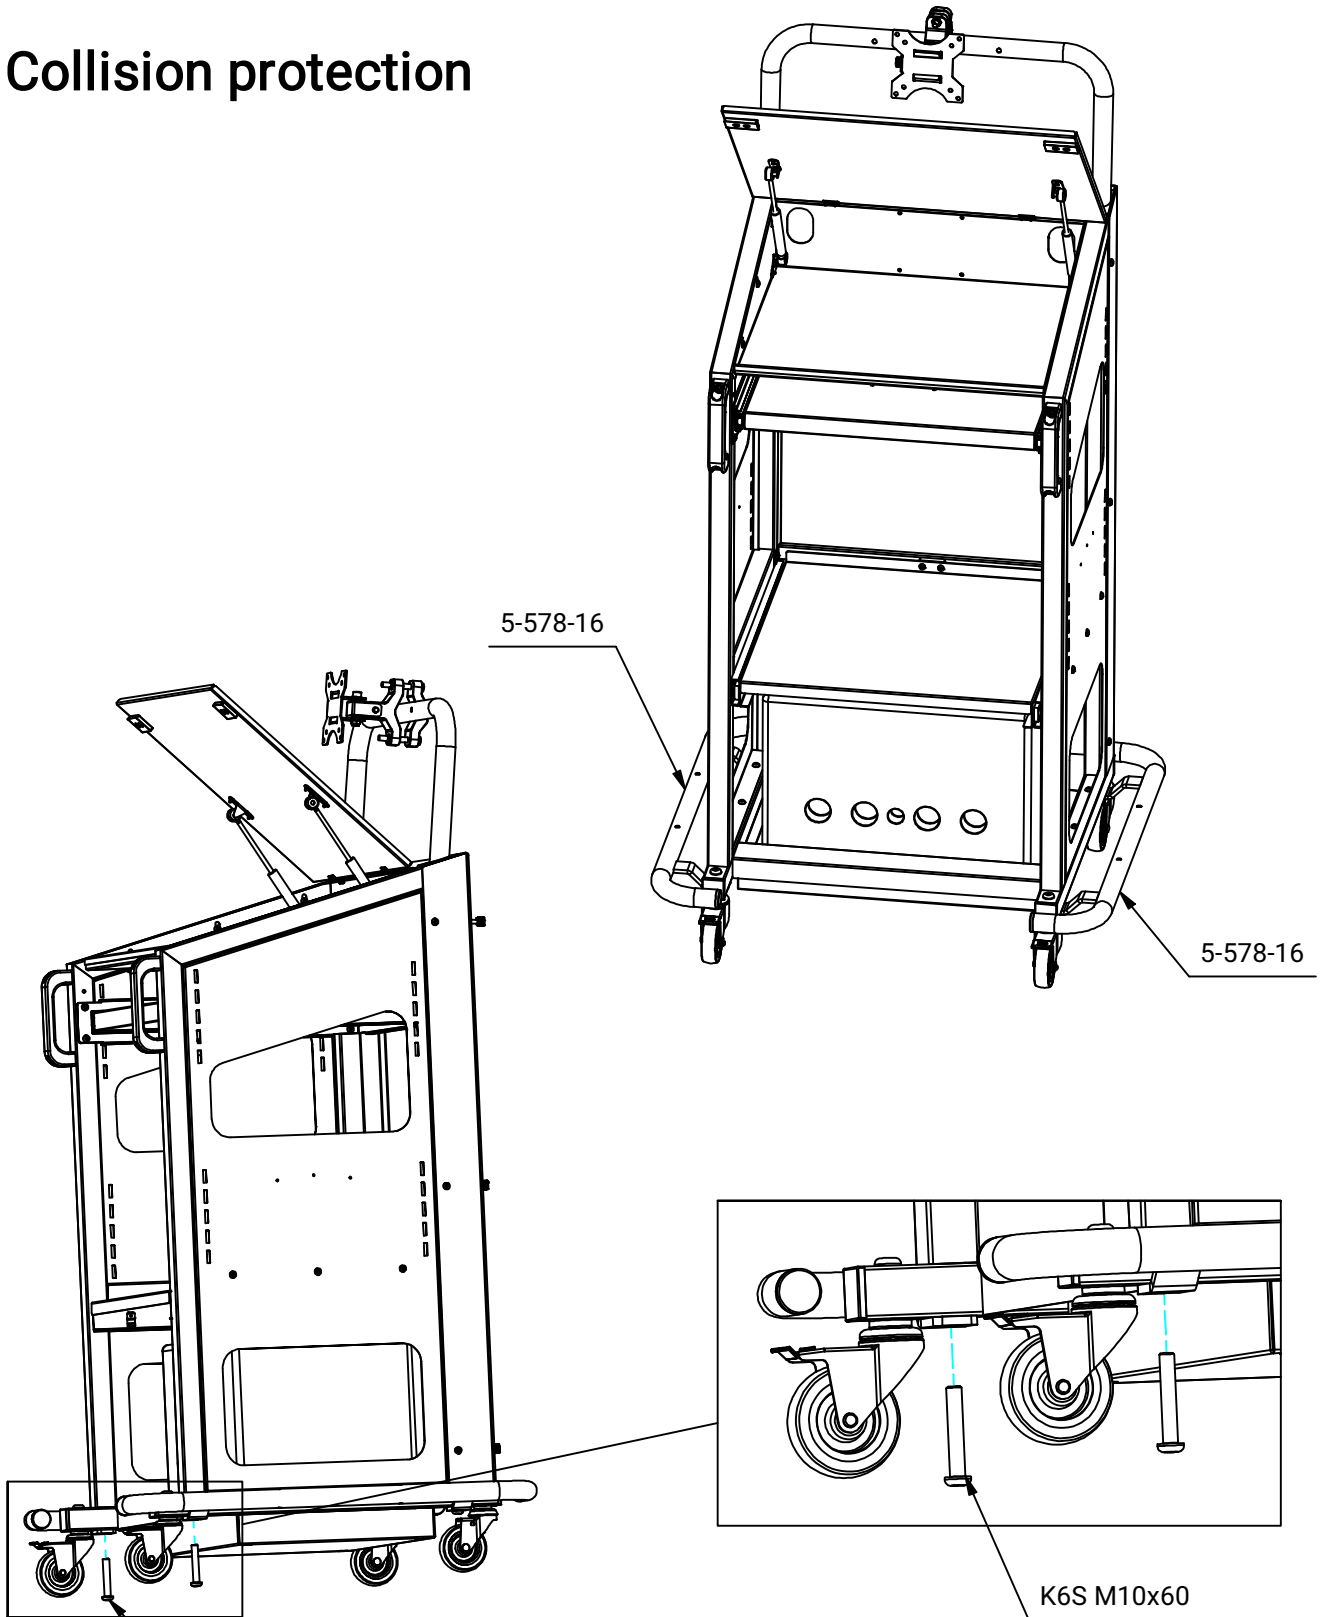

Loosen the existing screw, one side at a time.



